

One Sided Smokey Bear Display w/ extra rider

The single sided Smokey (72" x 35.6" at base)

has four "in-line" mounting holes.

Holes 1-3 get the 2" lag screw w/ washer. Hole 4 gets a 4" x 3/8" bolt.

If security lock is used, hole 4 gets the 3.5" security pin lock instead of 4" bolt.

(the lock goes on back of post)



Hole 1


Hole 2

Hole 3

The FDS has 4 mounting holes that receive 2" lag screws and washers

There are also 2 holes that mate up with the 2 holes in Smokeys arm. These receive the 5/16" x 3/4" machine screws and nylon lock nuts. The FDS goes in front of Smokeys arm.

*** It is important that everything is assembled before posts are set, or cemented, in the ground to make sure that everything lines up correctly.

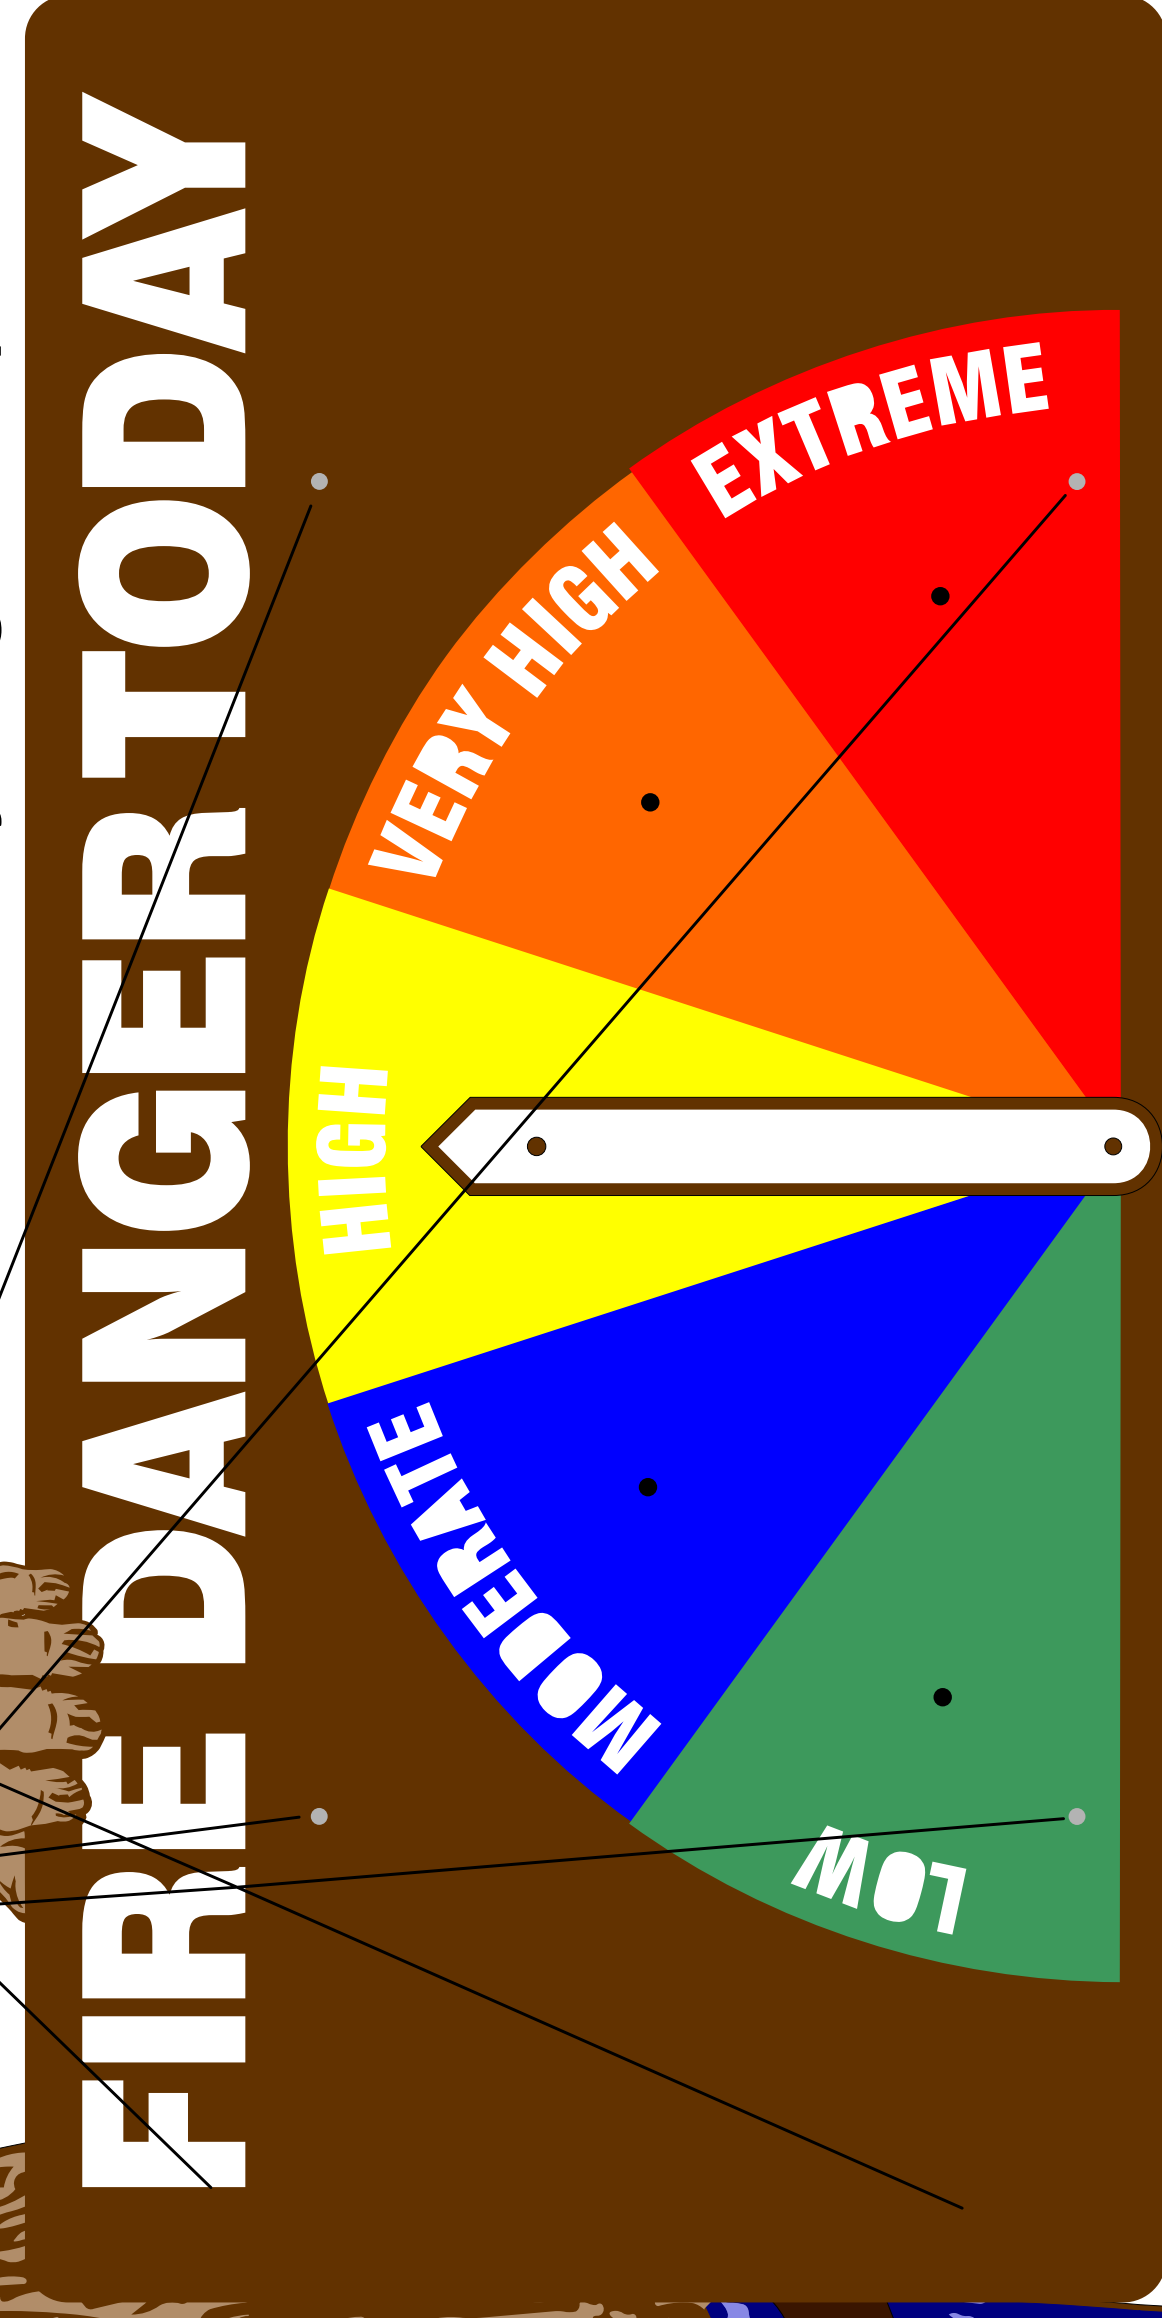

ONLY YOU CAN PREVENT WILDFIRES

FIRE RESTRICTIONS IN EFFECT

use 5/16" machine screws w/ nylon locknuts (provided) to attach brackets to Smokey

Hole 4
***4" x 3/8" bolt or Security lock here

(2) 2" lag screws

(2) 2.5" lag screws

36.5" x 9.5" (2x10) wood base

Each rider sign has 4 smaller mounting holes that get the #10 pan head 1.5" phillips screws

22" - 24" typical below grade

103" long post

81" long post

81" long post

19.5" on center

27.125" on center

76.5"

84"

1.25"

1.25"