



melodysusie

Aurora 1 LED UV
Nail Lamp
User Manual

Thank you for choosing MelodySusie! Please read this user guide carefully and keep it in an accessible location as you may refer to it later.

Items Included

1 x Aurora 1 LED UV Nail Lamp

1 x Power Cord

1 x User Manual

How to Use

Step 1: Connect the power cord to a grounded outlet.

Step 2: Press the timer button once for 60-second curing and twice for 45-second.

Step 3: To extended the time, simply press the button again.

Malfunctions and Solutions

Malfunctions	Reasons	Solutions
The nail lamp does not work well. / The beads do not turn on.	The power cord is loose or poorly connected.	Reconnect the power cord and make sure it is properly connected or contact Melodysusie customer service team to change the power cord.
	A light bead or a group of light beads don't turn on. The light bead is damaged.	Please contact MelodySusie customer service team to change to the new light beads.

Malfunctions	Reasons	Solutions
The nail lamp does not work well. / The beads do not turn on.	When pressing the button, the lamp doesn't have any response.	Please check whether the surface of the button has water or dust. Clean the nail lamp with a dry cloth.
The gel nail polish cannot be cured or dried completely.	Use the incompatible polish, such as regular nail polish, nail lacquer.	Please use LED, UV gel nail polish.
	The light to your nail surface is not enough.	Please adjust the angle of your nail surface to face the light straightly to ensure sufficient illumination.
	The light beads of nail lamp are aging.	Please contact MelodySusie customer service team to change for the new light beads.
	Insufficient curing time may result in incomplete curing of your gel nail polish. The curing time requirements vary from different gel polish brands and colors.	Please try to extend the curing time appropriately until the nail surface is completely cured. For best results, avoid moving your hand too much until curing is complete.
	The gel polish is a bit tacky after drying.	Please wipe your nail surface with a gentle cleanser or alcohol prep pads.

Important Safety Information

* Please be sure to read the following safety instruction to avoid potential hazards that could result in personal injuries or damage to the device.

1. Make sure your outlet supplies correct power voltage to avoid damage to the lamp.
2. Please do not unplug the power cord when the machine is working to avoid potential damage to the lamp.
3. Do not use the lamp's top as a nail table, as this can negatively affect the performance.
4. If you don't use the nail lamp for long time, please turn off the power switch and store it properly to extend its lifetime.
5. Do not disassemble the device. Doing so could be dangerous and result in voiding warranty conditions. If you require any technical support, contact us at service@melodysusie.com.
6. If the device or the power cord is damaged, it should be repaired or replaced by MelodySusie or another authorized professional.
7. Children under 18 years old should not use this device without parental consent and supervision.
8. Please turn off the device and unplug the power cord before cleaning. Use cloth with neutral detergent to clean the surface of machine.

Specifications

Input: 5V 1A

Beads Number: 4

Material: ABS

Nail Lamp Size: L150*W87*H56mm(5.91*3.43*2.2inches)

Nail Lamp Weight: 118g (0.26lb)


Wavelength: 365nm+395nm

Email: service@melodysusie.com

Website: www.melodysusie.com

Warranty and Customer Service

MelodySusie offers a 6-month limited warranty on quality-related issues. **Please apply for your extra 6-month warranty extension and download the user manual in other languages by registering on www.melodysusie.com if needed.**

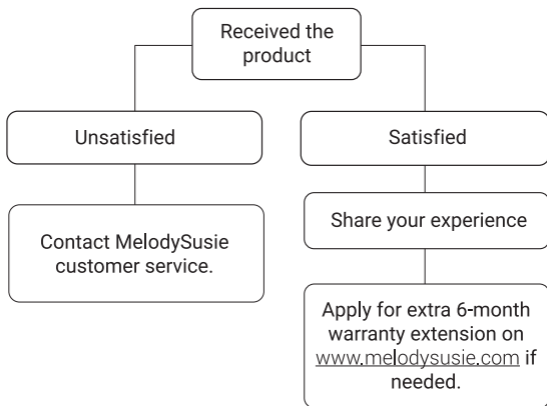

MAKE BEAUTY A NEW SMART



service@melodysusie.com



<http://www.melodysusie.com>