


EASY CRUISE

UNIVERSAL FIT


- Made of NYLATRON resin
- Wear & Impact resistant Nylon
- Light weight and rust proof

Engage by rotating clockwise over break lever with thumb

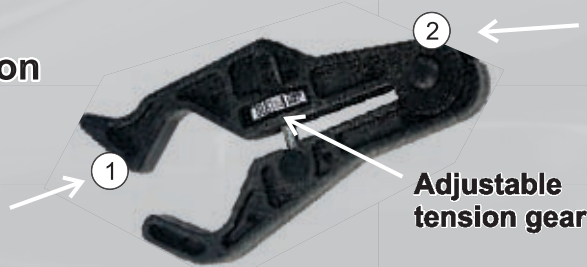


Engage by pressing down with index finger


Adjustable tension gear

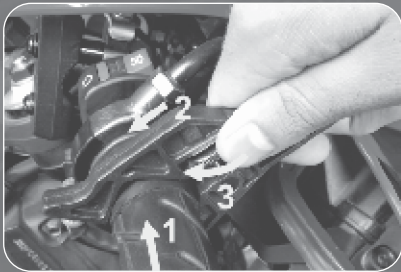

1: Slip on silicon ring and then slip on EASY CRUISE over the silicon ring from top or side of the throttle. Make sure front bottom flat surface of EASY CRUISE should cross over the front side of the break lever by few mm. Adjust tension gear for suitable Friction.

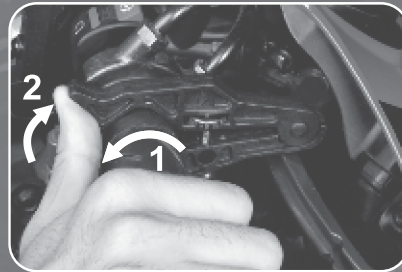

2: Reach desired speed and engage EASY CRUISE by rotating clockwise to rest over the break lever.

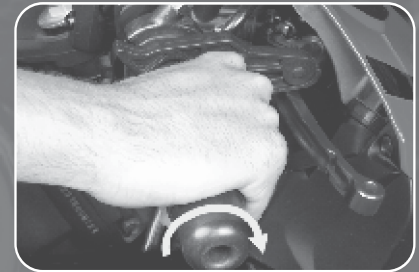

3: Disengage by twisting the throttle lock clockwise or forward as you normally reduce the speed.

WARNING:

1. DO NOT take your hands off the handlebars
2. DO NOT use in traffic or congested areas
3. DO NOT use when precise speed changes are required
4. DO NOT use if you are an inexperienced rider
5. DO NOT use with any other cruise control device
6. DO NOT use until you are thoroughly familiar with the operations of the throttle control
7. DO NOT use EASY CRUISE if front bottom flat surface (In the direction of the break lever when installed) does not sit properly over the break lever. Front bottom flat end surface should cross over the front side of break lever by few mm for maximum safety while riding. Else Easy CRUISE can impede your breaking motion and it can cause serious injury or death
8. DO disengage EASY CRUISE throttle control when going downhill

DISTRIBUTED BY : www.gearscanada.com