



## Rear Wheelhouse Liner Replacement (ZL1)

### Removal Procedure

1. Remove the tire and wheel assembly. [Tire and Wheel Removal and Installation](#)

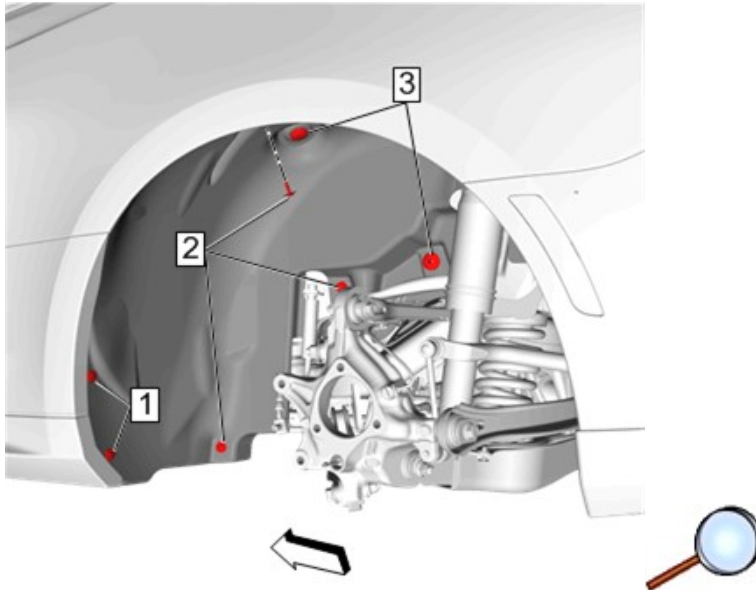


2. Rear Wheelhouse Liner Retainer(1)»Remove[2x]
3. Rear Wheelhouse Liner Screw(2)»Remove[3x]
4. Rear Wheelhouse Liner Retainer(3)Remove[2x]

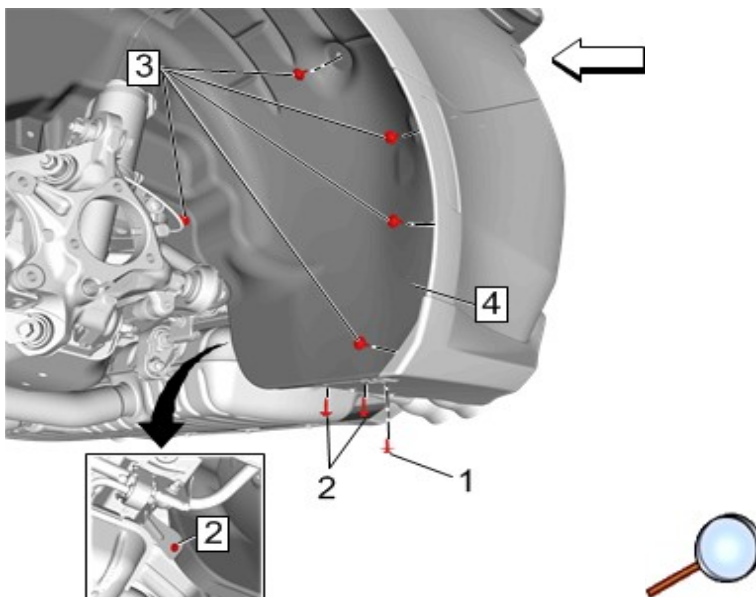

5. Rear Wheelhouse Liner Screw(3)»Remove[5x]
6. Rear Bumper Fascia Bolt(2)»Remove[3x]
7. Rear Bumper Fascia Screw(1)»Remove
8. Rear Wheelhouse Liner(4)»Remove

## Installation Procedure

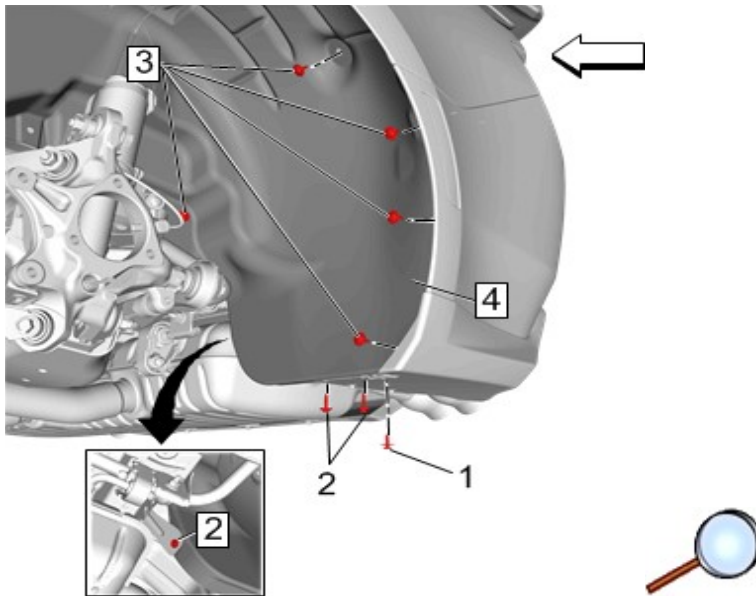


1. Rear Wheelhouse Liner(4)»Install

**Caution:** Refer to [Fastener Caution](#)

2. Rear Wheelhouse Liner Screw(3)»Install and tighten [5x]**2.5 N•m (22 lb in)**

3. Rear Bumper Fascia Bolt(2)»Install and tighten [3x]**5 N•m (44 lb in)**

4. Rear Bumper Fascia Screw(1)»Install and tighten **2.5 N•m (22 lb in)**

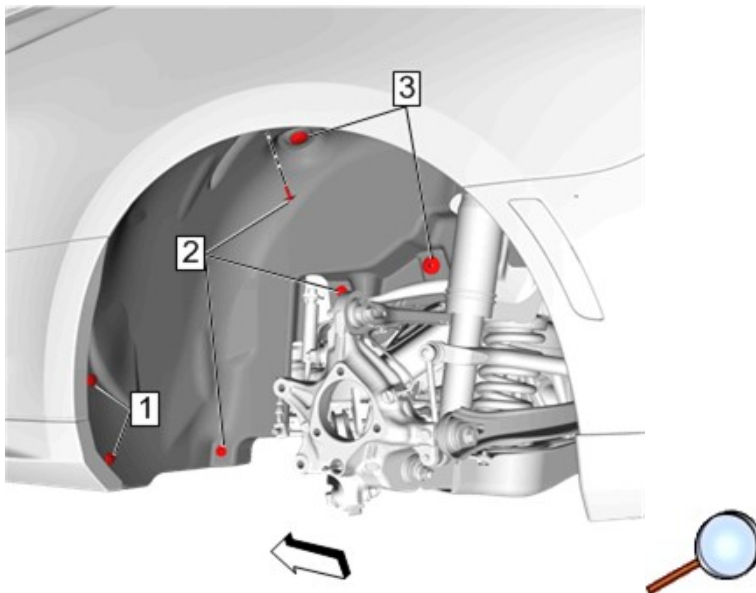

5. Rear Wheelhouse Liner Retainer(1)»Install[2x]

6. Rear Wheelhouse Liner Screw(2)»Install and tighten [3x]**2.5 N•m (22 lb in)**

7. Rear Wheelhouse Liner Retainer(3)»Install[2x]

8. Install the tire and wheel assembly. [Tire and Wheel Removal and Installation](#)