

Nice job reading the instruction manual cover-to-cover!

Here are a few extra tips to keep you & your Formula Pro® Advanced happy.



Push the drip tray **firmly** against the base to make sure it fits securely. Trust us, you definitely don't want it to fall off and spill the entire bottle of formula you just made.



The stirring wheel snaps firmly to the axle. It's OK to give it a strong pull to remove it. Don't worry, you won't break it.



Keep your Formula Pro® Advanced sparkling clean!

babybrezza®

formula pro®
advanced

Instructions for set-up, use and cleaning



Limited 1-Year Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The limited warranty is valid only on products bought through authorized resellers. Buying through an unauthorized reseller. This warranty is available to consumers only. You are a consumer if you own a Baby Brezza Formula Pro that was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza Formula Pro will be free of defects in material or workmanship under normal home use for one year from the date of original purchase. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza Formula Pro should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it. To obtain warranty services, please contact Customer Service.

Customer Service

If you are experiencing problems with your BabyBrezza Formula Pro Advanced, visit babybrezza.com/pages/international to locate your local customer service representative.

Distributed in Australia
by CNP Brands
82 Maribyrong Street,
Footscray, VIC, 3011
Customer Service 1300 667 137
E: info@cnpbrands.com.au
W: www.cnpbrands.com.au

Distributed in New Zealand
by Wainhouse Distribution
2-6 Argyle St. Morningside,
PO Box 41-014
St Lukes, Auckland, New Zealand
Customer Service 0800 567 5000
E: helpline@wainhousedist.co.nz

This product may be covered under one or more of the following including U.S. Patent No. 8,584,901, Canada Patent No. 2,842,603, China Patent No. CN103874441, Australia Patent No. 2011374309, Spain Patent No. ES2473790B2 and pending patent application(s) in the U.S. and other countries.


babybrezza.com

© 2020 Baby Brezza Enterprises LLC

Please read fully to ensure your Formula Pro® Advanced works properly every time.

INSTRUCTIONS FOR SAFE USE

- The appliance must not be immersed in liquid.
 - Household use only.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - Children should be supervised to ensure that they do not play with the appliance.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
- The food should not be heated for too long a period.
 - The heating element surface is subject to residual heat after use.
 - In addition, instructions shall also be available in an alternative format such as on a website or on request from the user in a format such as a DVD.

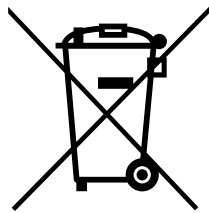

This marking indicates that products should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or Contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

WARNING:

- Set-up & cleaning is critical to the function of your Formula Pro® Advanced. Please follow all instructions properly.
- For infants less than 6 months old, always use distilled or boiled water cooled to room temperature.
- Never pour boiling/hot water in water tank. Or use bottled water suitable for infant formula preparation.
- Unboiled tap water and/or unsterilized baby bottles can potentially lead to adverse effects for the health of your baby.
- Only prepare one bottle at a time, feed immediately & follow all instructions carefully.
- Do not keep leftover formula mix. If your child was born premature, with low birth-weight or is immune deficient, please consult your pediatrician before using this machine.

TECHNICAL DATA

Supply Voltage: 220-240V ~ 50/60Hz


Model: FRP0046

Current: 2.5A

Heater Power: 250W

Motor Power: 20W

Save these instructions

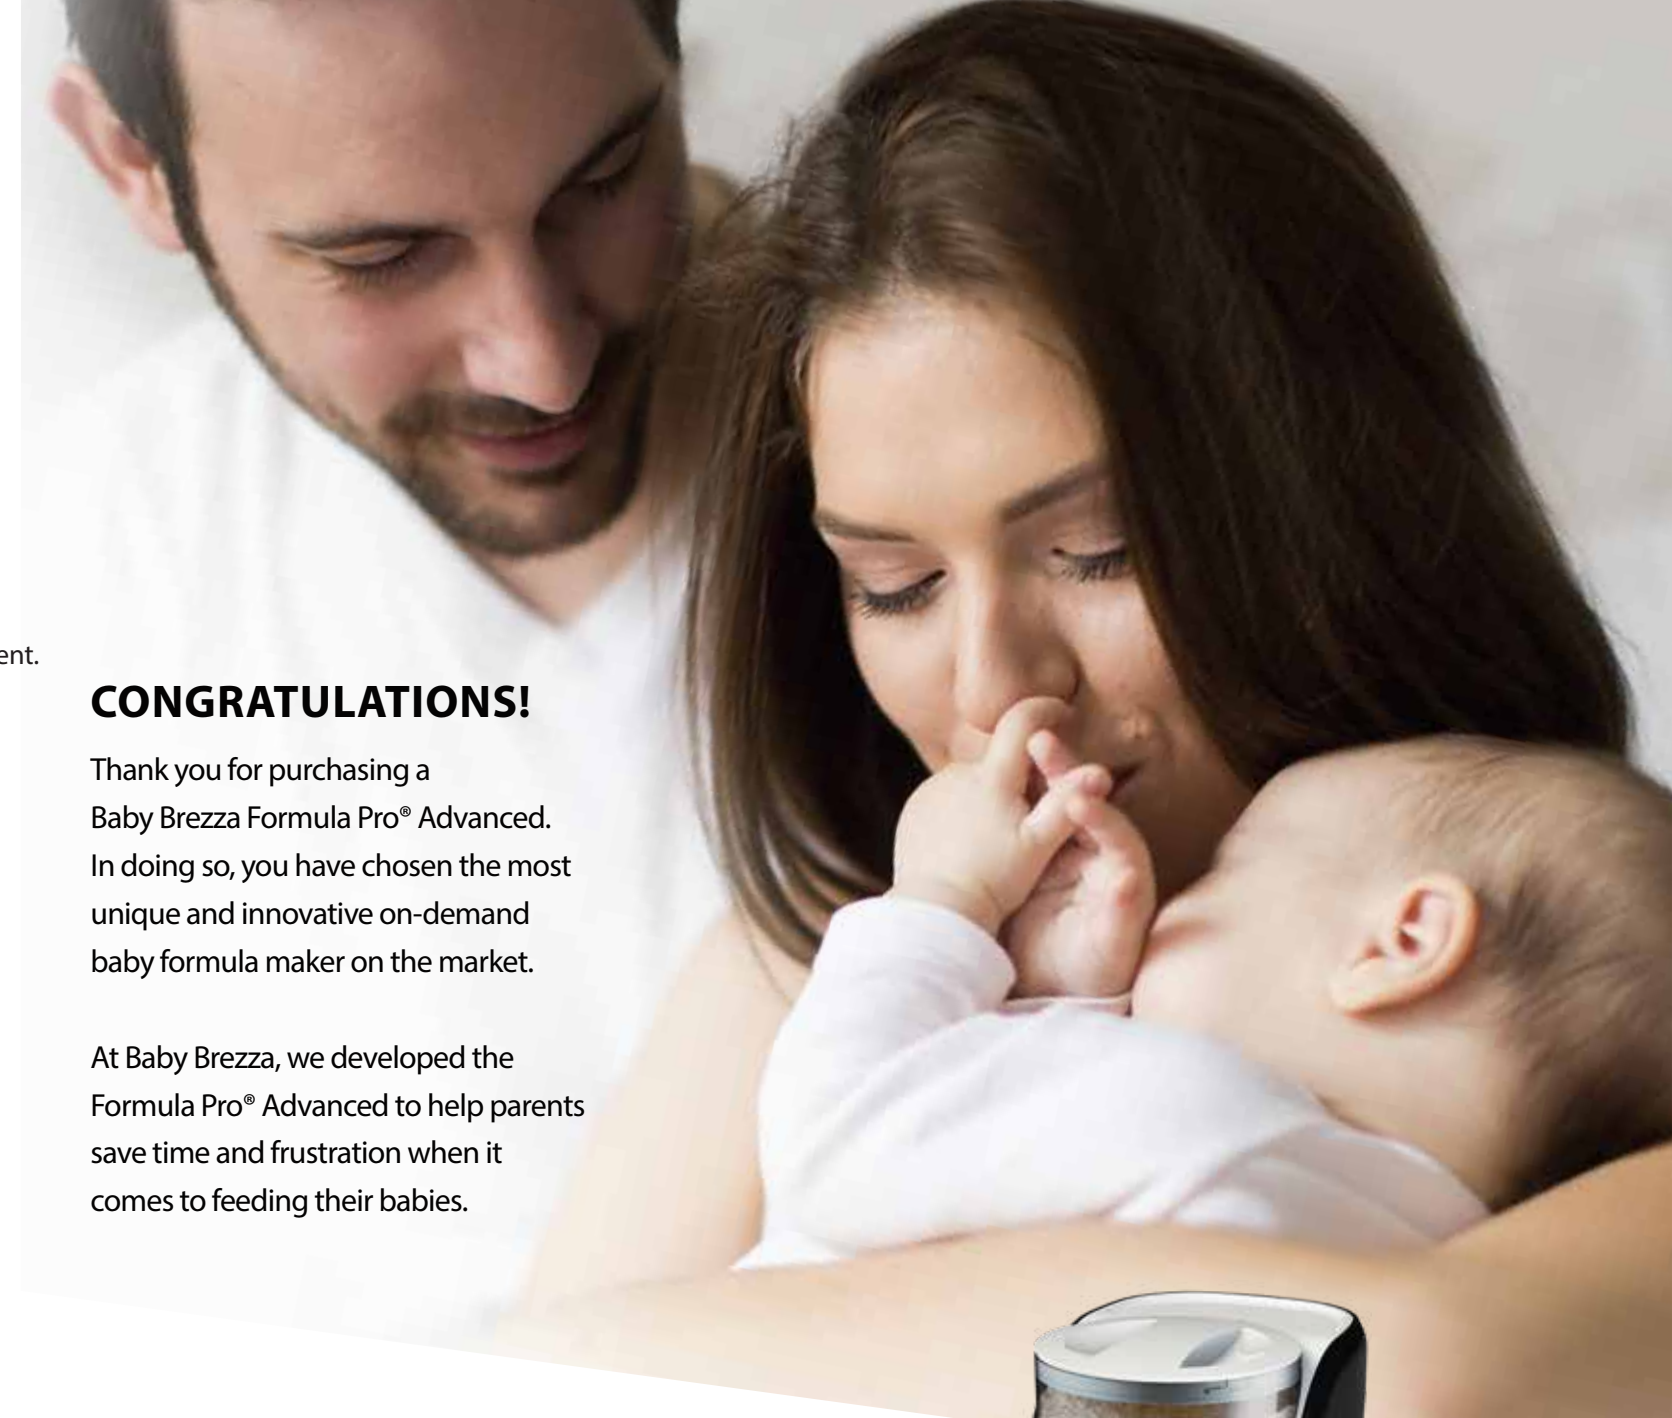

CONGRATULATIONS!

Thank you for purchasing a Baby Brezza Formula Pro® Advanced. In doing so, you have chosen the most unique and innovative on-demand baby formula maker on the market.

At Baby Brezza, we developed the Formula Pro® Advanced to help parents save time and frustration when it comes to feeding their babies.

Please read & follow all instructions carefully to get the most out of your Formula Pro Advanced®



Attention: Don't take anything apart yet.
Follow these steps before doing anything else.

- Place the Formula Pro® Advanced on the counter or other level surface and turn it around so the back is facing you.
- Remove the water tank from the back of the machine, wash it with warm soapy water and rinse thoroughly, then dry.
- Fill water tank with bottled water suitable for infant formula preparation, or boiled water, cooled to room temperature.
- Place water tank back on base, turn the machine around so the front is facing you and then plug it in.
- Press the power button and the machine will beep once to tell you it's powered on.
 You'll also see the LCD display turn on.

Now let's rinse the inside of the machine.

- Get a cup or bottle larger than 300ml and place it under the funnel.
- Press the "ounce" button on the control panel repeatedly until the LCD screen says "300ml"
- Now press the "water only" button on the control panel. The Formula Pro® Advanced will dispense 300ml of water.
- Dispose of the water dispensed, or use it to water your plants.

Now you can unplug the machine, remove all the parts shown on the next page and set-up your new Formula Pro® Advanced.

- Get familiar with the part names on the next page, then proceed with the set-up on the following pages.

Formula Pro® Advanced - parts

Disassemble and wash all parts (except the base) and dry thoroughly. Assemble as shown on pages 5 & 6.



Set-up instructions

Set-up and cleaning videos available at babybrezza.com/video.



1

After hand washing these parts, make sure they are all **completely dry** before assembly.



2

Assemble the **funnel & funnel cover**. Then insert funnel assembly into funnel compartment by sliding it up, then in.



3

Place the **axle** on the base as shown.



4

Now place the **powder container** on the base with the printed markings facing you.

Set-up instructions continued



5

Place the **measuring wheel** into the powder container, fitting it over the axle with the flat side facing down. Make sure the holes in the measuring wheel are in the same position as shown above.



6

IMPORTANT

1. Place the front edge of **locking cover** in the recess in the inside/front of the powder container, **UNDER THE TAB**.
2. Fit hole in locking cover over top of axle. It will not lay completely flat.



7

Make sure the **locking cover & measuring wheel** look like this when assembled.



8

Now place the **stirring wheel** on the axle and push down firmly until you hear a click. Make sure the stirring wheel is snapped in place and does not lift up easily.

Now you're ready to add powder and make your first bottle.

Preparing your first bottle



1 Carefully pour formula powder into the powder container. Wipe up any spilled formula powder.



2 Make sure that the powder is filled between the MIN & MAX lines on the powder container.



3 Place the powder container lid on the powder container and turn clockwise until it stops.

This will engage the safety switch & lock the powder container onto the base.

To remove the powder container, turn the lid counter-clockwise.




4 Fit the drip tray on the base to fit your bottle height. Adjust it so the mouth of the bottle is as close to the funnel as possible.

Push the drip tray firmly against the base to set it in place.

Now let's review the controls on the next page.

Formula Pro[®] Advanced - controls & operation

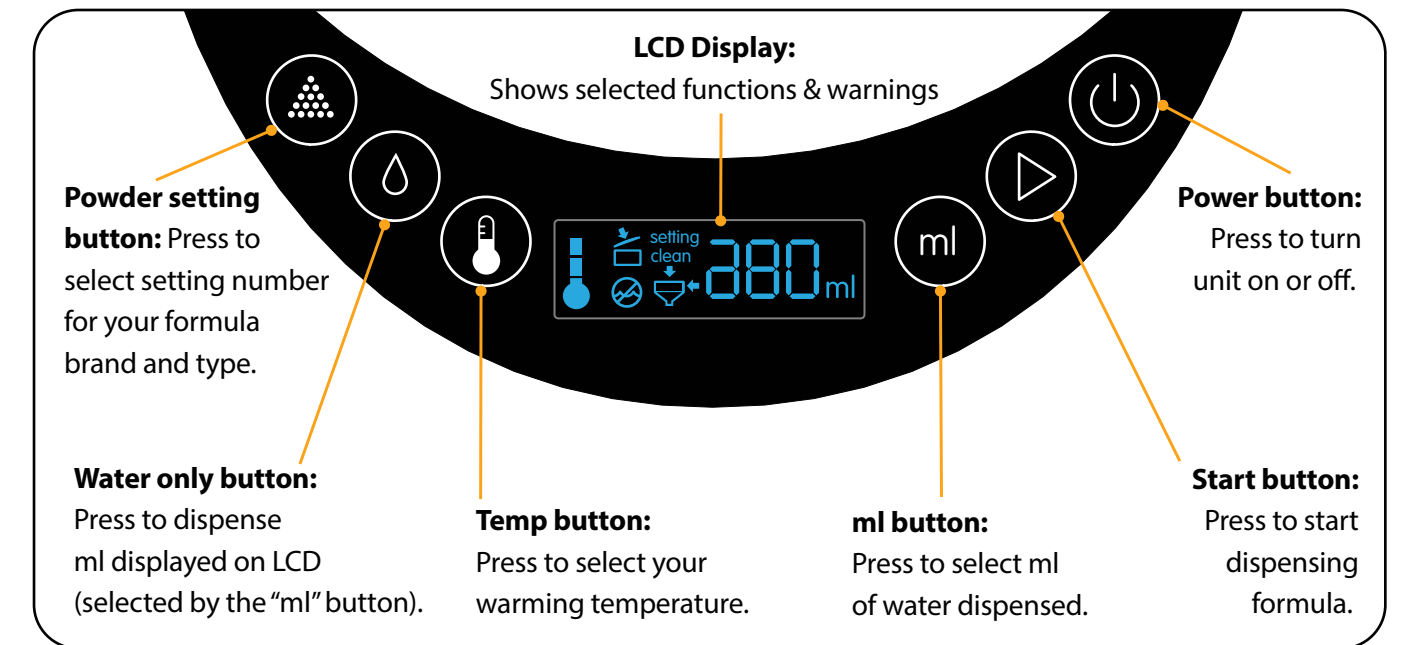

Temperature indicator symbols



= Room temperature




= Body temperature



= Slightly warmer than body temperature

Powder & water settings



Powder Setting Indicator - Use the "powder setting" button to choose your powder setting 1-10.



ml Indicator - Use the "ml" button to choose how many ml of water to mix with powder. 60, 30, 90, 120, 150, 180, 210, 240, 270, 300 ml of water are available. There is no option to make a 30ml bottle.

Warning symbols

The Formula Pro[®] Advanced will not run if any of these symbols are illuminated on the LCD display.



Powder Lid Open - The powder container lid is not closed completely or is not on the powder container correctly. Close the powder container lid completely and correctly when this symbol is illuminated.



Low Water - Refill water tank when this symbol is illuminated.




Clean Funnel - This symbol will illuminate after every 4 bottles are made. When this symbol is illuminated, remove funnel assembly, wash, and dry completely, then place it back into the base. See Page 11 for details.



Funnel Out - Funnel is removed or not inserted completely. Make sure the funnel is pushed all the way in when this symbol is illuminated.

Preparing your first bottle continued


Make sure your Formula Pro® Advanced is plugged in.

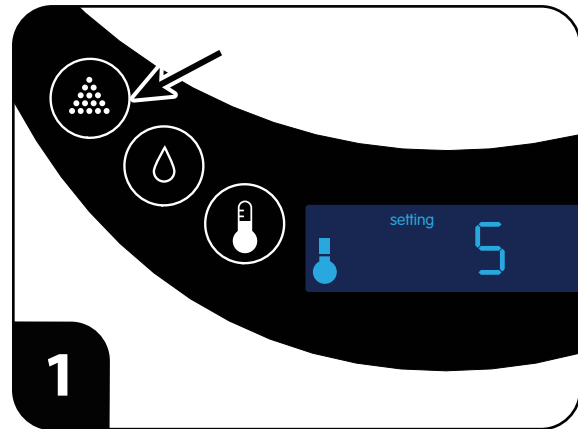

Press the “powder setting” button repeatedly to select your setting 1 - 10.

It is essential that you choose the correct setting for your formula brand and type.


Go to babybrezza.com/FPA to find the correct setting for your formula powder.

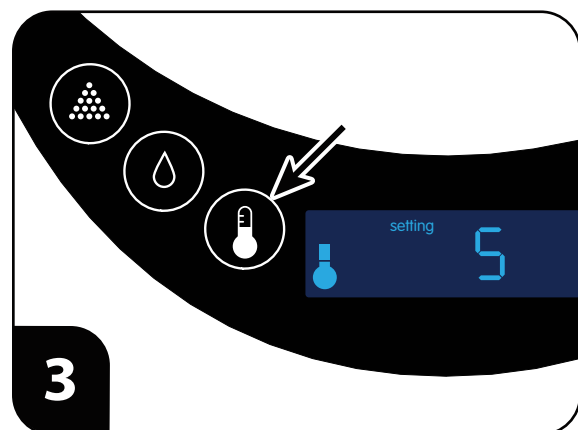

Press the “temp” button to select temperature.


- = Slightly warmer than body temperature
- = Body temperature
- = Room temperature

The temperature indicator will flash when heating and will stay solid when the set temperature is reached.

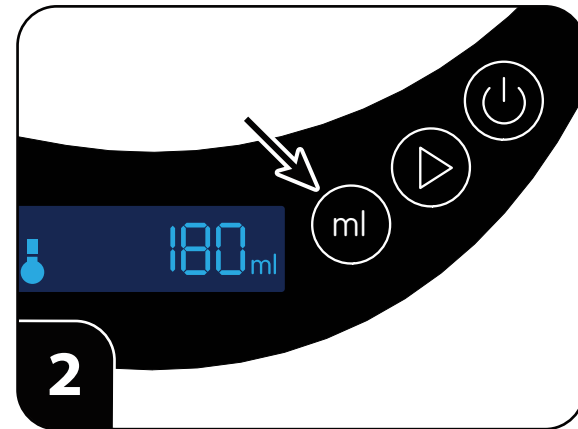

Press the “ml” button repeatedly to select the ounces of water you want to dispense.

ml size indicates water volume only. It does not include the volume of powder added when mixing.

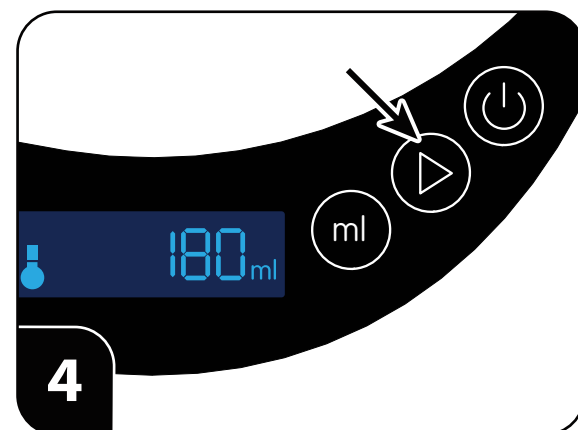

Press the “start” button to dispense formula.

The formula pro will remember the setting & ml size even if it is unplugged. You do not need to select a powder setting every time you make a bottle. You can always change the ml size or powder setting by pressing the buttons again.

Preparing your first bottle continued



The Formula Pro® Advanced will dispense powder & water together, then stop automatically when dispensing is complete.

Some clumping may occur with some formula powders inherently difficult to mix with water.



Check for clumps and shake or stir the bottle if necessary. Check temperature and feed your baby.



Check the level of mixed formula.

PLEASE NOTE: The level will appear higher than the ml size selected because of added powder volume and/or variance in bottle markings.

Example: 120ml of water plus powder volume is approximately 135ml depending on your formula powder type.



Refill the powder when the arms of the stirring wheel become visible. This is very important for accurate formula measuring.

Daily Cleaning Instructions

It is **EXTREMELY IMPORTANT** to clean the funnel after every 4 bottles made. This will keep your Formula Pro® Advanced dispensing accurately.

Always make sure Funnel & Funnel cover are **COMPLETELY DRY** before re-assembling.



Remove Funnel & Funnel Cover by pulling out and down.



Wash Funnel & Funnel Cover with warm, soapy water & rinse well.
Dry completely before re-installing.



Wipe the powder-dispensing hole on the underside of the powder container using a dry paper towel or soft dry cloth.

PLEASE NOTE: You don't need to remove the powder container or the powder container parts for daily cleaning.



Wipe any spilled powder off the base.

Monthly Cleaning Instructions

Once a month, give your Formula Pro® Advanced a thorough cleaning.

Please watch set-up and cleaning videos at babybrezza.com/video.



Hand-wash all parts shown above with warm soapy water, rinse well and dry thoroughly.



Hand wash water tank with warm soapy water, rinse well and dry thoroughly.

Monthly Descaling Instructions

You can leave the formula powder in the powder tank during the descaling process.

To prevent mineral scale on the water heater inside your Formula Pro® Advanced, follow these easy steps:

1. Remove the water tank, empty it and fill it with 600ml distilled vinegar & 600ml of purified water.
2. Place the water tank on the base of the machine & place a cup larger than 300ml under the funnel.
3. Select "300ml" with the "ml" button, then press the "water only" button to dispense.
4. Empty the cup, place back under the funnel, then press the "water only" button again to dispense another 300ml.
5. Now unplug the machine, remove the water tank, and empty it. **Let the machine sit for 4 hours.**
6. Wash, rinse and fill the water tank to the max line with purified water, then place it back on the base.
7. Plug in the machine, place a cup to catch 300ml water and use the "water only" button to run an 300ml cycle. Dispose of the water dispensed in the cup and then repeat this step to run the entire tank of purified water through the machine. When the "Low Water" indicator turns on, you're done rinsing.
8. Refill the water tank with purified water and return to normal use.

Long Term Storage Instructions









It is **EXTREMELY IMPORTANT** to clean the machine and remove all formula powder residue before storage.

If you're going to store your Formula Pro® Advanced for later use, or will not use it for a while, please follow the instructions below:

1. Remove the powder container parts, funnel, funnel cover, drip tray and water tank from the base.
2. Wipe the base with a clean damp cloth and make sure to remove any and all formula residue. Dry the base well.
3. Empty the powder container, wash all powder container parts, dry thoroughly, reassemble, & reinstall on the base.
4. Follow the Monthly Descaling Instructions on page 12, steps **1-7 only**. Do not remove or refill the water tank after step 7.
5. Now place a cup to catch 300ml water under the funnel, then **press & hold** the "water only" button for 5 seconds. Water will dispense continuously until the machine is completely empty, then stop automatically.
6. Unplug the machine, remove the funnel, funnel cover and water tank, dry them both thoroughly and reinstall them on the machine.
8. Your machine is now ready for storage. Pack the machine in its box, or enclose it in a bag to keep it dust free.

Error Codes

In the unlikely event of electrical component error or interruption during operation, the following codes will be displayed on the LCD screen. Pressing and holding the "stop" button will clear the code and operation should return to normal. If the code returns or is unable to be cleared, please contact Baby Brezza Customer Service.

-  Indicates an operation error of the motor that turns the powder container parts. Contact local Customer Service.
-  Indicates an operation error of the motor sensor that detects the rotation of the measuring wheel. Contact local Customer Service.
-  Indicates an operation error of the water flow meter that measures the water volume output. Contact local Customer Service.
-  Indicates an operation error of the temperature sensor that measures water temperature. Contact local Customer Service.
-  Indicates an operation error of the water level switch that measures the water remaining. Contact local Customer Service.
-  Indicates that hot water has been poured into the water tank and entered the machine. Empty the water tank, refill it with room temperature water, return it to the base. Press & hold the "stop" button to clear the code, then press & hold the "water only" button to clear the hot water from the machine.
-  Indicates that the powder container lid has been opened during operation. Make sure the powder container lid is completely closed, press & hold the "stop" button to clear the code. The machine will return to normal.
-  Indicates that the funnel has been removed during operation. Make sure the funnel & funnel cover are installed correctly, press & hold the "stop" button to clear the code. The machine will return to normal.

Troubleshooting

Condition	Possible Cause	Possible Remedy
Machine will not start.	Unit is unplugged.	Make sure the plug is securely inserted into the power outlet.
	Funnel is removed or not fully inserted.	Insert funnel or push front of funnel until flush with machine.
	Water level is below "MIN" line.	Add more water to water tank.
	Powder container is removed or not fully seated.	Make sure powder container is placed on base properly.
	Powder container lid is not completely closed.	Turn Powder container lid clockwise to close completely. See page 7, step 3 for details.
	Powder container lid is on backwards.	Make sure tab on edge of Powder Container Lid is facing the back of the machine and engaged with safety switch. See page 7, step 3 for details.
	Water in Water Tank is too cold. (Temp Symbol on LCD Flashing)	Wait for water to warm up.
Water in Water Tank is too hot. (Temp Symbol on LCD panel is flashing)	Wait for water to cool down.	
Temperature of dispensed formula is too cold.	Water has not yet been heated to correct temperature.	Wait for heater to warm water. Make sure selected temperature symbol stays on solid instead of flashing.
Funnel will not fit all the way in Funnel Compartment.	Funnel cover is not straight on funnel and/or not pushed down completely.	Align tab on front of Funnel Cover with notch in Funnel and push down Funnel Cover completely.
Clean Funnel symbol is on, Formula Pro beeps when start button is pressed.	Funnel and hole on underside of Powder Container require cleaning.	Follow Steps on Page 7 to clean and dry Funnel and hole on underside of Powder Container.
	Too much powder dispensed.	Locking cover is not installed correctly.
Not enough powder dispensed.	Incorrect powder setting selected.	Make sure to select the correct setting number for your powder type. For details, go to: babybrezza.com/settings
	Powder level in powder container is too low.	Refill Powder Container with more powder.
Machine has not been cleaned well.	Machin has not been cleaned well.	Disassemble, clean by hand-washing, completely dry all parts and reassemble.
	Silicone scraper is not installed correctly.	Make sure silicone scraper is installed correctly.
	Incorrect powder setting selected.	Go to: babybrezza.com/fpa to confirm setting for your powder brand and type, then choose correct setting using the "powder setting" button on the control panel.
Not dispensing water.	Water Tank not fully seated.	Push Water Tank down all the way on Base.
Powder build-up on funnel cover & underside of powder container.	Frequent use without cleaning underside of powder container. See page 7, step 3 for details.	Clean funnel, funnel cover and underside of powder container every 4 bottles.

If you can not remedy problems by using the troubleshooting chart above, visit babybrezza.com/pages/international to locate your local customer service representative.