

For use with tall bottles, a riser base is available to purchase at babybrezza.com.au



Shown with riser base and tall bottles

babybrezza®

formula pro®
mini

Instructions
for set-up, use and cleaning



Limited 1-Year Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The limited warranty is valid only on products bought through authorized resellers. Buying through an unauthorized reseller voids the warranty. This warranty is available to consumers only. You are a consumer if you own a Baby Brezza Formula Pro® Mini that was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza Formula Pro® Mini will be free of defects in material or workmanship under normal home use for one year from the date of original purchase. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza Formula Pro® Mini should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it. To obtain warranty services, please contact Customer Service.

Customer Service

If you are experiencing problems with your Baby Brezza Formula Pro Mini, visit babybrezza.com.au/pages/contact to locate your local customer service representative, or call 1300 667 137.

Distributed in Australia
by CNP Brands
82 Maribyrnong Street,
Footscray, VIC, 3011
Customer Service 1300 667 137
E: info@cnpbrands.com.au
W: www.cnpbrands.com.au

Distributed in New Zealand
by Wainhouse Distribution
2-6 Argyle St. Morningside,
PO Box 41-014
St Lukes, Auckland, New Zealand
Customer Service 0800 567 5000
E: helpline@wainhousedist.co.nz

This product may be covered under one or more of the following including U.S. Patent No. 8,584,901, Canada Patent No. 2,842,603, China Patent No. CN103874441, Australia Patent No. 2011374309, Spain Patent No. ES2473790B2 and pending patent application(s) in the U.S. and other countries.

babybrezza.com.au

© 2022 Baby Brezza Enterprises LLC

**ACTIVATE
YOUR WARRANTY**

Scan here




babybrezza.com.au/pages/activate-warranty

Benefits: Faster customer support,
extended customer service hours & more

Please read fully to ensure your Formula Pro® Mini works properly every time.

INSTRUCTIONS FOR SAFE USE

- The appliance must not be immersed in liquid.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments
 - Farm houses
 - By guests in hotels, motels and other residential type environments.
 - Bed and Breakfast type environments.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.

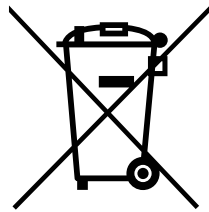

This marking indicates that products should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or Contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

⚠️ WARNING:

- Set-up & cleaning is critical to the function of your Formula Pro® Mini. Please follow all instructions properly.
- For infants less than 6 months old, always use distilled or boiled water cooled to room temperature.
- Never pour boiling/hot water in water tank. Only use bottled water suitable for infant formula preparation.
- Unboiled tap water and/or unsterilized baby bottles can potentially lead to adverse effects for the health of your baby.
- Only prepare one bottle at a time, feed immediately & follow all instructions carefully.
- Do not keep leftover formula mix. If your child was born premature, with low birth-weight or is immune deficient, please consult your pediatrician before using this machine.

TECHNICAL DATA

Supply Voltage: 220 - 240V ~ 50 - 60Hz

Model: FRP0079

Current: 2.5A

Heater Power: 250W

Motor Power: 20W

Save these instructions



CONGRATULATIONS!

Thank you for purchasing a Baby Brezza Formula Pro® Mini.

At Baby Brezza, we developed the Formula Pro® Mini to help parents save time and frustration when it comes to feeding their babies, especially on the go.

Please read & follow all instructions carefully to get the most out of your Formula Pro® Mini



Attention: Don't take anything apart yet.
Follow these steps before doing anything else.

- Place the Formula Pro® Mini on the counter or other level surface and turn it around so the back is facing you.
- Remove the water tank and water tank lid from the back of the machine, wash it with warm soapy water, rinse thoroughly, then dry.
- Fill water tank with bottled water suitable for infant formula preparation, or boiled water, cooled to room temperature.
- Place the full water tank and lid back on base, turn the machine around so the front is facing you and then plug it in. The machine will turn on and the LCD screen will light up.
- The machine will beep once to tell you it's powered on. You'll also see the LCD display turn on. If the LCD screen is not lit up when plugged in, press the power button to turn on the machine.

Now let's rinse the inside of the machine.


- Get a cup or bottle larger than 300ml and place it under the funnel.
- Press the "ounce" button on the control panel repeatedly until the LCD screen says "300ml".
- Now press the "Start" button on the control panel. The Formula Pro® Mini will dispense 300ml of water.
- Dispose of the water dispensed, or use it to water your plants.

Now you can turn off and unplug the machine, remove all the parts shown on the next page and set-up your new Formula Pro® Mini.

- Get familiar with the part names on the next page, then proceed with the set-up on the following pages.

Formula Pro® Mini Parts

Disassemble and wash all parts (except the base) and dry thoroughly. Assemble as shown on pages 5 & 6.

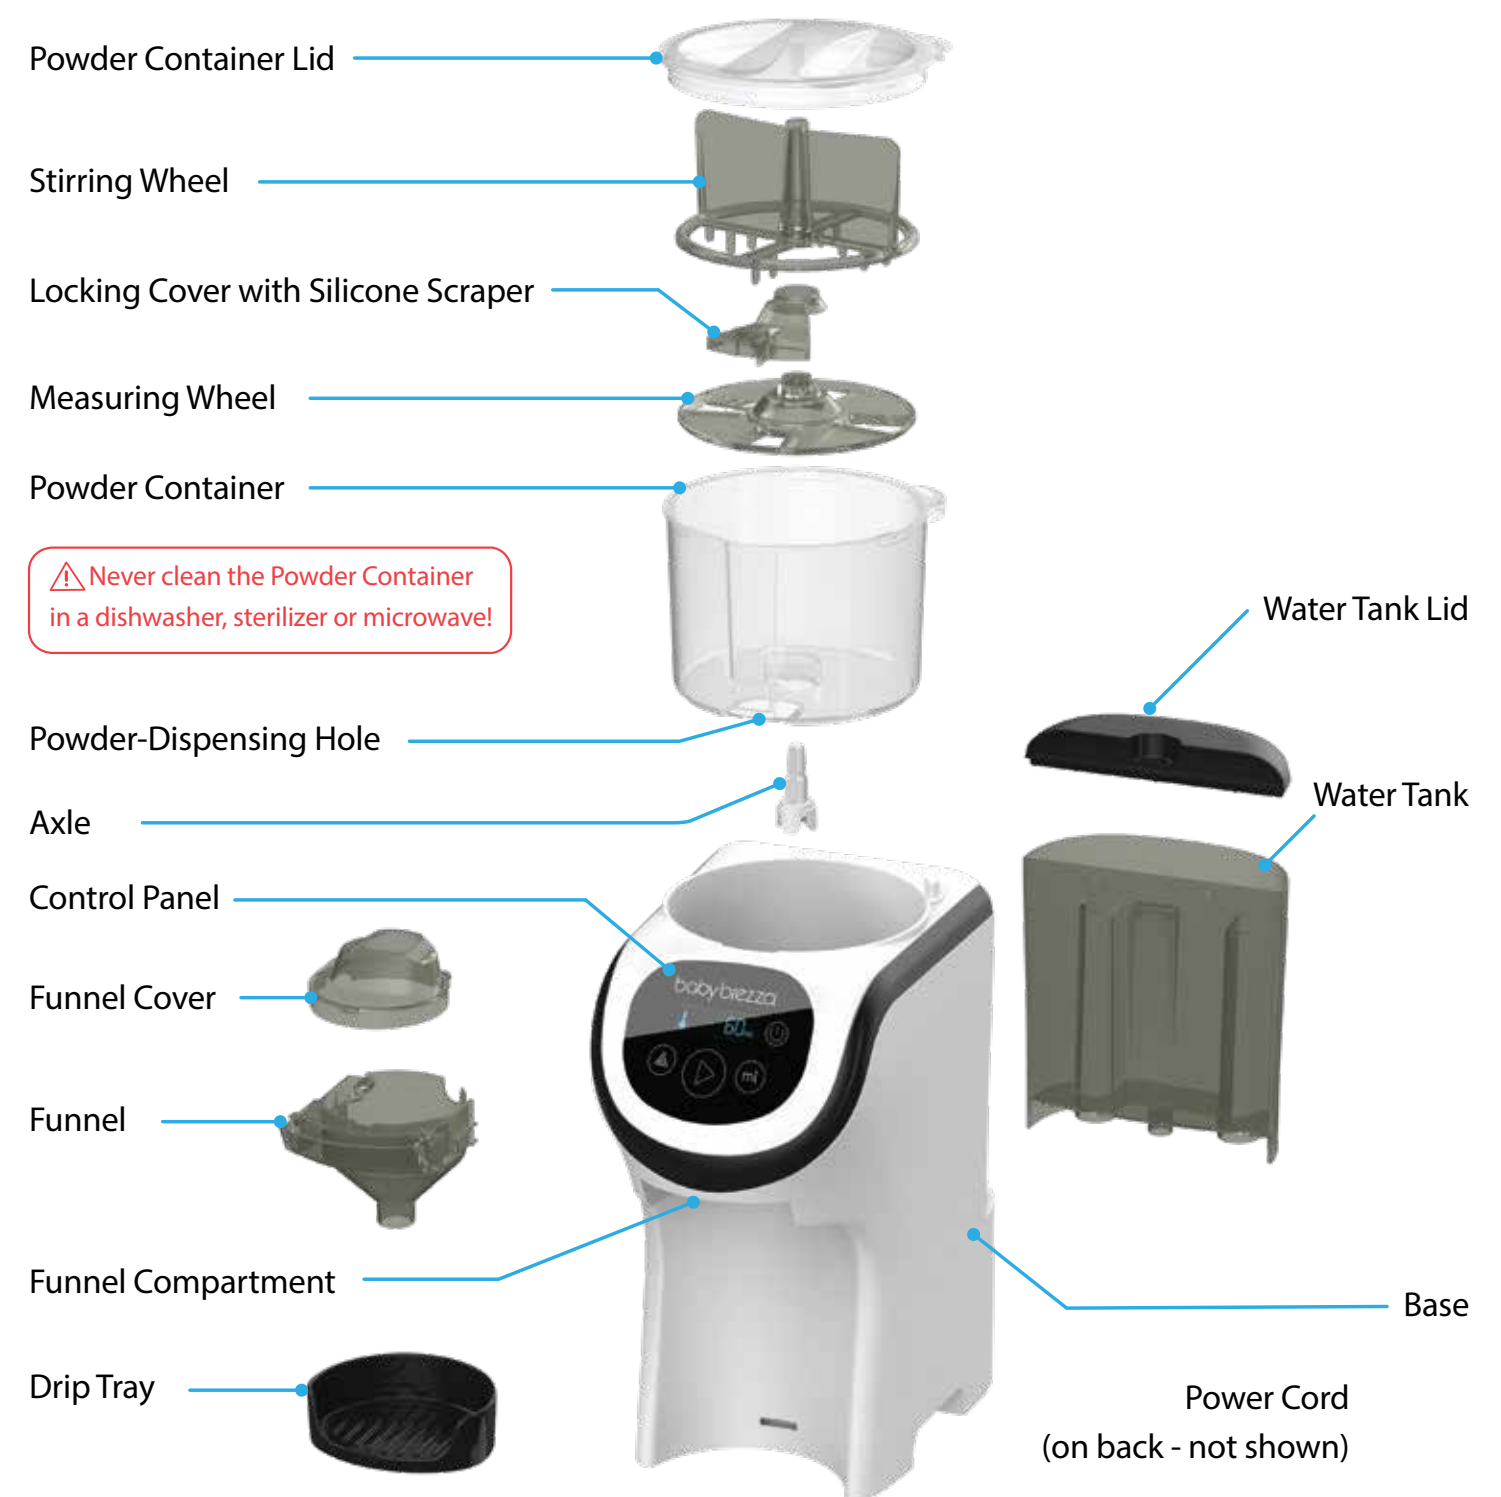


⚠ Never clean the Powder Container in a dishwasher, sterilizer or microwave!

For use with tall bottles typically 240ml or larger, a riser base is available for purchase separately at babybrezza.com.au

Set-up instructions



1 After hand washing these parts, make sure they are all **completely dry** before assembly.

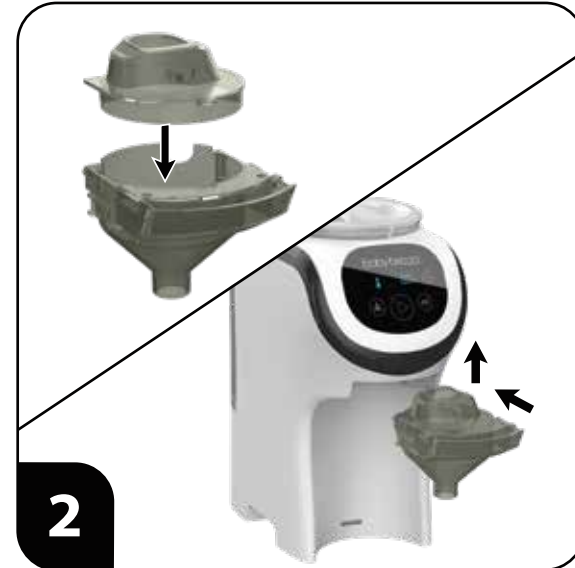

2 Assemble the **funnel & funnel cover**. Then insert funnel assembly into funnel compartment by sliding it up, then in.



3 Place the **axle** on the base as shown.



4 Now place the **powder container** on the base with the printed markings facing you.

Set-up instructions continued



5 Place the **measuring wheel** into the powder container, fitting it over the axle with the flat side facing down. Make sure the holes in the measuring wheel are in the same position as shown above.



6 **IMPORTANT**

1. Place the front edge of **locking cover** in the recess in the inside/front of the powder container, **UNDER THE TAB**.
2. Fit hole in locking cover over top of axle and press down to lock in place.



7 Make sure the **locking cover is snapped onto the measuring wheel** and looks like this when assembled.



8 Now place the **stirring wheel** on the axle and push down firmly until you hear a click. Make sure the stirring wheel is snapped in place and does not lift up easily.

Now you're ready to add powder and make your first bottle.

Preparing your first bottle




Carefully pour formula powder into the powder container. Make sure the powder is filled between the MIN & MAX lines printed on the powder container.



Place the lid on the powder container and turn clockwise until it stops. This will engage the safety switch & lock the powder container onto the base.

To remove the powder container, turn the lid counter-clockwise.

Drip Tray Set-up

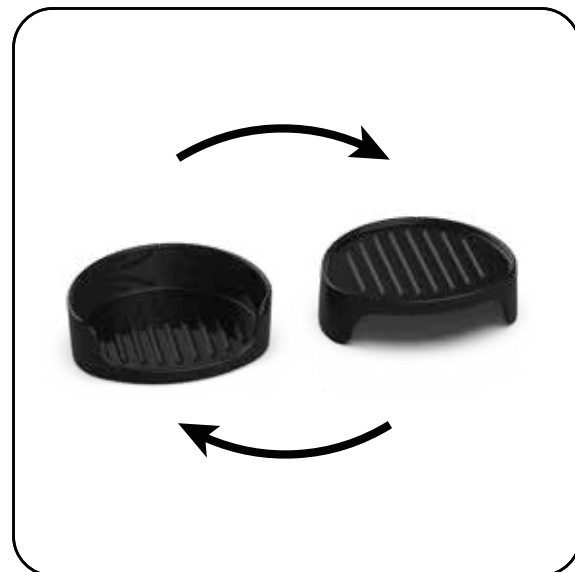

The drip tray can be used in 2 positions to make sure your bottle fits under the funnel.



Place the drip tray so that your bottle is as close to the funnel as possible to avoid spills.

Now let's review the controls on the next page.

Formula Pro® Mini - controls & operation

LCD Display: Shows selected functions & warnings

Powder setting button: Press to select setting number for your formula brand and type. [Look up on babybrezza.com.au](http://babybrezza.com.au)

Start button: Press to start dispensing formula

ml button: Press to select ml of water dispensed. (Press & hold the button for 5 seconds to change to ml).

Power button: Press to turn machine on or off. Press to stop dispensing.

Powder & water settings

5 Powder Setting Indicator - Use the "powder setting" button to choose your powder setting 1-10. [Look up on babybrezza.com.au](http://babybrezza.com.au)

60 ml ml Indicator - Use the "ml" button to choose how many ml of water to mix with powder. 60, 90, 120, 180, 240, 300 of water are available. There is no option to make a 30ml bottle.

Water Temperature

! The temperature icon will flash when heating & will stay solid when the water reaches body temperature. There is no water temperature adjustment option.


Warning symbols

The Formula Pro® Mini will not run if any of these symbols are illuminated on the LCD display.

- !** Powder Lid Open - The powder container lid is not closed completely or is not on the powder container correctly. Close the powder container lid completely and correctly when this symbol is illuminated.
- !** Low Water - Refill water tank when this symbol is illuminated.
- clean** Clean Funnel - This symbol will illuminate after every 4 bottles are made. When this symbol is illuminated, remove funnel assembly, wash, and dry completely, then place it back into the base. See Page 11 for details.
- !** Funnel Out - Funnel is removed or not inserted completely. Make sure the funnel is pushed all the way in when this symbol is illuminated.

Preparing your first bottle continued

Make sure your Formula Pro® Mini is plugged in and turned on.

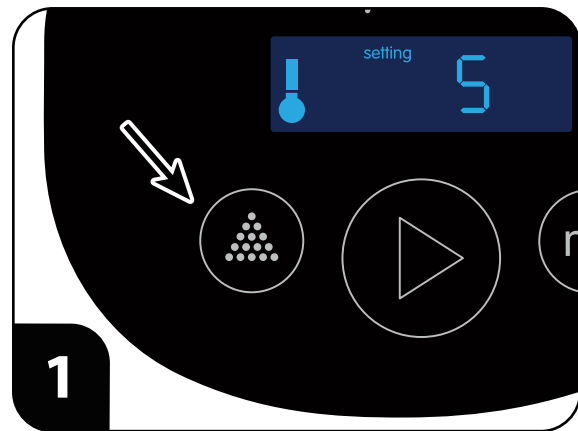

1

Press the “powder setting” button repeatedly to select your setting 1 - 10.

It is essential that you choose the correct setting for your formula brand and type.


Go to babybrezza.com.au to find the correct setting for your formula powder.



2

Press the “ml” button repeatedly to select the milliliters of water you want to dispense.

ml size indicates water volume only. It does not include the volume of powder added when mixing.

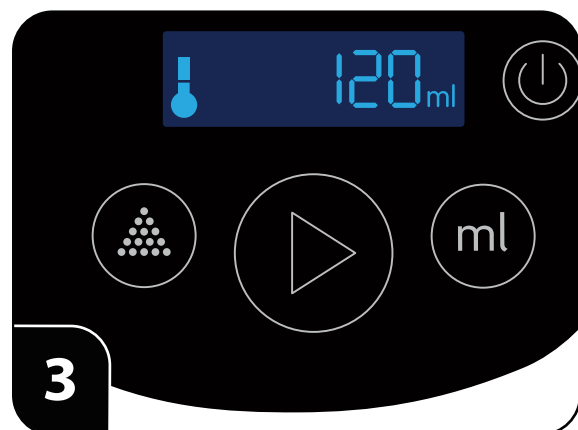


3

Press the “start” button to dispense formula. You can press the power button to stop dispensing.

The formula pro mini will remember the setting & ounce size even if it is unplugged or turned off.

You do not need to select a powder setting every time you make a bottle.

You can always change the ml size or powder setting by pressing the buttons again.

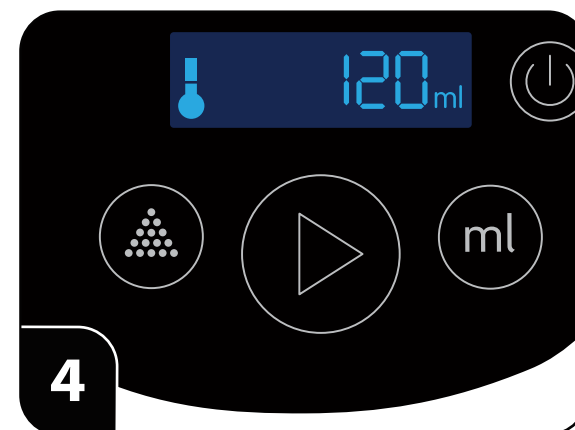

4

The temperature icon will flash when heating and will stay solid when the water reaches body temperature.

Preparing your first bottle continued



5

The Formula Pro® Mini will dispense powder & water together, then stop automatically when dispensing is complete.

Some clumping may occur with some formula powders inherently difficult to mix with water.



7

Check for clumps and **shake or stir the bottle if necessary**. Check temperature and feed your baby.



6

Check the level of mixed formula.

PLEASE NOTE: The level will appear higher than the ml size selected because of added powder volume and/or variance in bottle markings.

Example: 120ml of water plus powder volume is approximately 130-140ml depending on your formula powder type.



Refill the powder when the “REFILL” mark is visible in the powder container.

Easy Daily Cleaning Instructions

It is **EXTREMELY IMPORTANT** to clean the funnel after every 4 bottles made.

This will keep your Formula Pro® Mini dispensing accurately

The machine will not work unless the funnel is cleaned after every 4 bottles.

Always make sure Funnel & Funnel cover are **COMPLETELY DRY** before re-assembling.



Remove Funnel & Funnel Cover by pulling out and down.



Wash Funnel & Funnel Cover with warm, soapy water & rinse well.

Dry completely before re-installing.



Wipe the powder-dispensing hole on the underside of the powder container using a dry paper towel or soft dry cloth.

PLEASE NOTE: You **don't** need to remove the powder container or the powder container parts for daily cleaning.



Suggestion to make cleaning easier

To make daily cleaning even easier, you can purchase an spare funnel & funnel cover on babybrezza.com.au Then you can swap the spare funnel with the funnel that needs to be cleaned. **NOTE:** you will still need to wipe the powder dispensing hole as shown in Step 3

Monthly Cleaning Instructions

Once a month, give your Formula Pro® Mini a thorough cleaning.



Hand-wash all parts shown above with warm soapy water, rinse well and dry thoroughly.



Hand wash water tank and lid with warm soapy water, rinse well and dry thoroughly.

Monthly Descaling Instructions

It is necessary to **remove all formula** from the powder container for the monthly descaling.

To prevent mineral scale on the water heater inside your Formula Pro® Mini, follow these easy steps:

1. Remove the water tank, empty it and fill it with 400ml of purified water and 400ml distilled or white vinegar.
2. Place the water tank on the base of the machine and place a cup larger than 300ml under the funnel.
3. Select "300ml" with the "ml" button, then press the "start" button to dispense.
4. Empty the cup, put it back under the funnel, then press the "start" button again to dispense another 300ml.
5. Now unplug the machine, remove the water tank, and empty it. Let the machine sit for 4 hours.
6. Wash, rinse and fill the water tank to the max line with purified water, then place it back on the base.
7. Plug in the machine, place a cup to catch 300ml water and use the "start" button to run an 300ml cycle. Dispose of the water dispensed in the cup and then repeat this step to run the entire tank of purified water through the machine. When the "Low Water" indicator turns on, you're done rinsing.
8. Refill the water tank with purified water and return to normal use.

Long Term Storage Instructions









It is **EXTREMELY IMPORTANT** to clean the machine and remove all formula powder residue before storage.

If you're going to store your Formula Pro® Mini for later use, or will not use it for a while, please follow the instructions below:

1. Remove the powder container parts, funnel, funnel cover, drip tray and water tank from the base.
2. Wipe the base with a clean damp cloth and make sure to remove any and all formula residue. Dry the base well.
3. Empty the powder container, wash all powder container parts, dry thoroughly, reassemble, & reinstall on the base.
4. Follow the Monthly Descaling Instructions on page 12, steps **1-7 only**. Do not remove or refill the water tank after step 7.
5. Remove the water tank and turn the base of the machine upside down over a sink. Water will drain from the vent hole in the top/back of the machine. You can press the spring-loaded valve on the base where the water tank connects to let air in, and all water out of the machine.
6. Unplug the machine, remove the funnel, funnel cover and water tank, dry them both thoroughly and reinstall them on the machine.
7. Your machine is now ready for storage. Pack the machine in its box, or enclose it in a bag to keep it dust free.

Error Codes

In the unlikely event of electrical component error or interruption during operation, the following codes will be displayed on the LCD screen. Pressing and holding the power button will clear the code and operation should return to normal. If the code returns or is unable to be cleared, please contact Baby Brezza Customer Service.

-  Indicates an operation error of the motor that turns the powder container parts. Contact Baby Brezza Customer Service.
-  Indicates an operation error of the motor sensor that detects the rotation of the measuring wheel. Contact Baby Brezza Customer Service.
-  Indicates an operation error of the water flow meter that measures the water volume output. Contact Baby Brezza Customer Service.
-  Indicates an operation error of the temperature sensor that measures water temperature. Contact Baby Brezza Customer Service.
-  Indicates an operation error of the water level switch that measures the water remaining. Contact Baby Brezza Customer Service.
-  Indicates that hot water has been poured into the water tank and entered the machine. Empty the water tank, refill it with room temperature water, return it to the base and wait for the water inside the machine to cool. Press & hold the power button to clear the code.
-  Indicates that the powder container lid has been opened during operation. Make sure the powder container lid is completely closed, press & hold the power button to clear the code. The machine will return to normal.
-  Indicates that the funnel has been removed during operation. Make sure the funnel & funnel cover are installed correctly, press & hold the power button to clear the code. The machine will return to normal.

Troubleshooting

Condition	Possible Cause	Possible Remedy
Machine will not start.	Machine is unplugged.	Make sure the plug is securely inserted into the power outlet.
	Machine is not turned on.	Press Power Button to turn on machine.
	Funnel is removed or not fully inserted.	Insert funnel or push front of funnel until flush with machine.
	Water level is below "MIN" line.	Add more water to water tank.
	Powder container is removed or not fully seated.	Make sure powder container is placed on base properly.
	Powder container lid is not completely closed.	Turn Powder container lid clockwise to close completely. See page 7, step 2 for details.
	Powder container lid is on backwards.	Make sure tab on edge of Powder Container Lid is facing the back of the machine and engaged with safety switch. See page 7, step 2 for details.
	Water in Water Tank is too cold. (Temp Symbol on LCD Flashing)	Wait for water to warm up to body temperature.
Water in Water Tank is too hot. (Temp Symbol on LCD panel is flashing)	Wait for water to cool down.	
Temperature of dispensed formula is too cold.	Water has not yet been heated to correct temperature.	Wait for heater to warm water. Make sure temperature symbol stays on solid instead of flashing.
Funnel will not fit all the way in Funnel Compartment.	Funnel cover is not straight on funnel and/or not pushed down completely.	Align tab on front of Funnel Cover with notch in Funnel and push down Funnel Cover completely.
Clean Funnel symbol is on, Formula Pro beeps when start button is pressed.	Funnel and hole on underside of Powder Container require cleaning.	Follow Steps on Page 11 to clean and dry Funnel and hole on underside of Powder Container.
Too much powder dispensed.	Locking cover is not installed correctly.	Check locking cover and make sure the front edge is locked under the tab in the powder container. See page 6, step 6 & 7 for details.
	Incorrect powder setting selected.	Make sure to select the correct setting number for your powder type. For details, go to: babybrezza.com/settings
Not enough powder dispensed.	Powder level in powder container is too low.	Refill Powder Container with more powder.
	Machine has not been cleaned well.	Disassemble, clean by hand-washing, completely dry all parts and reassemble.
	Silicone scraper is not installed correctly.	Make sure silicone scraper is installed correctly.
	Incorrect powder setting selected.	Go to: babybrezza.com/settings to confirm setting for your powder brand and type, then choose correct setting using the "powder setting" button on the control panel.
Not dispensing water.	Water Tank not fully seated.	Push Water Tank down all the way on Base.
Powder build-up on funnel cover & underside of powder container.	Frequent use without cleaning underside of powder container. See page 11 for details.	Clean funnel, funnel cover and underside of powder container every 4 bottles.

If you can not remedy problems by using the troubleshooting chart above, do not return your Formula Pro® Mini to the store. Please contact Baby Brezza Customer Service (see back page for contact information)