



- HF01-GL
- HF01-US
- HF02-US

For Children:

15 to 45 kg (33 to 100 lbs.) 90 to 150 cm (36 to 59 in.)

EU: Approved to ECE R44.04 - See Page 20

USA: Approved to FMVSS 213

- This child restraint conforms to all applicable Federal motor vehicle safety standards for use in motor vehicles.
- This child restraint is NOT certified for use in aircraft.



Read this manual.

Proper use is required! Do not install or use this booster seat until you have read and understand the instructions in this manual and on the product labels!

MUST be used with a 3-point vehicle lap and shoulder belt compliant with ECE R16 or equivalent standard in other countries.

KEEP THESE INSTRUCTIONS FOR FUTURE USE. Store under Seat Bottom Cover.





Table of Contents

Weight and Height Use Recommendations	
nifold Booster Seat Parts	
Varnings	4
Proper Use Checklist	
Selecting a Vehicle Seating Location	6
/ehicle Seat Belt Systems	_
Do Not Use these Vehicle Belt Systems	
Note About Switchable Retractors	9
Preparing for Use	_
Initial Setup	
Adjusting hifold to Fit Your Child1	
nstallation and Securing Your Child1	
Removing Child1	
Removing hifold Booster Seat1	
Re-Use After a Crash20	U
Additional Information	_
Certification	
Care and Cleaning	
Instruction Manual Storage	
Warranty29	
Product Registration	
Recall Information	7
Patents2	
Customer Service Contact Information28	
Quick Reference Guide	-
Set-up and Adjustment30	0
Fold-down - Compact Storage3	

Weight and Height Use Recommendations

- Child's weight MUST be between 15 and 45 kg (33 and 100 lbs.).
- Child's height MUST be between 90 and 150 cm (36 and 59 in.).
- Use only with a child that has outgrown their car seat with a 5-point harness and can sit in the booster seat properly for the entire duration of each trip. If your child will not remain seated properly, your child should use

a child restraint with 5-point harness.


- "Outgrown" means the child's weight or height exceeds the use limits for the car seat.
- "Sitting properly" means the child must remain seated without slouching under lap belt, moving shoulder belt under arm or behind back, or leaning forward or sideways moving out of position so the vehicle belt remains properly positioned.
 - A booster seat is designed to position the adult vehicle belt correctly on the child.
 - Vehicle lap belt MUST be positioned on the pelvis such that it is low on hips, contacting thighs and not up on the abdomen.
 - Full width of vehicle shoulder belt MUST be on child's shoulder (not in contact with the neck and not off the shoulder).

1423 Rev C 190823.indd 2 8/23/19 7:48 AM

1






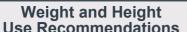

- Child restraint laws vary from country to country and state to state. Check your local laws as they may have specific use requirements.
- · Do not use when:
 - Child does not remain seated properly or does not keep the vehicle belt properly positioned.
 - Child's weight exceeds 45 kg (100 lbs.).
 - Child's height exceeds 150 cm (59 in.).
 - The vehicle belt fits on your child correctly without a booster seat.


hifold Booster Seat Parts

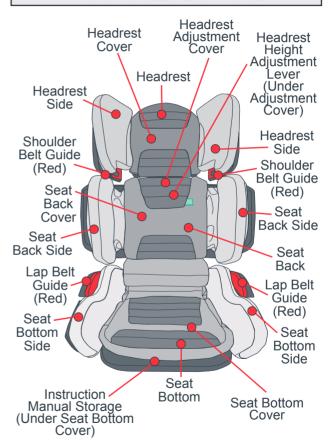






hifold Booster Seat Parts

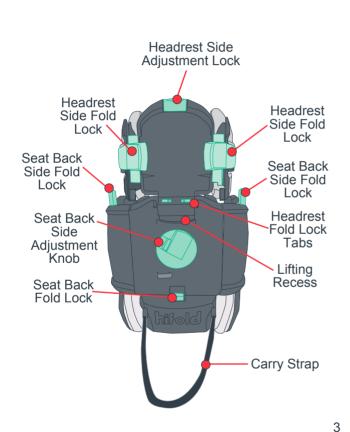

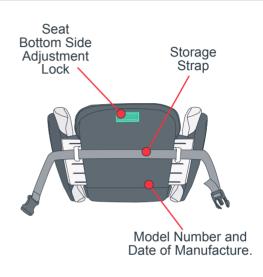

(



To purchase a Cup Holder Accessory, contact Carfoldio Customer Service. See Customer Service Contact Information section.



WARNING - DEATH or SERIOUS INJURY can occur

Failure to follow these user instructions and car seat labels can result in child striking the vehicle's interior during a sudden stop or crash.

- Proper use is required:
 - Read and follow all instructions and information in this manual, on product labels, and in the vehicle owner's manual for booster seat and vehicle seat belt use.
 - Improper use of the booster seat or vehicle seat belt can result in serious injury or death in a sudden stop or crash.
- Use ONLY with children who weigh between 15 and 45 kg. (33 and 100 lbs.) and whose height is between 90 and 150 cm (36 and 59 in.) and will remain properly seated in the booster seat for the entire duration of each trip.
- Use only the vehicle 3-point lap and shoulder belt system when restraining a child in this booster seat. Lap belt portion MUST be through both Lap Belt Guides (Red) and shoulder belt MUST be through Shoulder Belt Guide (Red).
- Snugly adjust vehicle lap and shoulder belt around child, removing any twists or slack and according to the vehicle owner's manual.
- Only use booster seat on forward-facing vehicle seats with child facing front of vehicle.

- ALWAYS properly position vehicle belts on child and snugly adjust vehicle belts around child.
 - Vehicle lap belt MUST be positioned on the lap and supported on the pelvis such that the belt is low on hips, contacting thighs and not up on the abdomen.
 - Full width of vehicle shoulder belt MUST be on child's shoulder (not in contact with neck and not off shoulder).
 - NEVER use shoulder belt loose, positioned under child's arm, or behind child's back.
- NEVER use booster seat with a 2-point lap belt only or only the lap belt portion of a 3-point lap and shoulder belt across front of child. Use of lap belt only can result in serious injury or death.
- NEVER use booster seat in a vehicle front seat location unless recommended in vehicle owner's manual.
 Follow use information in vehicle owner's manual.






AWARNING - DEATH or SERIOUS INJURY can occur

- NEVER use this booster seat with vehicle's ISOFIX or LATCH Anchorage System.
- Secure booster seat even when not occupied and secure any loose objects or luggage.
 Unsecured items may injure other occupants in a crash.
- DO NOT modify this booster seat, modications can result in a serious injury or death in a crash.
- DO NOT use booster seat if it has been in a crash or is damaged, missing parts or the instruction manual is missing.
- Register child restraint with the manufacturer (for USA). See Registration section.
- NEVER leave child unattended.
- This booster seat is certified for use in motor vehicles. DO NOT use this booster seat in the home, on boats, on aircraft or other non-certified applications.
- Only use accessories and replacement parts approved by Carfoldio Ltd. Do not use accessories or parts made by other manufacturers (unless approved by Carfoldio Ltd).
- Discontinue use after 7 years from date of manufacture printed on label on bottom of seat.


Proper Use Checklist

- √ Back of hifold Booster Seat MUST make contact with vehicle seat back.
- √ Vehicle Lap <u>and</u> Shoulder Belt MUST be properly positioned on child.
 - Shoulder Belt Guide is above child's shoulder and full width of shoulder belt is on child's shoulder and not in contact with neck.
 - Lap Belt supported on pelvis such that the belt is low on hips, contacting thighs and not up on abdomen.
 - Lap <u>and</u> Shoulder Belt snugly adjusted around child.
- √ If using a seating position with a frontal air bag, follow the vehicle manufacturer's instructions, adjust vehicle seat rearward, away from air bag, as far as possible and use booster seat and vehicle belt according to vehicle owner's manual.
- √Child MUST be sitting up, with lower back against Seat Back of booster seat and not slouching down under Vehicle Lap Belt.

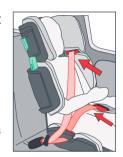





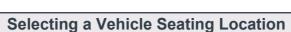

AWARNING

- DO NOT use booster seat in a seating position with a frontal air bag unless recommended by the vehicle manufacturer.
- DO NOT use booster seat with a 2-point Vehicle Lap Belt ONLY.



Lap Belt Only

- Refer to vehicle owner's manual for information on securing children and vehicle seat belt use.
- NOT all vehicle seat belts can be used with a booster seat. Read vehicle owner's manual on booster seat use and "Vehicle Seat Belt Systems" section in this manual.

Notice for EU Consumers and Consumers outside the USA, Canada, and Australia

- 1. This is a "Universal" child restraint. It is approved to Regulation No. 44, 04 series of amendments, for general use in vehicles and it will fit most, but not all, vehicle seats.
- 2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a "Universal" child restraint for this age group.
- This child restraint has been classified as "Universal" under more stringent conditions than those which applied to earlier designs which do not carry this notice.
- Only suitable if the approved vehicles are fitted with a 3-point safety belts with retractors approved to ECE R16 or equivalent standard.







Selecting a Vehicle Seating Location


Select a Seating Location To Use:

 Select a vehicle seating location that faces the front of the vehicle and has a 3-point Vehicle Lap and Shoulder Belt system.





The U.S. National Highway Traffic Safety Administration (NHTSA) and other transportation authorities alerts vehicle owners that according to accident statistics, children age 12 and under are safer when properly restrained in vehicle rear seating positions rather than the front seating positions. Check your local state or country's highway laws for specific use requirements for child restraint use.

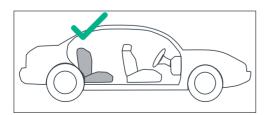

Seating Locations NOT To Use:

1. Vehicle Front Seat Locations:

- NEVER use the hifold Booster Seat in a vehicle front seating location unless specifically allowed by the vehicle manufacturer and the local country's highway laws.
- If using a seating position with a frontal air bag, follow the vehicle manufacturer's instructions, adjust vehicle seat rearward, away from air bag, as far as possible and use booster seat and vehicle belt according to vehicle owner's manual.

For vehicles with air bags, refer to vehicle owner's manual for child restraint installation information

2. Side Facing and Rear Facing Seats:

 DO NOT use side or rear-facing vehicle seats.

> Side Facing Vehicle / Seats



Rear Facing Vehicle Seat

1423 Rev C 190823.indd 8 8/23/19 7:48 AM



Vehicle Seat Belt Systems

This hifold Booster Seat MUST be used with a 3-point Vehicle Lap and Shoulder Belt system that can be properly positioned on and snugly adjusted around child.

DO NOT use these Vehicle Belt Systems

1. Lap Belts ONLY Systems:

Vehicle Seating Locations With ONLY A Lap Belt:


DO NOT use seating locations with a 2-point Lap Belt ONLY.



2. Passive Restraint Systems (continued):

B. Door Mounted Lap And Shoulder Belts:

DO NOT use seating locations where seat belts are mounted to the door.

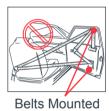


To Door

2. Passive Restraint Systems:

A. Motorized Shoulder Belts:

DO NOT use seating locations with motorized shoulder belts.

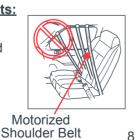

3. Inflatable Seat Belt Systems:

 DO NOT use booster seat on a vehicle seating location with an inflatable seat belt.



Vehicle Seat Belt Systems

Notes About Switchable Retractors

Many vehicles in North America have a lap and shoulder belt system in which the retractor can be switched from the emergency locking mode (ELR) to an automatic locking mode (ALR). **The ALR mode is not designed for use with booster car seats** and hifold is not recommended for use with a lap and shoulder belt in the ALR mode.

Note: Should the lap and shoulder belt inadvertently be switched into the automatic locking retractor mode (ALR) and the vehicle seat belt is locked, follow the steps below to remove the lap belt.

- Pull out and hold the shoulder belt to prevent further retraction. Be aware not to allow shoulder belt webbing to retract during this entire procedure.
- Have your child lean away from the vehicle buckle.
- Lift hifold up on the buckle side and remove lap belt.

If the lap and shoulder belt is inadvertently switched into the locking mode, see steps above and in Removing Child section to remove child.

Preparing for Use

Initial Setup

In preparing the hifold for use with your child, you will need to adjust the height and width of the hifold to fit your child by following the steps in this section.

- 1. Unfold booster seat.
 - a. Unfold Headrest Sides -Unbuckle Storage Straps. Grasp both Headrest Sides and rotate them up into the open and locked position.



CAUTION: Avoid pinch when moving sides. Keep fingers clear of hinge.



1423 Rev C 190823.indd 10 8/23/19 7:48 AM

Preparing for Use

b. **Unfold Headrest** - Rotate Headrest up until Headrest locks into use position.



 Unfold Seat Back and Headrest - Rotate Seat Back up until it locks into position.



CAUTION: Avoid pinch when moving Seat Back. Keep fingers clear of hinge.



 d. Seat Back Sides - Grasp both Seat Back Sides and rotate them out into the open and locked position.




CAUTION: Avoid pinch when moving Seat Back. Keep fingers clear of hinge.



- Adjust the hifold Booster to the maximum height and maximum width as described below.
 - a. Place the unfolded hifold Booster on a vehicle seat with the back of the booster seat contacting the vehicle seat back or place in a chair that supports the Seat Bottom and also the Seat Back and Headrest.
 - b. Seat Bottom Sides/Lap
 Belt Guides Seat Bottom
 Sides/Lap Belt Guides have
 three width adjustment
 positions, adjust them to
 the maximum width by
 pulling the Seat Bottom Side
 Lock on underside of Seat Bottom
 forward and sliding the Seat Bottom
 Sides out.




- c. **Seat Back Sides** Seat Back Sides have three width adjustment positions, adjust them to the maximim width by depressing the lock on seat Back Side Adjustment Knob (1) and
 - rotate knob counterclockwise 2 to move Seat Back Sides out.

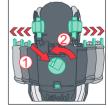

10



d. Headrest Sides - Headrest Sides have three width adjustment positions, adjust Headrest Sides out into the maximum width by pushing the Headrest Side Adjustment Lock down 1 and sliding Headrest Sides out 2.

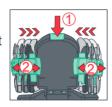

e. Headrest - Headrest has nine height adjustment positions, adjust the Headrest and Seat Back to the maximum height position by lifting the Headrest Adjustment Cover up 1 to access the Headrest Height Adjustment Lever, Lift the Headrest Height Adjustment Lever up 2 and raise the Headrest up to the highest position 3 using the Lifting Recess. Release the lever to lock the Headrest in place.








Adjusting hifold to Fit Your Child

Note: The width and height of the hifold will need to be adjusted as your child grows.

 Place the hifold on a vehicle seat with the back of the booster seat contacting the vehicle seat back or place it in a chair that supports the seat bottom and also the seat back and headrest.



 Seat your child in the hifold Booster with their lower and upper back contacting the Seat Back of the hifold, not slouching down on the Seat Bottom with lower torso forward of the Seat Back.

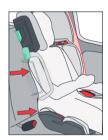


Preparing for Use


3. Adjust the width of the Seat Bottom/Lap Belt Guides so they are close to your child's thighs by pulling the Seat Bottom Side Lock ① on underside of Seat Bottom forward and sliding the Seat Bottom Sides in ②.



 Adjust the width of the Headrest Sides so they are close to the sides of your child's head by pushing the Headrest Side Adjustment Lock down and sliding the Headrest Sides in 2.

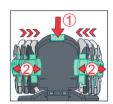

4. Adjust the width of the Seat Back Sides so they are close to your child's shoulders. To adjust, have your child lean forward and move Seat Back forward to access the Seat Back Side Adjustment Knob on back of Seat Back, press the Lock on the Seat Back Side Adjustment Knob (1), and rotate knob clockwise (2) to move Seat Back Sides in.

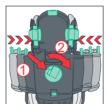

6. Adjust the height of the Headrest and Back so that the Shoulder Belt Guide is iust above the top of your child's shoulder. To adjust, have your child lean forward and move Seat Back forward to access the Lifting Recess on the back, lift the Adjustment Cover up 1 to access the Headrest Height Adjustment Lever, then lift the Headrest Height Adjustment Lever up 2 and move the headrest to position the Shoulder Belt Guide just above the top of your child's shoulder (3). Release the Headrest Height Adjustment Lever to lock the Headrest in place.







12



Installation and Securing Your Child

A WARNING

- Use only with the Vehicle's Lap and Shoulder Belt system to secure child in this booster seat.
- DO NOT use lower anchorages of the vehicle's ISOFIX or LATCH attachment system with this booster seat.
- Position Lap Belt through both Lap Belt Guides and Shoulder Belt through Shoulder Belt Guide



Lower Anchorages

- Vehicle Lap and Shoulder Belt MUST be properly positioned on child.
 - Lap Belt through both Lap Belt Guides, low on hips, contacting thighs and not up on the abdomen
 - Shoulder Belt through Shoulder Belt Guide that is above the top of child's shoulder and full width of Shoulder Belt is on child's shoulder (NOT in contact with neck and not off shoulder.)
 - Lap and Shoulder Belt snugly adjusted around child
 - DO NOT allow child to place Shoulder Belt under arm or behind back.

- Snugly adjust Lap Belt on child, then snugly adjust Shoulder Belt.
- DO NOT use booster seat in a seating position that has a 2-point Vehicle Lap Belt ONLY
- NEVER use booster seat with only a Lap Belt across front of child. Use of only a lap belt can result in serious injury or death
- Avoid potential abdominal iniury from sliding under or submarining under Vehicle Lap Belt, Child MUST sit with lower back in contact with seat back of booster seat and vehicle seat belt snugly adjusted.
- Avoid burn injury Always check booster seat surfaces before putting child in this seat. The booster seat can become very hot if left in the sun and can burn the child's skin.

Lap Belt Only




1423 Rev C 190823.indd 14 8/23/19 7:48 AM



Installation and Securing Your Child

AWARNING

- DO NOT use the hifold if your child will not remain seated and restrained properly. The child should not slouch under lap belt, move shoulder belt under arm or behind back, or lean forward or sideways out of position.
- Check position of the hifold Booster and vehicle belt to avoid them becoming trapped by a movable seat or in a door of the vehicle during everyday use.

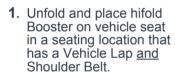

Note: Do not place booster seat in a seating location that has only a lap belt.



Slide hifold Booster back on vehicle seat cushion so that the back of the Headrest and Seat Bottom make contact with vehicle seat back cushion.


Note: Some vehicle seat backs are adjustable. Adjust the vehicle seat back so that it contacts the hifold Booster Seat on the back of the Headrest and back of the Seat Bottom.



Important Note: Back of the hifold Headrest must contact the front of the vehicle seat back cushion or headrest. Do not use hifold in a seat position where the Headrest is above the top of the vehicle seat back or headrest.



1423 Rev C 190823.indd 15 8/23/19 7:48 AM

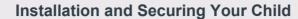

3. Seat child on the Booster Seat with child's lower and upper back in contact with the Seat Back of the hifold. not slouching down on the Seat Bottom with lower torso forward of the Seat Back.




6. Adjust the width of the Headrest Sides so they are close to the child's head. See instructions in "Preparation for Use" section.



4. Adjust Seat Bottom/Lap Belt Guides into position next to child's thighs. See instructions in "Preparation for Use" section.



Secure child with the Vehicle. Lap and Shoulder belt.

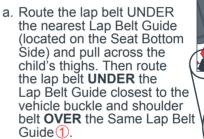

b. Buckle the seat belt and pull on shoulder belt to remove slack from lap belt 2.

5. Adjust the width of the Seat Back Sides so they are close to the child's shoulders. See instructions in "Preparation for Use" section.

1423 Rev C 190823.indd 16



8/23/19 7:48 AM



7. c. Place the vehicle shoulder belt over child's chest and into the Shoulder Belt Guide by sliding the entire belt rearward into slot on the underside of the Headrest 3 and then guide the edge up and over the red

 Snugly adjust the vehicle lap and shoulder belt around your child. Snugly adjust lap belt and then the shoulder belt.
 Pull on shoulder belt on

 a. Pull on shoulder belt on outside of Seat Bottom Side to snugly adjust vehicle lap belt 1.

 Pull on shoulder belt on outside of Headrest Side to snugly adjust vehicle shoulder belt 2.

NOTE: Refer to vehicle owner's manual for instructions on proper adjustment of the vehicle lap and shoulder belt.





d. Make sure belts are not twisted.

slot cover 4

NOTE: Refer to vehicle owner's manual for instructions on proper use and placement of the vehicle lap and shoulder belt.

so belt lays flat through Shoulder Belt Guide.

8. Adjust the height of the Headrest to position the Shoulder Belt Guide just above the top of your child's shoulder and the full width of the shoulder belt is on the child's shoulder. See instructions in "Preparation for Use" section.

NOTE: Additional adjustments
of the Headrest height
and Headrest Side
width may be required to position
the shoulder belt fully on the child's
shoulder and off the neck

10. Check that the vehicle lap belt is supported on the pelvis such that the belt is low on hips and contacting thighs and the full width of the shoulder belt is on the child's shoulder, not on the neck or off shoulder.



1423 Rev C 190823.indd 17 8/23/19 7:48 AM

16





Removing Child

To Remove Child:

- 1. Unbuckle the Vehicle Lap and Shoulder Belt.
- 2. Slide lap portion of Vehicle Lap and Shoulder Belt out of Lap Belt Guide in Seat Bottom Sides.
- 3. Move Vehicle Lap and Shoulder Belt off the child.
- 4. Remove child from booster seat.

Removing hifold Booster Seat

Transportation and Storage:

The hifold Booster Seat folds into a compact size for easy storage when not in use.


To store hifold Booster Seat:

1. Remove vehicle lap and shoulder belt - Remove vehicle shoulder belt from Shoulder Belt Guide in Headrest and vehicle lap belt from Lap Belt Guides.

NOTE: To remove the vehicle shoulder belt from the Shoulder Belt Guide. complete Step 7(c) from "Installation and Securing Your Child" in reverse

To fold to the most compact folded size, go to step #2. Otherwise go to step #6.

2. Adjust Headrest Sides -Press Headrest Side Adjustment Lock 1 down and adjust Headrest Sides 2 in to the narrowest adjustment position.

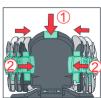








Removing hifold Booster Seat


- 3. Adjust Seat Back Sides -Unlock Seat Back Side Adjustment Knob 1 and turn clockwise 2 to move Seat Back Sides in to the <u>narrowest</u> position.
- 4. Adjust Seat Bottom Sides -Pull Seat Bottom Side Lock 1 forward and slide Seat Bottom Sides 2 to the widest position.
- 5. Lower Seat Back height Lift Headrest Adjustment
 Cover up 1 then lift Headrest
 Height Adjustment Lever 2
 and with other hand grasp the
 Lifting Recess on the back and
 lower Headrest 3 to lowest
 position.

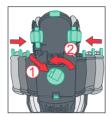

6. Fold Seat Back Sides Press button on Seat Back Fold
Lock 1 push down on Fold Lock
2 and rotate Seat Back Side into
the center of the Seat Back 3.
Repeat on the opposite side.






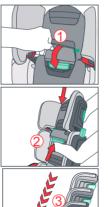

7. Fold Seat Back - Fold Seat Back down by sliding Seat Back Fold Lock up 1 and rotating Seat Back forward and down 2, inside Seat Bottom.





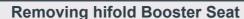

8 Fold Headrest - Pinch Headrest Tabs together 1 and rotate Headrest backwards 2



9. Fold Headrest Sides -Press Headrest Side Fold Lock 1 and rotate Headrest Side into center of seat 2. Repeat for opposite side.



10. Buckle Storage Straps -Storage Straps can be brought up and over top of folded Headrest Sides. This will keep hifold folded and compact. Carry Strap can then be used to carry hifold




Transporting hifold when not occupied:

When not occupied, the hifold Booster Seat must be securely installed in the vehicle with a vehicle lap and shoulder belt as described below or folded and stored in a secure location such as the trunk. luggage compartment or storage area.

- Route lap portion of Vehicle Lap and Shoulder Belt through both Lap Belt Guides in Seat Bottom Sides and shoulder belt through Shoulder Belt Guide in Headrest
- Buckle Vehicle Lap and Shoulder Belt and snugly adjust the lap and shoulder belt around booster seat

AWARNING

 Secure this booster seat even when not occupied. An unsecured booster seat can injure other occupants in a crash.

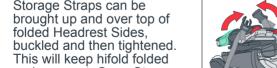

19



Re-Use After a Crash

A WARNING

- DO NOT allow any use of this booster seat after a crash where a child was secured in the booster seat.
- Do not sell or allow others to use a child restraint that was occupied in a crash.
- This child restraint must be destroyed and replaced if it was occupied during a crash.

The hifold Booster Seat is a unique design that absorbs some of the forces in a vehicle crash when occupied by a child. These crash forces can deform parts of the booster seat and result in damage that may not be detectable by a visual inspection. As a result, the hifold Booster seat MUST be replaced after any crash in which the booster seat was occupied.

For a crash in which the hifold Booster Seat was stored in a secure location or was secured with a vehicle seat belt passing through both Lap Belt Guides and the Shoulder Belt Guide and was unoccupied at the time of crash, the hifold may continue to be used.

Additional Information

Certification:

Motor Vehicle Use:

USA:

This child restraint meets or exceeds all applicable requirements of Federal Motor Vehicle Safety Standard 213 for use in motor vehicles.

EU and the rest of the world, except Canada and Australia:

This booster seat is approved to ECE R44.04, Group 2-3.

This hifold Booster Seat is for use from 15 to 45 kg (33 to 100 lbs.). The hifold is approved to UN ECE R44.04 as a Group 2-3 booster seat with a weight range of 15 to 36 kg (33 to 80 lbs.). The hifold has been successfully tested for use by children weighing 45 kg (100 lbs.) or less.

This hifold Booster Seat is for use in passenger cars, multi-purpose vehicles (vans and SUVs), trucks, and school buses that have Vehicle Lap and Shoulder Belt systems.

Aircraft Use - This restraint is not certified for use in aircraft. Aircraft seats do not provide a lap and shoulder belt system required to use a booster seat.

20 a booster seat.









Care and Cleaning:

A WARNING

- Never use this booster seat without its seat covers. Seat covers are an integral part of the booster seat.
- If any of the seat covers become damaged during washing, then they must be replaced with a new cover supplied by the manufacturer.

Seat Covers (need to be removed prior to washing):

Fabric seat covers are machine washable in cold water, delicate or gentle cycle. No bleach. Line dry. Do not wring. Do not tumble dry. Do not iron.



Booster Seat Plastic and White Foam:

Plastic seat surfaces and white foam can be wiped down with a mild solution of soap and water. Wipe with clean water to remove soap.

To remove seat covers for cleaning:

Note: It is best to remove the Headrest Cover, then the Seat Back Cover and then the Seat Bottom Cover.

1 Removal of Headrest Cover:

- Remove Headrest Side covers first by starting at the top rear corner and pulling the Headrest Side Cover off top of the foam and then pull Headrest Side Cover off front and lower edge of Headrest Side. Repeat on the other side.
- Pull top center section of the Headrest Cover off by pulling one of the top corners off.



1423 Rev C 190823.indd 22 8/23/19 7:48 AM



2 Removal of Seat Back Cover:

- Remove Seat Back Side Cover first by unhooking lower rear corner of cover and then pulling Seat Back Side Cover off front and top edge of Seat Back Side.
- Unhook elastic loops (4 on each side) from plastic seat back.

Note: This is easier to do if the Seat Back Sides are adjusted out to their maximum width.



 Remove Seat Bottom Side covers first by starting at the lower rear corner, pull cover off back of Seat Bottom Side.

Continue to pull cover off top and front edge of Seat Bottom Side. Repeat on the other side.

 Pull Seat Bottom Cover off front of Seat Bottom by starting at one side and pulling edge of cover out.

Then unhook loops attaching cover to seat bottom in the back and elastic loops on each side where the seat bottom meets the seat back.






7,444,144,144

To reinstall seat covers after cleaning:

Note: It is best to install the Seat Bottom Cover first, then the Seat Back Cover and then the Headrest Cover.

Assembly of Seat Bottom Cover:

 Secure center section first by hooking (2) elastic loops on plastic hooks located where Seat Bottom meets Seat Back, then wrap tabs on Seat Bottom Cover around plastic hooks. Hook (2) loops around "pegs" and lay back pad against Seat Back.

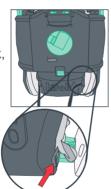

 Secure front edge of Seat Bottom Cover by starting on one side and insert the edge of the pad into the slot between the seat foam and plastic.




- Secure Seat Bottom Side Cover to both Seat Bottom Sides by hooking the front end over the front of the seat side 1 and sliding the fabric into the slot between the seat foam and the plastic from front to back 2.
- Ensure all foam is covered and black edging is tucked between foam and plastic.



Assembly of Seat Back Cover:

 Secure center section first by hooking (4) elastic loops on one side, from top to bottom, and then hook the (4) elastic loops on the other side.

Note: Cover should be on top of the back pad that is part of the Seat Bottom Cover.

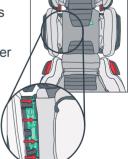


23



- Secure Seat Back Cover onto Seat Back Sides by hooking top edge of cover over top of Seat Back Side 1 and then pulling the front end over the front of the Seat Back Side 2 and sliding the fabric into the slot between the seat foam and the plastic on front and top of Seat Side.
- Ensure all foam is covered and black edging is tucked between foam and plastic.



- Next, hook the bottom edge
 of the cover over the foam
 on the bottom edge of the
 Headrest side and then pull
 top edge of the cover up and
 over the top of the foam,
 sliding the fabric into the slot
 between the seat foam and
 the plastic.
- Ensure all foam is covered and black edging is tucked between foam and plastic.

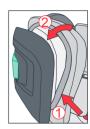



Assembly of Headrest Cover:

 Secure center section first by hooking lower edge of the center section of the Headrest Cover over the bottom of the foam at the center of the Headrest () and then pull top edge of the cover up and over the top of the foam (2) and then slide the fabric into the slot between the seat foam and the plastic at the center of the Headrest.







Instruction Manual Storage:

 Store the instruction manual under Seat Bottom Cover.

Instruction Manual Storage under Seat Bottom Cover



Warranty:

• At Carfoldio, we make innovative, high quality products for children. We warrant this product to be free from defects in material and workmanship existing at the time of manufacture for a period of one year from the date of initial purchase (sales receipt is required for proof of purchase). If such a defect is discovered during the limited warranty period, we will, at our sole option, repair or replace your product at no cost to you.

This limited warranty does not cover claims resulting from misuse, failure to follow the instructions on installation, maintenance and use, abuse, alteration, involvement in an accident, and normal wear and tear.

This limited warranty is exclusive and in lieu of any other warranty, written or oral, including but not limited to any express warranty of merchantability or fitness for a particular purpose. The duration of any implied warranties, including any implied warranty of merchantability or fitness for a particular purpose, is expressly limited to this limited warranty period.

Some states and countries do not allow limitations on how long an implied warranty lasts; therefore, the above limitations and exclusions may not apply to you.

Replacement Parts:

 For replacement parts or to purchase accessories, see the Customer Service Contact Information section.







Warranty (continued):

The customer's exclusive remedy for breach of this limited warranty or of any implied warranty or of any other obligation arising by operation of law or otherwise shall be limited as specified herein to repair or replacement, at our sole option. In any event, responsibility for special, incidental and consequential damages is expressly excluded.

Some states and other countries do not allow an exclusion or limitation of special, incidental or consequential damages, therefore, that limitation or exclusion may not apply to you.

This limited warranty gives you specific legal rights, and you may have other rights that vary from state to state and country to country.

For warranty service:

USA:

E-mail: support@mifold.com, Tel: 1-800-437-6540, or write to: Carfoldio Ltd. 10685-B Hazelhurst Dr., #17695 Houston, TX 77043. USA

Rest of the world except Canada:

E-mail: support@mifold.com, Tel: 0800 4714984 (from within the U.K.) Tel: +44 207 866 2385 (International) or write to: Carfoldio Ltd. Unit 2407, PO Box 6945 London, W1A 6US, England, U.K.







Product Registration:

• USA:

Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. In the USA, fill out the registration card attached to the hifold Booster Seat and mail today, or send your name, address, e-mail address if available, and the restraint's model number and date of manufacture to:

Carfoldio Ltd. 10685-B Hazelhurst Dr., #17695 Houston, TX 77043 USA

or call 1-800-437-6540

or register on-line at www.mifold.com/register

Rest of the world:

Register on-line at www.mifold.com/register or e-mail the restraint's model number and date of manufacture to support@mifold.com.

Model number and date of manufacture are on label on bottom of seat.

Recall Information:

USA:

- Visit www.mifold.com
- E-mail: support@mifold.com
- Call Carfoldio at 1-800-437-6540

or

 Call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1-800-424-9153) or log onto www.NHTSA.gov/recalls and click on "Car Seats"

Rest of the world:

Contact your local distributor or E-mail support@mifold.com.







This innovative product is protected by various patents and design registrations.

US 9,376,088 (B2) CA 2874810 (C) EP 2855214 (B1) KR 101626285 (B1) RU 201850188 CN 104640748 (B) ZA 201409040 (B) IL 230153 ES 2646918 (T3) JP 6388132 (B2) IN 2967KON2014 (A)

Other patents pending.

Customer Service Contact Information

USA:

Carfoldio Ltd. 10685-B Hazelhurst Dr., #17695 Houston, TX 77043 USA Tel: 1-800-437-6540

Rest of the world, except Canada:

Carfoldio Ltd.
Unit 2407, PO Box 6945
London, W1A 6US, England, U.K.
Tel: 0800 4714984 (from within the U.K.)
Tel: +44 207 866 2385 (International)

You can also contact us in the following ways:

support@mifold.com

y @mifoldBooster

www.mifold.com/contact

pinterest.com/mifold

facebook.com/mifold

instagram.com/mifold





Notes		



Quick Reference Guide

Set-up and Adjustment:

A WARNING

- Read the instruction manual fully before installing or using this booster seat.
- 1. Unbuckle Storage Strap.
- 2. Unfold and lock Headrest Sides.
- **3.** Unfold and lock Headrest into position.
- 4. Lift and lock Seat Back into vertical position.
- 5. Adjust hifold to fit your child:
 - a. Adjust Seat Bottom Sides to fit your child.
 - b. Adjust Seat Back Sides to fit your child.
 - c. Adjust Headrest Sides to fit your child.
- **6.** Buckle vehicle belt in front of child and through belt guides.
 - Adjust Seat Back to position Shoulder Belt Guide above your child's shoulder and full width of the shoulder belt on the shoulder.
- 7. Snugly adjust lap belt and then shoulder belt around child.



Fold-down - Compact Storage

- 1. Adjust Headrest Sides inwards.
- 2. Adjust Seat Back Sides inwards.
- 3. Adjust Seat Bottom Sides inwards.
- 4. Adjust Seat Back height down.
- 5. Fold Seat Back Sides inwards.
- 6. Unlock Seat Back and fold down.
- 7. Unlock and fold Headrest backwards.
- 8. Unlock and fold Headrest Sides inwards.
- 9. Buckle and tighten Storage Straps.

The hifold Booster Seat is now at its most compact size. Store hifold in a secure location such as the trunk, luggage compartment or storage area.








KEEP INSTRUCTIONS FOR FUTURE USE.

Store instruction manual under Seat Bottom Cover.

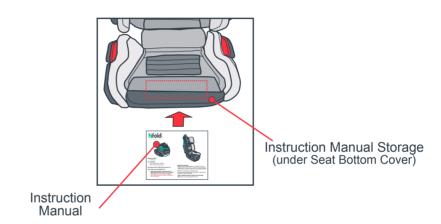

Carfoldio [™] and hifold[®] are registered trademarks of Carfoldio Ltd.

Manufactured and distributed By: Carfoldio Ltd.

www.mifold.com

Made in China © 2019 Carfoldio Ltd.

1423 Rev C