


SAVE THESE INSTRUCTIONS

A01 massage chair
Operation Instructions

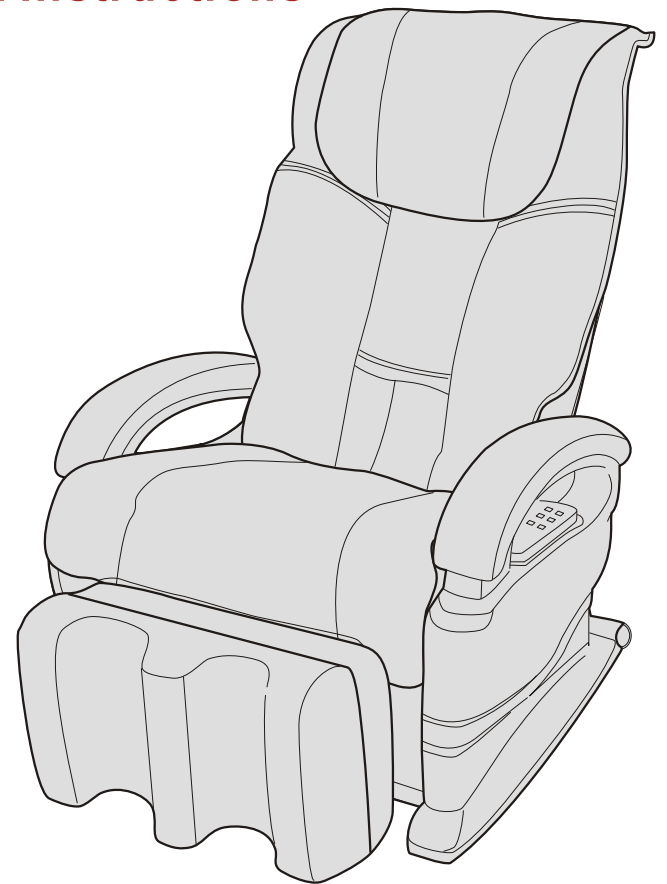

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

CONTENTS

Safety and maintenance	02
Name and function of components	04
Function & Efficacy	05
Method of usage	06
Product specification	08

Safety and maintenance



1. IMPORTANT SAFETY WARNING.

- Don't allow children to touch moveable part of this product.
- Please use well-grounding power supply suited to this product.
- Please pull out the plug after use or before cleaning to avoid injury or damage to the product.
- Please operate this product according to this manual instruction.
- Don't use accessories which are not recommended.
- Don't use this product outdoors.
- Please read this manual instruction carefully before operation.
- Any other usage that is not listed in this manual instruction is forbidden.
- 15 minutes of usage each time is recommended.
- Please don't use it if the leather is broken or damaged.
- Please don't use it if the cover or leather is damaged.
- Please don't use it if the radiator hole is covered or blocked.
- Please don't drop anything into this product.
- Please don't fall asleep while using this product.
- Please don't use it if drunk or feel unwell.
- Please don't use it within one hour after having meal.
- Please don't make the massage function too strong for avoiding injury.

2. Environment for usage.

- Please don't use it under high temperature and moist environment such as bathroom.
- Please don't use it immediately while the environmental temperature changes sharply.
- Please don't use it under heavy-dusty or caustic environment.
- Please don't use it where there is not enough space or not good ventilation.

3. People who are not suitable to use this product.

- People who are suffering from osteoporosis are not suitable to use this product.
- People who are suffering from heart disease or carrying electronic medical equipment such as heart pacemaker are not suitable to use this product.
- People who are suffering from fever are not suitable to use this product.
- Pregnant women or women that are in menses period are not suitable to use this product.
- People who got injured or skin disease are not suitable to use this product.

Safety and maintenance

- Children under twelve or people who are not able to operate this product are not suitable to use this product.
- People who are told by doctor to have rest or people who feel unwell are not suitable to use this product.
- People whose bodies are wet are forbidden to use this product.
- People who is sensitive to heat.

4. Safety.

- Check the voltage if it is suitable to the specification of this product.
- Don't use wet hand to pull the plug.
- Don't make water go inside this product to avoid electric shock or cause damage to this product.
- Don't damage the wires or change the circuit of this product.
- Don't use wet cloth to clean the electric parts such as switch and plug.
- Be away from this product under power cut state to avoid injury if the power comeback suddenly.
- Stop using this product while it works abnormal, and please consult local agent immediately.
- Stop using this product if you feel unwell, and please consult health care doctor.


5. Maintenance.

- This product should be maintained by certain appointed agents, users are prohibited to disassemble or maintain by themselves.
- Please don't forget to cut the power after usage.
- Don't use this product if the socket looses.
- If this product will be left unused for long, please curl up the wires and reserve this product in dry and dustless environment.
- Don't reserve this product under high temperature or near fire and avoid longtime direct sunshine.
- Please clean this product by dry cloth. Don't use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, it is not necessary to be specially maintained.
- Don't use edged res to thrust this product.
- Don't roll or pull this product above uneven ground, it should be lifted before moving.
- Please use it intermittently; don't make this product work continuously for long.


6. Solution of ordinary malfunctions.

- It is nature movement voice if the motor sounds while in usage.
- If the controller can't work normally, please check the plug and socket if they are connected strongly and make sure the switch is turned on.
- If the rated working time is over, the product will automatically activate the power-off button; If this product works continuously for long, the temperature protector will make the product automatically power-off, it should be used again after half an hour's rest.

Name and function of components

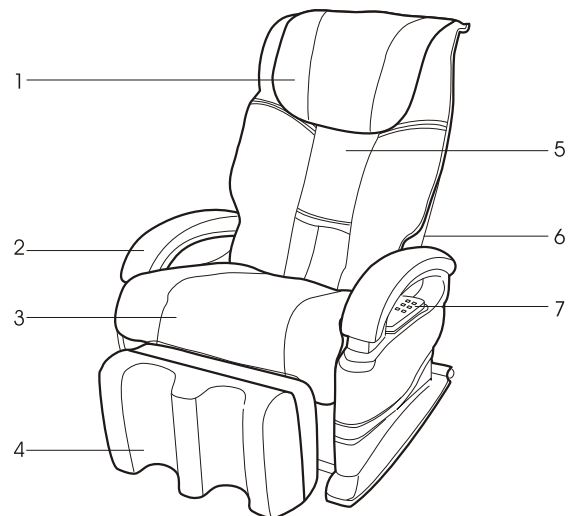

1. Head pad
2. Armrest
3. Seat cushion
4. Calf support
5. Back cushion
6. Back cover
7. Control box

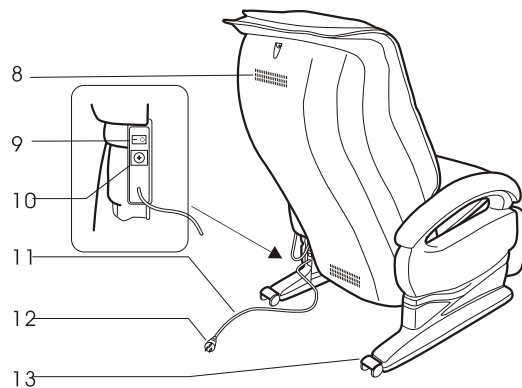

Function & Efficacy

Function

- Equipped with a pair of massage heads in the neck, shoulder, back and the waist.
- Equipped with three kneading massage modes of automatic, clockwise and anti-clockwise with three levels of speed.
- Designed with vibration massage function for the buttocks with three levels of strengths.
- Designed with tapping massage function for the thigh area with seven automatically changed modes and three levels of speed.
- Designed with kneading massage function for the calf rest with three levels of strength.
- The calf rest can be power-lifted and relined separately or together with the backrest.

Efficacy

- Dispel fatigue.
- Accelerate blood circulation.
- Alleviate muscle fatigue.
- Relax tense muscle.
- Alleviate nerve aches.
- Alleviate muscle aches.

Method of usage

1.The usage of the control

- TO START OR STOP OVERALL MASSAGE

POWER: to start overall massage and automatic massage with its indicator on, which goes out when you press any function button to choose one single massage, including the massage of your neck, shoulder, back, waist, buttocks, thigh and calf.

AUTO: If the machine is in its manual overall massage state, it returns to automatic overall massage state when you press this button.

STOP: to stop its overall massage. The machine will be switched to a standby state and the indicator stops shining.

- neck-shoulder kneading

NECK-SHOULDER: to start neck-shoulder kneading which has four options: automatic, clockwise, anti-clockwise and stop.

SPEED : for speed selection: slow, medium, fast. It is invalid when the machine is in its automatic state.

- back-waist kneading

BACK-WAIST: to start back-waist kneading which has four options: automatic, clockwise, anti-clockwise and stop. SPEED: for speed selection: slow, medium, fast. It is invalid when the machine is in its automatic state.

- buttocks kneading

BUTTOCKS: to start buttocks vibrating.

INTENSITY: for intensity selection: weak, medium, and strong.

- Thigh knocking

THIGH: to start thigh knocking.

INTENSITY: for intensity selection: weak, medium, and strong.

- Calf kneading

CALF: to start calf kneading. Press this button to switch speed automatically, press the 'speed' button to choose a specific speed.

SPEED: for speed selection: slow, medium, fast.

THE ASCENDING AND DESCENDING OF THE BACK AND CALF SUPPORT

6.the ascending and descending of the calf support

ASCENDING : press this button to move the calf support upward slowly with the indicator on; release this button to stop the calf support, with the indicator out.

Method of usage


When the calf support reaches its highest position, the 'upward' indicator shines.

DESCENDING : press this button to move the calf support downward slowly, with the indicator on; release this button to stop the calf support, with the indicator out. When the calf support reaches its lowest position, the 'downward' indicator shines.

- the ascending and descending of the back

ASCENDING : press this button to move the back upward slowly with the indicator on; release this button to stop the back, with the indicator out. When the back reaches its highest position, the 'upward' indicator shines.


DESCENDING : press this button to move the back downward slowly, with the indicator on; release this button to stop the back, with the indicator out. When the back reaches its lowest position, the 'downward' indicator shines.

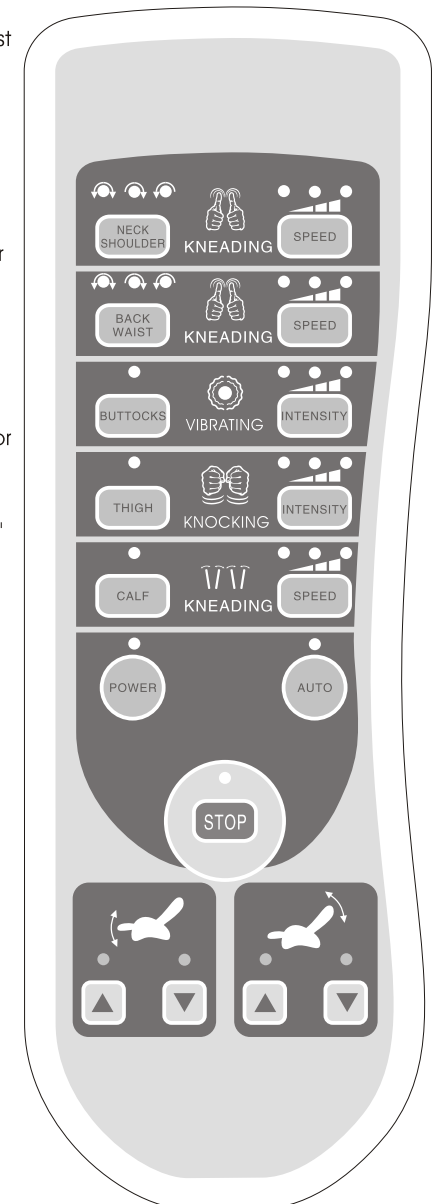

Method of usage

2. Open and pucker the backrest before operating.


Pull the backrest up until it touches the backrest pucker lock and sounds “KATA”, then the backrest is locked. The backrest can be puckered to its original state by treading the lock down.

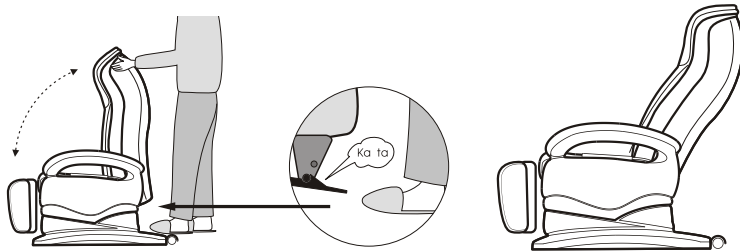

3. Method to remove and use the pillow and backrest cushion.

It can reduce the strength by using the pillow when massaging neck & shoulder, you can choose to use it (recommended) or not up to your demands. The backrest cushion and the backrest are connected by slide fastener, (1). The pillow and backrest cushion are connected by slide fastener, (2).

Warning: It is forbidden to use the product if the backrest cushion is lifted to avoid causing injury to you.

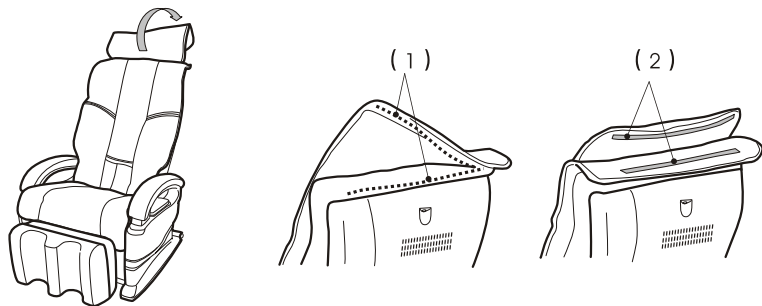

Product specification

Model: A01

Description: Massage chair

Voltage: 110-120V~ 60Hz ☐

220-240V~ 50Hz/60Hz ☐

Power: 150W

Safety design: Class I

Rated working time: 15 minutes

WARRANTY CARD

ART. NAME		DEALER(SERVICE CENTER)
MODEL		
CUSTOMER		
ADDRESS		
TEL		
DATE OF PURCHASE		EXPIRY :ONE YEAR FROM DATE OF PURCHASE

if malfunction happens within warranty period (one year) and under the following conditions, this product will be repaired for free:

1. there are broken parts or malfunction when purchasing this machine.
2. damage that occurs when it is being used under the guidance of the operation instructions (but the manufacturer is not responsible for damage resulting from misuse, operation without the guidance of the instructions, or natural disasters)
3. the damage of the nonconsumptive parts.