


AUDI TT REPLACEMENT TAIL LIGHT SEAL INSTALLATION

To install the seals we recommend using rubber trim adhesive. This makes the installation much easier and fits the seals tighter to the tail lights.

First clean the rubber seals using rubbing alcohol or prep cleaner prior to applying the rubber trim adhesive. Also clean the surface of the tail lights where the seals mount to. Apply the adhesive onto the rubber seal where it fits to the back of the tail light and then apply adhesive to the corresponding area on the back of the tail light seal. Make sure not to use only small amount of the adhesive and spread it across the surface carefully to achieve a thin layer of glue. Allow the adhesive to dry per the instructions on the tube of adhesive.

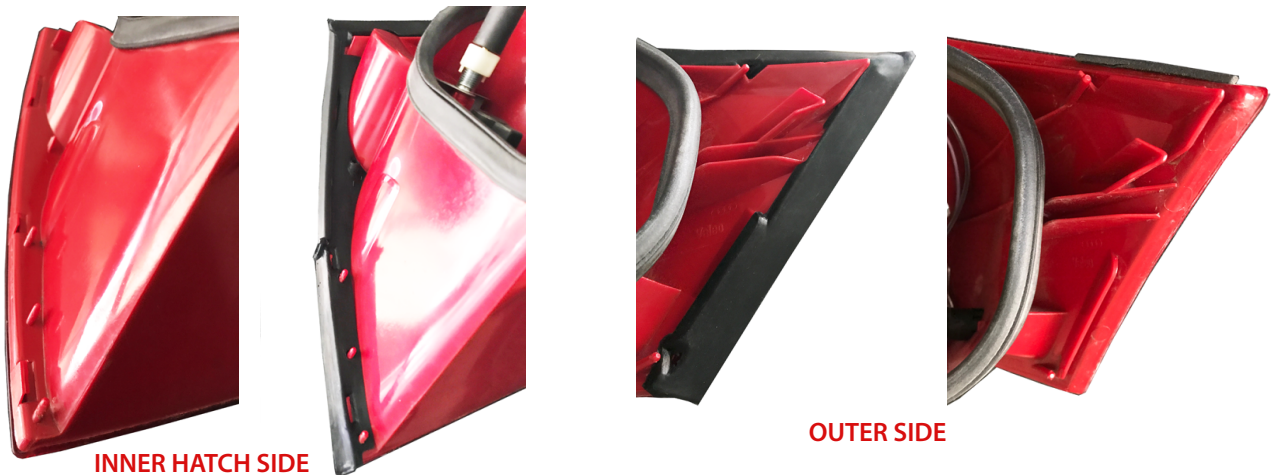

We recommend installing the seals starting from the lower corner on the inner side that faces the hatch. Make sure to check the upper corner so that it fits tight while pushing the seal downwards towards the lower corner. Once the inner section fits snug continue installing the seal across the top of the tail light making sure that it is properly in the channel and push it into the channel to fit snug. Continue around the outer top corner of the tail light and then fit the seal over the channel on the outer side of the tail light making sure the male plastic pin goes into the mounting hole on the seals.

When the seal is properly fitted to the tail light the 6 new metal push on clips can be fitted. Using a small socket helps to make installation easier by using it to push the clips onto the plastic pins. Use care not to break the pins. This is optional because by using adhesive the clips are not really necessary.