

MultiTech[®]
Systems



QuickCarrier™ USB-D HSPA+

MTD-H5 User Guide

QuickCarrier USB-D MTD-H5 User Guide

Models: MTD-H5

Part Number: S000551, Version 1.2.3

Copyright

This publication may not be reproduced, in whole or in part, without the specific and express prior written permission signed by an executive officer of Multi-Tech Systems, Inc. All rights reserved. **Copyright © 2013 by Multi-Tech Systems, Inc.**

Multi-Tech Systems, Inc. makes no representations or warranties, whether express, implied or by estoppels, with respect to the content, information, material and recommendations herein and specifically disclaims any implied warranties of merchantability, fitness for any particular purpose and non-infringement.

Multi-Tech Systems, Inc. reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Multi-Tech Systems, Inc. to notify any person or organization of such revisions or changes.

Trademarks

QuickCarrier is a trademark. The Multi-Tech logo is a registered trademark of Multi-Tech Systems, Inc. All other brand and product names are trademarks or registered trademarks of their respective companies.

Legal Notices

The Multi-Tech products are not designed, manufactured or intended for use, and should not be used, or sold or re-sold for use, in connection with applications requiring fail-safe performance or in applications where the failure of the products would reasonably be expected to result in personal injury or death, significant property damage, or serious physical or environmental damage. Examples of such use include life support machines or other life preserving medical devices or systems, air traffic control or aircraft navigation or communications systems, control equipment for nuclear facilities, or missile, nuclear, biological or chemical weapons or other military applications ("Restricted Applications"). Use of the products in such Restricted Applications is at the user's sole risk and liability.

MULTI-TECH DOES NOT WARRANT THAT THE TRANSMISSION OF DATA BY A PRODUCT OVER A CELLULAR COMMUNICATIONS NETWORK WILL BE UNINTERRUPTED, TIMELY, SECURE OR ERROR FREE, NOR DOES MULTI-TECH WARRANT ANY CONNECTION OR ACCESSIBILITY TO ANY CELLULAR COMMUNICATIONS NETWORK. MULTI-TECH WILL HAVE NO LIABILITY FOR ANY LOSSES, DAMAGES, OBLIGATIONS, PENALTIES, DEFICIENCIES, LIABILITIES, COSTS OR EXPENSES (INCLUDING WITHOUT LIMITATION REASONABLE ATTORNEYS FEES) RELATED TO TEMPORARY INABILITY TO ACCESS A CELLULAR COMMUNICATIONS NETWORK USING THE PRODUCTS.

Contacting Multi-Tech

Knowledge Base

The Knowledge Base provides immediate access to support information and resolutions for all Multi-Tech products. Visit <http://www.multitech.com/kb.go>.

Support Portal

To create an account and submit a support case directly to our technical support team, visit: <https://support.multitech.com>.

Support

Business Hours: M-F, 8am to 5pm CT

Country	By Email	By Phone
Europe, Middle East, Africa:	support@multitech.co.uk	+(44) 118 959 7774
U.S., Canada, all others:	support@multitech.com	(800) 972-2439 or (763) 717-5863

Warranty

To read the warranty statement for your product, visit www.multitech.com/warranty.go. For other warranty options, visit www.multitech.com/es.go.

World Headquarters

Multi-Tech Systems, Inc.
2205 Wooddale Drive, Mounds View, MN 55112
Phone: (800) 328-9717 or (763) 785-3500
Fax (763) 785-9874

Contents

Product Overview	5
Overview	5
Documentation	5
MTD-H5 Specifications	5
Dimensions	7
LEDs	7
Link Status LED	7
Signal Strength LEDs	7
Programming LEDs	8
Turning the Device On or Off	8
Power Draw	8
Safety Notices and Warnings	9
General Safety	9
Radio Frequency (RF) Safety	9
Sécurité des fréquences radio	9
Interference with Pacemakers and Other Medical Devices	10
Potential interference	10
Precautions for pacemaker wearers	10
Device Maintenance	10
User Responsibility	11
Installing and Removing a SIM Card	12
Installing a SIM Card	12
Removing a SIM Card	12
Activation Information	14
Account Activation for Cellular Devices	14
Device Phone Number	14
Using Linux	15
Shell Commands	15
Testing Serial Ports	15
Create a PPP Connection	15
Example	15
Basic Operations	17
Interacting with Your Device Overview	17
Related Documentation	17
Before You Begin	17
Using Command Mode and Online Data Mode	17
Verifying Signal Strength	18

Example	19
Checking Network Registration.....	19
Verify that Device Detects a Valid SIM Card.....	19
Reading, Writing, and Deleting Messages	19
Reading Text Messages.....	19
Sending Text Messages.....	20
Deleting Messages	20
Regulatory Statements	22
47 CFR Part 15 Regulation Class B Devices	22
Industry Canada Class B Notice.....	22
EMC, Safety, and R&TTE Directive Compliance	22
International Modem Restrictions	23
Other Countries.....	23
Environmental Notices.....	24
Waste Electrical and Electronic Equipment Statement	24
WEEE Directive.....	24
Instructions for Disposal of WEEE by Users in the European Union	24
Restriction of the Use of Hazardous Substances (RoHS)	25
REACH Statement	26
Registration of Substances.....	26
Substances of Very High Concern (SVHC)	26
Information on HS/TS Substances According to Chinese Standards	27
Information on HS/TS Substances According to Chinese Standards (in Chinese)	28
Index.....	29

Product Overview

Overview

The QuickCarrier USB-D is a cellular dongle designed and built for M2M applications.

Documentation

The following documentation is available on the Multi-Tech Installation Resources website at www.multitech.com/setup/product.go.


Document	Description
QuickCarrier USB-D MTD-H5 User Guide	This document. Provides an overview, specification, safety and regulatory information, and SIM cards and basic operations.
USB Driver Installation Guide for H5 and G3 Devices	Instructions for installing USB drivers on Linux and Windows Systems (Part number S000553)
HSPA+ AT Commands Reference Guide	Configure your device with the HSPA+ AT Commands Reference Guide (Part number S000528)

MTD-H5 Specifications

Category	MTD-H5-xx
Features	Penta-band HSPA+: 850/900/1700/1900/2100 MHz
	Quad-band GSM/GPRS/EDGE: 850/900/1800/1900 MHz
Speed	
Data Speed	Up to 21.0 Mbps downlink/5.76 Mbps uplink
Interface, Antenna, SIM Holder	
USB Interface	USB 2.0 high speed compatible
Antenna	Internal
SIM Holder	Standard Mini SIM 1.8/3Volt
Environment	
Operating Temperature	-40° C to +50° C
Storage Temperature	-40° C to +85° C
Humidity	15%-93% RH, non-condensing
Power Requirements	
Operating Voltage	5 volts from USB port
Input Power	Via USB Bus
SMS	

Category	MTD-H5-xx
SMS	Text mode and PDU mode per 3GPP TS27.005 set for SMS and CBS (cell broadcast)
	Mobile-Terminated SMS
	Mobile-Originated SMS
Certifications and Compliance	
EMC Compliance	FCC Part 15 Class B
	EN301 489-1
	EN301 489-7
	EN301 489-24
Radio Compliance	FCC Part 22
	FCC Part 24
	FCC Part 27
	RSS 132
	RSS 133
	RSS 139
Safety Compliance	UL 60950-1
	cUL 60950-1
	IEC 60950-1

Dimensions

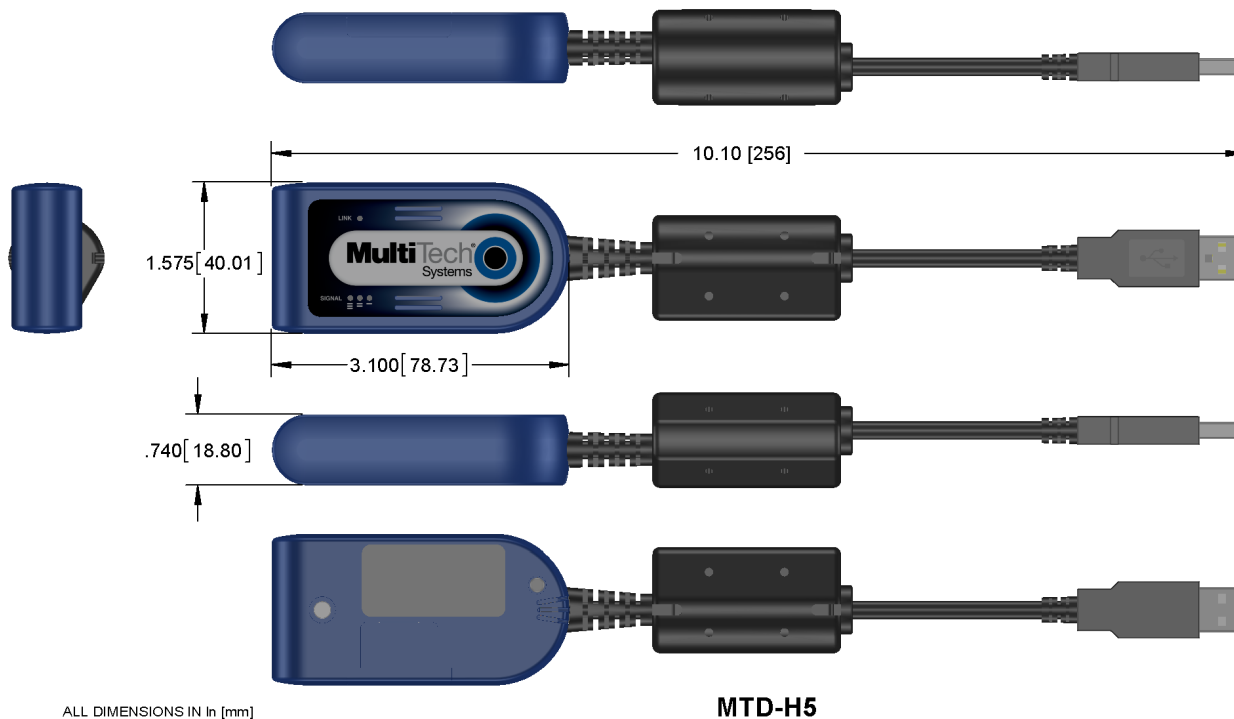

LEDs

The QuickCarrier USB-D HSPA+ includes four LEDs; the three signal status LEDs are programmable.

Link Status LED

Link Status	Description	
Off	No power to unit.	
On	Continuously lit	Powered on.
	Slow blink (-0.2Hz)	Registered on network.

Signal Strength LEDs

Signal Strength	Description
One bar	Weak signal
Two bars	Medium signal
Three bars	Strong signal

Note: If the signal strength LEDs are not working as expected and you recently installed or updated device drivers, disconnect the device from the USB port for a few seconds and reconnect to the same USB port.

Programming LEDs

You can program the signal strength LEDs with the AT#GPIO command. For details, refer to the HSPA+ AT Command Reference Guide

Turning the Device On or Off

This USB-powered device does not have a power button. Connecting the device to a computer's USB port turns it on. Disconnecting it or shutting off the computer, turns it off.

Note: When reconnecting the device, use the same USB port that you used when installing drivers. Otherwise, you may need to re-install the driver.

Power Draw

Radio Protocol	Average Peak Current Amplitude Duration during Radio Registration (Amps)	Peak Current Pulse Duration during Radio Registration	Time (sec) to Peak Registration Current Pulse	Registered Power Radio Idle, SIM installed and connected to tower (Amps)	Total InRush Charge measured in Coulombs	Total InRush Charge Duration during powerup
5 Volts						
GSM850	0.081	0.350	29	0.054	0.670mC	600uS
HSDPA	N/A	N/A	29	0.054	N/A	N/A

Radio Protocol	Average Measured Current (Amps) at Low Power	Low Power MS Xmit or Power Cntrl Level	Low Power GSM Xmit or HSDPA CH Power Meas. (Avg.)	Average Measured Current (Amps) at Half Power	Half Power MS Xmit or Power Cntrl Level	Half Power GSM Xmit or HSDPA CH Power Meas. (Avg.)	Average Measured Current (Amps) at Max Power	Max Power MS Xmit or Power Cntrl Level	Max Power GSM Xmit or HSDPA CH Power Meas. (Avg.)
5 Volts									
GSM850	0.088	28	2.6	0.091	15	10.4	0.252	0	30.4
HSDPA	0.137	All Down	-40	0.146	Active	10.21	0.480	All Up	27.6

Note:

- **Maximum:** The continuous current during maximum data rate with the radio transmitter at maximum power.
- **Inrush Current:** The input current during power up, or a reset.
- **Registered Power:** Registered to tower. Receive active for SMS. No data is sent.

Safety Notices and Warnings

General Safety

The modem is designed for and intended to be used in fixed and mobile applications. Fixed means the device is physically secured at one location and cannot be easily moved to another location. Mobile means the device is used in other than fixed locations.

CAUTION: Maintain a separation distance of at least 20 cm (8 inches) between the transmitter's antenna and the body of the user or nearby persons. The modem is not designed for or intended to be used in portable applications within 20 cm (8 inches) of the user's body.

Attention: Maintenir une distance d'au moins 20 cm (8 po) entre l'antenne du récepteur et le corps de l'utilisateur ou à proximité de personnes. Le modem n'est pas conçu pour, ou destinés à être utilisés dans les applications portables, moins de 20 cm du corps de l'utilisateur.

Radio Frequency (RF) Safety

Due to the possibility of radio frequency (RF) interference, it is important that you follow any special regulations regarding the use of radio equipment. Follow the safety advice given below.

- Operating your device close to other electronic equipment may cause interference if the equipment is inadequately protected. Observe any warning signs and manufacturers' recommendations.
- Different industries and businesses restrict the use of cellular devices. Respect restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in process. Follow restrictions for any environment where you operate the device.
- Do not place the antenna outdoors.
- Switch OFF your wireless device when in an aircraft. Using portable electronic devices in an aircraft may endanger aircraft operation, disrupt the cellular network, and is illegal. Failing to observe this restriction may lead to suspension or denial of cellular services to the offender, legal action, or both.
- Switch OFF your wireless device when around gasoline or diesel-fuel pumps and before filling your vehicle with fuel.
- Switch OFF your wireless device in hospitals and any other place where medical equipment may be in use.

Sécurité des fréquences radio

En raison de la possibilité d'interférences de radiofréquence (RF), il est important que vous suiviez une quelconque réglementation concernant l'utilisation du matériel radio. Suivez les conseils de sécurité ci-dessous.

- Fonctionnement de votre appareil à proximité d'autres appareils électroniques peuvent causer des interférences si l'équipement est insuffisamment protégé. Respectez les panneaux d'avertissement et les recommandations du fabricant.
- Différentes industries et les entreprises limitent l'utilisation des appareils cellulaires. Respectez les règlements sur l'utilisation des équipements radio dans les dépôts de carburant, les usines chimiques, ou lorsque des opérations de dynamitage sont en cours. Suivez restrictions pour n'importe quel environnement où vous utilisez l'appareil.
- Ne pas placer l'antenne à l'extérieur.
- Éteignez votre appareil sans fil dans un avion. Utilisant des dispositifs électroniques portables dans un avion peut mettre en danger le fonctionnement de l'avion, peut perturber le réseau cellulaire, et est illégal. Le

non-respect de cette restriction peut entraîner la suspension ou le refus des services cellulaires au contrevenant, une action en justice, ou les deux.

- Éteignez votre appareil sans fil lorsque autour de l'essence ou pompes diesel-carburant et avant de remplir votre véhicule avec du carburant.
- Éteignez votre appareil sans fil dans les hôpitaux et tout autre endroit où l'équipement médical peut être utilisé.

Interference with Pacemakers and Other Medical Devices

Potential interference

Radiofrequency energy (RF) from cellular devices can interact with some electronic devices. This is electromagnetic interference (EMI). The FDA helped develop a detailed test method to measure EMI of implanted cardiac pacemakers and defibrillators from cellular devices. This test method is part of the Association for the Advancement of Medical Instrumentation (AAMI) standard. This standard allows manufacturers to ensure that cardiac pacemakers and defibrillators are safe from cellular device EMI.

The FDA continues to monitor cellular devices for interactions with other medical devices. If harmful interference occurs, the FDA will assess the interference and work to resolve the problem.

Precautions for pacemaker wearers

If EMI occurs, it could affect a pacemaker in one of three ways:

- Stop the pacemaker from delivering the stimulating pulses that regulate the heart's rhythm.
- Cause the pacemaker to deliver the pulses irregularly.
- Cause the pacemaker to ignore the heart's own rhythm and deliver pulses at a fixed rate.

Based on current research, cellular devices do not pose a significant health problem for most pacemaker wearers. However, people with pacemakers may want to take simple precautions to be sure that their device doesn't cause a problem.

- Keep the device on the opposite the side of the body from the pacemaker to add extra distance between the pacemaker and the device.
- Avoid placing a turned-on device next to the pacemaker (for example, don't carry the device in a shirt or jacket pocket directly over the pacemaker).

Device Maintenance

When maintaining your device:

- Do not attempt to disassemble the device. There are no user serviceable parts inside.
- Do not expose your device to any extreme environment where the temperature or humidity is high.
- Do not expose the device to water, rain, or spilled beverages. It is not waterproof.
- Do not place the device alongside computer discs, credit or travel cards, or other magnetic media. The information contained on discs or cards may be affected by the device.
- Using accessories, such as antennas, that Multi-Tech has not authorized or that are not compliant with Multi-Tech's accessory specifications may invalidate the warranty.

If the device is not working properly, contact Multi-Tech Technical Support.

User Responsibility

Respect all local regulations for operating your wireless device. Use the security features to block unauthorized use and theft.

Installing and Removing a SIM Card


Installing a SIM Card

To install a SIM Card in an MTD-H5:


Warning: If the device is connected to a computer or power supply, disconnect it. Inserting or removing a SIM card with the device powered may harm the SIM card and the device.



1. Remove the SIM cover from the back of the device. If you have trouble sliding the SIM cover, use a flat-blade screwdriver in the slot on the SIM cover to slide it out.

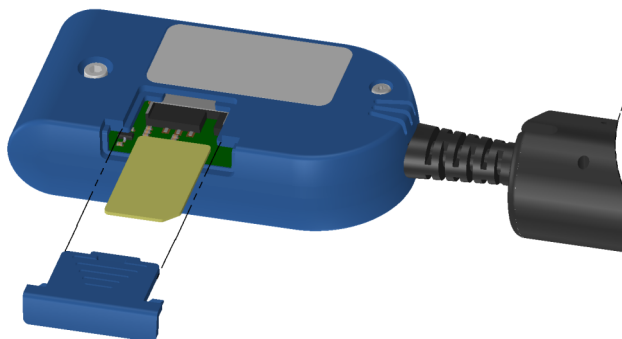

2. Insert the SIM card into the card holder with the contact side facing down as shown.

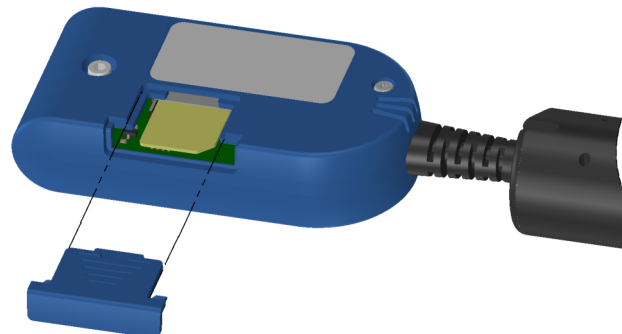

3. Verify that the SIM card fits into the holder properly and replace the cover.

Removing a SIM Card

To remove a SIM card:

Warning: If the device is connected to a computer or power supply, disconnect it. Inserting or removing a SIM card with the device powered may harm the SIM card and the device.



1. Remove the SIM cover from the back of the device. If you have trouble sliding the SIM cover, use a flat-blade screwdriver in the slot on the SIM cover to slide it out.
2. Slide the SIM card out.
3. Replace the SIM cover.

Activation Information

Account Activation for Cellular Devices

Some Multi-Tech cellular modems are pre-configured to operate on a specific cellular network. Before you can use the modem, you must set up a cellular data account with your service provider. Each service provider has its own process for adding devices to their network. Refer to Multi-Tech's Cellular Activation site <http://www.multitech.com/activation.go> for step-by-step instructions on activating your cellular modem with your service provider.

Device Phone Number

Every device has a unique phone number. Your service provider supplies a phone number when you activate your account, or if your device has a SIM card, the phone number may be on it. Wireless service provider implementation may vary. Consult with your service provider to get the phone number for your device.

Using Linux

Shell Commands

Testing Serial Ports

To test the serial ports created by the driver, type in a shell:

```
# cat /dev/ttyACM0 &
# echo -en "ATE0\r" > /dev/ttyACM03
# echo -en "AT\r" > /dev/ttyACM0
```

Note: Sending ATE0 is required, to avoid issues in the terminal output. It prevents the sending/receiving spurious characters to/from the modem when used with the Linux commands “echo” and “cat”

You can perform the same test using the other interface (ttyACM1 ttyACM3).

Create a PPP Connection

Most recent Linux distributions have GUI tools for creating PPP connections; the following instructions are for creating a PPP connection through command line interface.

PPP support must be compiled into the kernel; pppd and chat programs are also required.

pppd needs two scripts: the first script performs the environment setting and calls the second script, which is used by the chat program. For creating a PPP connection type:

```
# pppd file /etc/pppd_script &
```

Example

```
# Debug info from pppd
debug
#kdebug 4
# Most phones don't reply to LCP echos
lcp-echo-failure 3
lcp-echo-interval 3
# Keep pppd attached to the terminal
# Comment this to get daemon mode pppd
nodetach
# The chat script (be sure to edit that file, too!)
connect "/usr/sbin/chat -v -f /etc/chatscripts/hsdpa_connect/etc/chatscripts/gprs_connect"
# Serial Device to which the modem is connected
/dev/ttyACMttyACM
# Serial port line speed
115200
dump
# The phone is not required to authenticate
#noauth
user <insert here the correct username for authentication>
name <insert here the name of the connection>
password <insert here the correct password for authentication>
```

```
# If you want to use the HSDPAGPRS link as your gateway
defaultroute
# pppd must not propose any IP address to the peer
#noipdefault
ipcp-accept-local
ipcp-accept-remote
# Keep modem up even if connection fails
#persist
# Hardware flow control
crtscts
# Ask the peer for up to 2 DNS server addresses
usepeerdns
# No ppp compression
novj
nobsdcomp
novjcomp
nopcomp
noaccomp
# For sanity, keep a lock on the serial line
lock
# Show password in debug messages
show-password
```

This script calls the option *connect* using the script *hsdpa_connectgprs_connect*, for example: `#!/bin/sh`

```
# Connection to the network
" AT+CGDCONT=1,"IP","<insert here the correct APN provided by
your network operator>"# Connection to the network
" AT+CGDCONT=1,"IP","<insert here the correct APN provided by
your network operator>"
# Dial the number.
OK ATD*99***1#ATD*99***1#
# The modem is waiting for the following answer
CONNECT "
```

After launching a PPP connection is possible to use ftp protocol or other utilities that allow the access to the Internet.

Basic Operations

Interacting with Your Device Overview

This section describes how to use AT commands to interact with your device. Using terminal software such as Kermit, you can issue AT commands to communicate with and configure your modem. The AT commands let you establish, read and modify device parameters and help you control how the device operates. This section documents basic interactions with your device, such as verifying signal strength and network registrations, sending and reading SMS text messages, and sending and receiving data.

Generally, USB modems are used as unintelligent bit pipes. In Windows, this means you create a dial-up network connection that uses the Windows IP stack to use the modem to create a PPP connection to the cellular network. The modem is assigned an IP address from the cellular carrier. This connection provides Internet access and is the basis for TCP/IP communication for sending and receiving email, creating TCP/UDP Sockets, or putting and getting files from an FTP server.

In Linux, PPPD is used to dial the modem and create the connection to the cellular TCP/IP network. This provides Internet access for sending and receiving email, creating TCP/UDP Sockets, or putting and getting files from an FTP server.

Related Documentation

Related documentation for using HSPA+ H5 devices:

- [HSPA-H5 AT Commands Reference Guide \(S000528\)](#) provides for additional information on AT commands available for your device. The Introduction chapter describes command formatting, syntax, and other basic information.
- [Configuring Devices: Using AT RUN, Setting up Digital Voice Interface, and Configuring Ports Reference Guide \(S000552\)](#).

Before You Begin

Before you begin:

- If you have not done so, install any drivers. Refer to the separate driver installation guide for your device.
- Power up your device and ensure it is connected to the computer that you use to issue AT commands.
- Install terminal software that can communicate with the device, such as HyperTerminal, TerraTerm, Kermit, or Putty.

Using Command Mode and Online Data Mode

Modems have two operation modes, command and online data. When you power up the modem it is in command mode and ready to accept AT commands.

Use AT commands to communicate with and configure your modem. They allow you to establish, read, and modify device parameters and control how the modem works. The device can also generate responses to AT commands that help determine the modem's current state.

If the modem is in online data mode, it only accepts the Escape command (+++).

To send the modem AT Commands from terminal emulation software, set the software to match the modem's default data format, which is:

- Speed: 115,200 bps
- Data bits: 8
- Parity: none
- Stop bit: 1
- Flow control: hardware

To confirm you are communicating with the device:

- Type **AT** and press **Enter**.

If the device responds with OK, you are communicating with the device.

Verifying Signal Strength

To verify the device signal strength, enter:

AT+CSQ

The command indicates signal quality, in the form:

+CSQ: <rssi>,<ber>

Where:

<rssi>	Received signal strength indication.
0	(-113) dBm or less
1	(-111) dBm
2-30	(-109) dBm - (-53) dBm / 2 dBm per step
31	(-51) dBm or greater
99	Not known or not detectable
<ber>	Bit error rate, in percent
0	Less than 0.2%
1	0.2% to 0.4%
2	0.4% to 0.8%
3	0.8% to 1.6%
4	1.6% to 3.2%
5	3.2% to 6.4%
6	6.4% to 12.8%

7	More than 12.8%
99	Not known or not detectable

Note: Signal strength of 10 or higher is needed for successful packet data sessions.

Example

A example response to AT+CSQ:

```
+CSQ: 15,1
```

Checking Network Registration

Before establishing a packet data connection, verify the is device registered on the network. To do this enter the network registration report read command:

```
AT+CREG?
```

If the device returns:

```
+CREG: 0,1
```

The device is registered.

If the device returns:

```
+CREG: 0,2
```

The device is in a network searching state.

Verify that Device Detects a Valid SIM Card

If your device uses a SIM card, use the query SIM status command to verify if the device detects the SIM card. To do this, enter:

```
AT#QSS?
```

If the device detects that SIM card, it responds with one of the following:

Response	Description
#QSS: 2, 1	SIM inserted
#QSS: 2, 2	SIM inserted and PIN unlocked.
#QSS: 2, 3	SIM inserted and ready.

If your device does not reply with one of those responses, verify that the SIM card is properly inserted.

Reading, Writing, and Deleting Messages

Reading Text Messages

To read a text message in text mode:

1. Put the device in text mode.

Enter: AT+CMGF=1

2. Read message.

Enter: AT+CMGR=1

Example response:

```
+CMGR: "REC UNREAD","+16155554562z`z","", "13/09/05,13:39:40-20"
```

How are you?

OK

Sending Text Messages

To send a text message in text mode:

1. Put the device in text mode.

Enter:

AT+CMGF=1

The device responds.

OK

2. Enter the recipient's number and your message.

Enter:

AT+CMGS="#####"

>Your message here

where ##### is the recipient's number.

3. Send the message.

Enter CTRL+Z.

The device responds:

+CMGS: 255

OK

For example:

AT+CMGF=1

OK

AT+CMGS="6155554563"

> How are you? <CTRL+Z to send>

+CMGS: 255

OK

Deleting Messages

To delete one text message, enter:

AT+CMGD=I,#

where I is the index in the select storage and # is the delflag option. Enter:

0 Deletes message in the specified index.

- 1 Deletes all read messages. Leaves unread messages and stored device-originated messages.
- 2 Deletes all read and sent device-originated messages. Leaves unread messages and unsent device-originated messages.
- 3 Deletes all read messages and sent and unsent device-originated messages. Leaves unread messages.
- 4 Deletes all messages.

For example:

```
AT+CMGD=1 (delete message at index 1)
AT+CMGD=2 (delete message at index 2 )
AT+CMGD=1,0
AT+CMGD=1,1
AT+CMGD=1,2
AT+CMGD=1,3
AT+CMGD=1,4
```

Regulatory Statements

47 CFR Part 15 Regulation Class B Devices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Industry Canada Class B Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement Canadien sur le matériel brouilleur.

This device complies with Industry Canada RSS Appliance radio exempt from licensing. The operation is permitted for the following two conditions:

1. the device may not cause harmful interference, and
2. the user of the device must accept any interference suffered, even if the interference is likely to jeopardize the operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

EMC, Safety, and R&TTE Directive Compliance



The CE mark is affixed to this product to confirm compliance with the following European Community Directives:

Council Directive 2004/108/EC of 15 December 2004 on the approximation of the laws of Member States relating to electromagnetic compatibility;

and

Council Directive 2006/95/EC of 12 December 2006 on the harmonization of the laws of Member States relating to electrical equipment designed for use within certain voltage limits;

and

Council Directive 1999/5/EC of 9 March 1999 on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

International Modem Restrictions

Some dialing and answering defaults and restrictions may vary for international modems. Changing settings may cause a modem to become non-compliant with national regulatory requirements in specific countries. Also note that some software packages may have features or lack restrictions that may cause the modem to become non-compliant.

Other Countries

The above country-specific information does not cover all countries with specific regulations; they are included to show you how each country may differ. If you have trouble determining your own country's requirements, check with Multi-Tech's Technical Support for assistance.

Environmental Notices

Waste Electrical and Electronic Equipment Statement

WEEE Directive

The WEEE Directive places an obligation on EU-based manufacturers, distributors, retailers, and importers to take-back electronics products at the end of their useful life. A sister directive, ROHS (Restriction of Hazardous Substances) complements the WEEE Directive by banning the presence of specific hazardous substances in the products at the design phase. The WEEE Directive covers all Multi-Tech products imported into the EU as of August 13, 2005. EU-based manufacturers, distributors, retailers and importers are obliged to finance the costs of recovery from municipal collection points, reuse, and recycling of specified percentages per the WEEE requirements.

Instructions for Disposal of WEEE by Users in the European Union

The symbol shown below is on the product or on its packaging, which indicates that this product must not be disposed of with other waste. Instead, it is the user's responsibility to dispose of their waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or where you purchased the product.

July, 2005



Restriction of the Use of Hazardous Substances (RoHS)



Multi-Tech Systems, Inc

Certificate of Compliance

2011/65/EU

Multi-Tech Systems confirms that its embedded products comply with the chemical concentration limitations set forth in the directive 2011/65/EU of the European Parliament (Restriction of the use of certain Hazardous Substances in electrical and electronic equipment - RoHS).

These Multi-Tech products do not contain the following banned chemicals¹:

- Lead, [Pb] < 1000 PPM
- Mercury, [Hg] < 1000 PPM
- Hexavalent Chromium, [Cr+6] < 1000 PPM
- Cadmium, [Cd] < 100 PPM
- Polybrominated Biphenyl, [PBB] < 1000 PPM
- Polybrominated Diphenyl Ether, [PBDE] < 1000 PPM

Environmental considerations:

- Moisture Sensitivity Level (MSL) =1
- Maximum Soldering temperature = 260C (in SMT reflow oven)

¹Lead usage in some components is exempted by the following RoHS annex, therefore higher lead concentration would be found in some modules (>1000 PPM);

- Resistors containing lead in a glass or ceramic matrix compound.

REACH Statement

Registration of Substances

After careful review of the legislation and specifically the definition of an “article” as defined in EC Regulation 1907/2006, Title II, Chapter 1, Article 7.1(a)(b), it is our current view Multi-Tech Systems, Inc. products would be considered as “articles”. In light of the definition in § 7.1(b) which requires registration of an article only if it contains a regulated substance that “is intended to be released under normal or reasonably foreseeable conditions of use,” Our analysis is that Multi-Tech Systems, Inc. products constitute nonregisterable articles for their intended and anticipated use.

Substances of Very High Concern (SVHC)

Per the candidate list of Substances of Very High Concern (SVHC) published October 28, 2008 we have reviewed these substances and certify the Multi-Tech Systems, Inc. products are compliant per the EU “REACH” requirements of less than 0.1% (w/w) for each substance. If new SVHC candidates are published by the European Chemicals Agency, and relevant substances have been confirmed, that exceeds greater than 0.1% (w/w), Multi-Tech Systems, Inc. will provide updated compliance status.

Multi-Tech Systems, Inc. also declares it has been duly diligent in ensuring that the products supplied are compliant through a formalized process which includes collection and validation of materials declarations and selective materials analysis where appropriate. This data is controlled as part of a formal quality system and will be made available upon request.

Information on HS/TS Substances According to Chinese Standards

In accordance with China's Administrative Measures on the Control of Pollution Caused by Electronic Information Products (EIP) # 39, also known as China RoHS, the following information is provided regarding the names and concentration levels of Toxic Substances (TS) or Hazardous Substances (HS) which may be contained in Multi-Tech Systems Inc. products relative to the EIP standards set by China's Ministry of Information Industry (MII).

Hazardous/Toxic Substance/Elements

Name of the Component	Lead (PB)	Mercury (Hg)	Cadmium (CD)	Hexavalent Chromium (CR6+)	Polybrominated Biphenyl (PBB)	Polybrominated Diphenyl Ether (PBDE)
Printed Circuit Boards	O	O	O	O	O	O
Resistors	X	O	O	O	O	O
Capacitors	X	O	O	O	O	O
Ferrite Beads	O	O	O	O	O	O
Relays/Opticals	O	O	O	O	O	O
ICs	O	O	O	O	O	O
Diodes/ Transistors	O	O	O	O	O	O
Oscillators and Crystals	X	O	O	O	O	O
Regulator	O	O	O	O	O	O
Voltage Sensor	O	O	O	O	O	O
Transformer	O	O	O	O	O	O
Speaker	O	O	O	O	O	O
Connectors	O	O	O	O	O	O
LEDs	O	O	O	O	O	O
Screws, Nuts, and other Hardware	X	O	O	O	O	O
AC-DC Power Supplies	O	O	O	O	O	O
Software /Documentation CDs	O	O	O	O	O	O
Booklets and Paperwork	O	O	O	O	O	O
Chassis	O	O	O	O	O	O

X Represents that the concentration of such hazardous/toxic substance in all the units of homogeneous material of such component is higher than the SJ/Txxx-2006 Requirements for Concentration Limits.

O Represents that no such substances are used or that the concentration is within the aforementioned limits.

Information on HS/TS Substances According to Chinese Standards (in Chinese)

依照中国标准的有毒有害物质信息

根据中华人民共和国信息产业部 (MII) 制定的电子信息产品 (EIP) 标准—中华人民共和国《电子信息产品污染控制管理办法》(第 39 号), 也称作中国 RoHS, 下表列出了 Multi-Tech Systems, Inc. 产品中可能含有的有毒物质 (TS) 或有害物质 (HS) 的名称及含量水平方面的信息。

有害/有毒物质/元素

成分名称	铅 (PB)	汞 (Hg)	镉 (CD)	六价铬 (CR6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板	O	O	O	O	O	O
电阻器	X	O	O	O	O	O
电容器	X	O	O	O	O	O
铁氧体磁环	O	O	O	O	O	O
继电器/光学部件	O	O	O	O	O	O
ICs	O	O	O	O	O	O
二极管/晶体管	O	O	O	O	O	O
振荡器和晶振	X	O	O	O	O	O
调节器	O	O	O	O	O	O
电压传感器	O	O	O	O	O	O
变压器	O	O	O	O	O	O
扬声器	O	O	O	O	O	O
连接器	O	O	O	O	O	O
LEDs	O	O	O	O	O	O
螺丝、螺母以及其它五金件	X	O	O	O	O	O
交流-直流电源	O	O	O	O	O	O
软件/文档 CD	O	O	O	O	O	O
手册和纸页	O	O	O	O	O	O
底盘	O	O	O	O	O	O

X 表示所有使用类似材料的设备中有害/有毒物质的含量水平高于 SJ/Txxx-2006 限量要求。

O 表示不含该物质或者该物质的含量水平在上述限量要求之内。

Index

A	
account activation.....	14
activation	
cellular devices.....	14
AT Command documents.....	5
C	
Chinese hazardous substances	
Chinese version.....	28
English version	27
Class B	22
Industry Canada	22
command mode.....	17
D	
data bits	17
delete text messages	20
device	
maintenance	10
dialing restrictions.....	23
dimensions	7
documentation.....	5 17
F	
FCC Notice	
Class B	22
G	
general regulatory.....	23
H	
hazardous substances	25
I	
Industry Canada	
Class B	22
install	
SIM card	12
L	
LEDs.....	7
link status	7
Linux	
overview	17
PPP connection	15
shell commands	15
M	
maintenance	10
modem	
safety	9
N	
network registration	
check	19
O	
online data mode.....	17
P	
parity	17
power	8
draw	8
programming LEDs.....	7
R	
radio frequency interference.....	9
read text messages	19
remove	
SIM card	12
RoHS.....	25
S	
safety	
modem.....	9
RF interference	9
signal strength.....	7
verify	18
SIM card	5

detection.....19
install.....12
remove.....12
specifications.....5
speed.....17
stop bits.....17

T

temperatures5
text messages
 delete20
 read.....19
turn on/off8

U

user responsibility.....11

V

verify communication17

W

Windows
 overview17