

FANG® HEADLIGHT BEZELS FOR ROAD GLIDE

Parts Included:

- l Right Fang® assembly
- l Left Fang® assembly
- 6 Cable ties

Installation Instructions:

- 1. Remove windshield screws (circled below) and remove windshield. (Fig. 1)
- 2. Lift the front edge of plastic vent to disengage plastic clips and remove. (Fig. 1)




- 3. Using your finger or a plastic pry tool, remove the speaker grills by disengaging the plastic clips (Fig. 2)
- 4. Remove the T30 torx bolt on both sides of the fairing located by the speaker. (Fig. 3)



- 5. Remove the two T25 torx bolts on each side of the fairing that hold the wind deflectors. (Fig. 4)
- 6. Unplug the signal wiring harness on each side of the fairing. (located at the upper right and left) (Fig. 5)
- 7. Remove the allen bolts on each side of the fairing at the base of the turn signals. (Fig. 6)

(WARNING-YOUR OUTER FAIRING IS NOW DETACHED AND WILL FALL ON THE GROUND IF NOT SUPPORTED)

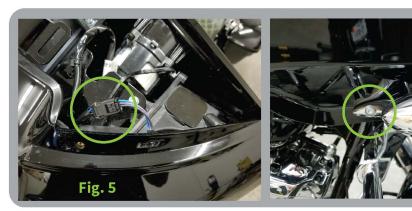

WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

NOTE:

Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure.


Ciro will have no obligation if the customer cannot show proof of purchase.

Warranty will not be granted unless the part is properly installed and maintained.
Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products.


Please visib our websibe Ciro3d.com for our complebe warranby policy.



- 8. Remove your outer fairing and set it aside.
- 9. Remove the two screws and plastic headlight trim on each side of the headlights. (Fig. 7)

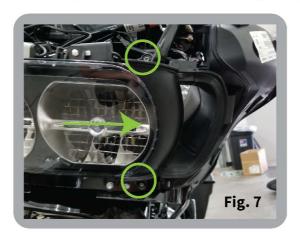

10. Plug the left and right Fang® Headlight Bezels in line with the connectors on each side from step 6 and check for function. (Fig. 8)

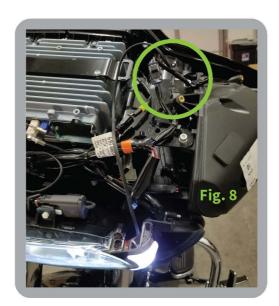

- 11. Using the screws you removed in step 8, bolt the Fang® Headlight Bezels to the locations you removed the stock headlight trim from
- 12. Using the included wire ties, tuck the wires neatly out of the way.
- 13. Re-assemble your fairing by repeating steps 1-7 in reverse and remember to plug in your stock signals. (Fig. 5)
- 14. Test running lights and turn signals for proper function.