

Double NFP Preamp

The NFP is a filter preamp alike the ones seen on basses like the Alembic or Wal. Being a low pass filter, it lets all bass frequencies pass through up to 4Khz where it starts cutting. The cutoff point has a resonant peak that can be boosted by pulling-up on the potentiometer. The potentiometer also allows you to sweep the cutoff point(resonant peak) within a range of 150Hz to 4 khz.

The Double NFP has one filter per pickup, offering more tone shaping options, that are actively mixed through the pan/blend potentiometer and into a Master volume potentiometer.


Operation: 9 to 27volts Current Draw: +- 4.5 mAh

Dimensions: Filter boards x2: W: 3.3cm; H: 2.3cm; D: 1.7cm

Potentiometers:: Hole size is 6.5mm, and bush height is 10m

Blend board x1: W: 3.9cm; H: 2.5cm; D: 1.3cm

Important Note: To avoid mechanical failure of the Filter boards, do not overtighten the nuts on the potentiometers when mounting the preamp.

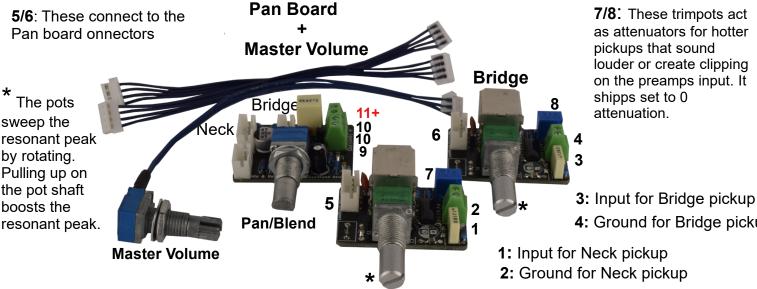

7/8: These trimpots act as attenuators for hotter pickups that sound louder or create clipping on the preamps input. It

4: Ground for Bridge pickup

9: Out on Blend boardt connects to Stereo Jack Neck Tip.

11: Connect Red battery wire here

10: 2x Gnd connectors. Run one wire to the Sleeve on the -stereo Jack. Use the extra onnector to Ground your bridge and shielding.

Note: Black wire from battery connects to Ring on Stereo output Jack.

www.lusithanddevices.com **Contact**: nuno@lusithanddevices.com

Warranty and Conditions: Any of our products, that are defective, will be replaced/ fixed and all expenses will be covered once it has been verified that the problem isn't a result of bad handling or negligence on the owners part. If the damage is due to negligence or wrong handling, warranty is lost and a cost can ocurr for the devices repair (the shipping costs will not be covered on such cases). Warranty is valid for 2 years after the date of purchase.