

13.5w Inground Lights Installation Instructions



| Product Specifications | | | | |
|----------------------------|--|------------|------------|--|
| Model No. | HCP-251133 | HCP-251134 | HCP-251135 | |
| Material | 316 Stainless Steel Cover + Aluminium Body | | | |
| Colour | Stainless Steel | | | |
| IP Rating | IP67 | | | |
| Input Voltage | 24v DC | | | |
| Cut Out - With Canister | 171mm | | | |
| Cut Out - Without Canister | 160mm | | | |
| Trafficable | 1000kgs | | | |
| IK Rating | IK10 | | | |
| Protection Class | 3 (No Earth Required) 🀠 | | | |
| Lamp Base | Built in LED | | | |
| Lamp Wattage | 1x 13.5w | | | |
| Colour Temp | 3000K | 4000K | 5000K | |
| Lumens | 824lm | 916lm | 841lm | |
| CRI | | 80+ | | |
| Dimmable | No | | | |
| Warranty | 5 Years Replacement* | | | |

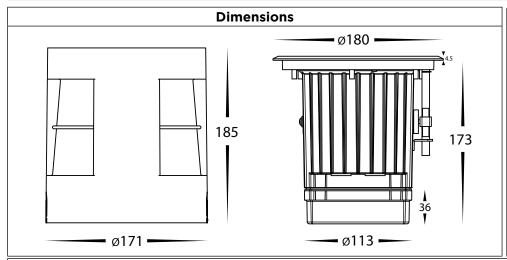

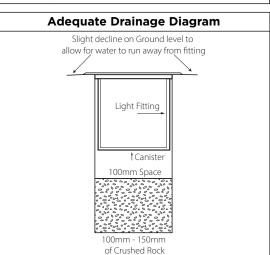

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Commercial does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- All electrical connections must be watertight, If a watertight connection is not done, Warranty will be voided.
- When installing low voltage fittings, Voltage to fitting must be within +or- 5% of voltage required and cannot be installed more than 25m from LED Driver, if not within this allowance warranty will be voided.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty.
- · These instructions may be updated at any time due to product improvements, Please visit website for most current installation instructions.

Steps for Installation for Single Colour Models:

- I. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Make a hole where fitting is to be placed using dimensions provided in table, making sure adequate drainage is allowed.
- 3. If using canister, insert canister makingsure that the top is level with ground or floor. Failure to do so will void warranty.
- 4. Using an appropriate 24v DC LED Driver DO NOT CONNECT LIGHT FITTING DIRECTLY TO 240V
- 5. Connect the cable If more than one fitting installed, wiring must be done in parallel. These fittings are POLARITY SENSITIVE, If connected incorrectly this will cause the faliure of the fitting and will not be covered under warranty.
- 6. Strip back the cable on both fitting and cable run and twist the positive cables together. Then connect neutral cables together.
- 7. Solder all joins using solder and either a heat gun or butane gas torch.
- 8. Cover connections using an adhesive lined heat shrink or gel cap to make connection watertight. Failure to do this will void warranty.
- 9. Heat the heat shrink or crimp the gel cap making sure all connections are covered.
- 10. Make sure the seals are still in place and nuts on back of fitting are tight to avoid any water penetration.
- 11. Insert fitting into canister or hole. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
- 12. To adjust angle, Insert tool into 2 holes and rotate until you reach your desired angle.
- 13. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Must be installed by a licensed electrician

Contact Details:

8/133 Beauchamp Road Matraville NSW 2036 Australia

Tel: 02 9381 838

Email: sales@havitcommercial.com.au Web: www.havitcommercial.com.au

