


## Fitting Instructions for the Landcruiser 200 Series - GXL Rear Neoprene Seat Cover


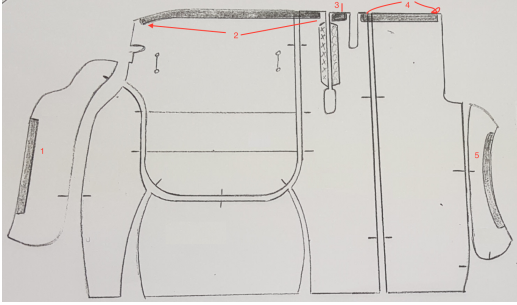


*Please read this document in its entirety prior to fitting the seat cover. If you have any specific questions or troubles fitting the seat cover, please contact us first, as we are more than willing to assist with any enquiry.*


	<p>Step 1) Push the front seats as far forward to the front of the vehicle, to ensure an easier fitment of the rear seat cover.</p>
	<p>Step 2) Remove all 3 headrests by raising the headrest until the headrest stalks are removed from the seat. <b>Note:</b> The middle headrest is a different design to the outer headrests.</p>
	<p>Step 3a) MIDDLE HEADREST As per the pictures to the left and below, fit the headrest cover by placing the headrest into the headrest cover. Squeeze the foam in the headrest to make it easier to fit the headrest cover. <b>Note:</b> Please be gentle when fitting the headrest cover, as it is a tight, custom-fit design.</p> 

	<p>Step 3b) Secure the touch tape tabs</p>
	<p>Step 4a) OUTER HEADREST FITMENT - Turn the neoprene headrest cover inside out and place on the headrest.</p>
<p>'Rolling on'                      Front View</p> 	<p>Step 4b) Roll the headrest cover onto the headrest (the headrest cover should no longer be inside out). The 'Feature thread' should be at the front. If it is facing towards the rear you have fitted it the wrong way.</p>
	<p>Step 5) Place the headrests safely to one side, as they will be re-fitted later on.</p>
	<p>Step 6) <b>60% Backrest Fitment</b> - For the easiest fitment of the backrest seat cover, lower the backrest to a 45-degree angle.</p>

	<p>Step 7a) Fit the neoprene cover over the entire 60% Backrest. Please ensure that the eyelets line up with the headrest stalk holes. Ensure that the seat belt is still accessible (the seat cover should be fitted underneath the seat belt, not over the top). Re-fit the drivers side headrest and middle headrest, as this will ensure the seat cover is aligned correctly.</p>
	<p>Step 7b) Through entering the tailgate / 3<sup>rd</sup> row area, join the 2 velcro tabs together that are located on the back of the cover. (as per the picture to the left). <b>Note: You will need to remove the protective touch tape first from one side</b> (see below).</p> 
	<p>Step 8) Carefully tuck the neoprene between the gap of the backrest and the cushion. This will be used to join the touch tape on the other side of the backrest (see Step 9). <b>Please Note:</b> It is much easier to tuck the material through the gap when the backrest is lowered to a 60-degree angle.</p>

	<p>Step 9) Remove the protective touch tape, to allow both touch tapes (from different sections) to join together. Ensure that all holes and provisions on the back of the cover are correctly lined up, so that the backrest can function as normal. You can now raise the backrest to its original, upright position. <b>Note:</b> Please don't throw away the removed protective touch tape, as it will be necessary to keep in the event that you remove the seat covers – Further details included in '<b>Removal of the Seat Cover – Special Considerations</b>'</p>
	<p>Step 10) – <b>40% Backrest Fitment</b> – Please follow the exact same steps as the 60% Backrest Fitment – Steps 6 to 9. Exclude Step 7b as this is not applicable for 40% fitment.</p>
	<p>Step 11) <b>60% Cushion Fitment</b> - Place cushion cover over the cushion. It only needs to be done roughly at this point in time.</p>

	<p>Step 12) Prior to pushing the cover through the gap of the cushion and backrest join velcro together near the middle seat belt (see pic)</p>
	<p>Step 13) Once velcro is affixed in step 12, push the excess neoprene through the gap of the cushion and backrest. This is done easiest by lowering the backrest to a 45 degree angle. Also tuck the neoprene down on the side of the cover. Refer to the diagram to the left of the plastic tab positions on the cover that must be pushed upwards in Step 14. There are 5 in total – 2 on the side and 3 at the back.</p>
<p style="text-align: center;">Side of the cushion</p> 	<p>Step 14) Where the plastic tabs are located (see Step 13 image), push the plastic tabs upwards into a slot on the original seat. This will allow the cushion cover to stay in position.</p>
<p style="text-align: center;">Back of the seat</p> 	

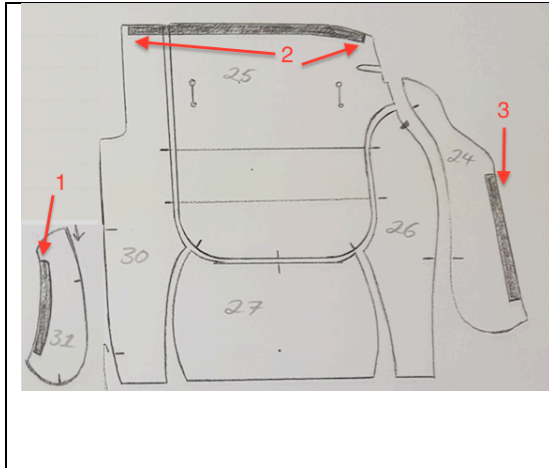

Step 15) **40% Cushion Fitment** - Place cushion cover over the cushion. It only needs to be done roughly at this point in time. Follow steps 11 through to 14. Please Note: Velcro Fitment in Step 12 is not applicable. Refer to the diagram to the left of the plastic tab positions on the cover that must be pushed upwards. There are 3 in total for the 40% Cushion - 2 on the side and 1 at the back.

### Removal of the Seat Cover – Special Considerations

- 1) Removal of the headrest covers – Carefully remove the headrest from the base of the backrest. Once the headrest cover has been removed, please ensure that touch tape tabs are then secured together – This will prevent any damage / fraying of threads, as a result of the touch tape sticking to the threads on the seat cover.
- 2) Removal of the backrest & cushion cover - You must carefully remove the cover evenly on both sides at the same rate. If only one side is raised first, it may result in the stitching tearing (warranty claims will not be accepted if neoprene / stitching is damaged as a result of incorrect removal).
- 3) Removal of the backrest and cushion cover – Once completely removed, re-attach touch tape tabs that were removed. This will prevent any damage / fraying of threads, as a result of the touch tape sticking to the threads on the seat cover.

### On-going Maintenance / Care Instructions

- 1) Please use a warm cloth to remove any dirt or grime from the seat cover. Please then allow the seat cover to naturally dry.
- 2) Although our seat covers are incredibly durable, Global Automotive Accessories does not recommend that you vacuum your seat covers. Regular vacuuming over time, may compromise the strength of the seat cover. Please use other suitable methods (such as a dustpan) to remove excessive dust, dog hair etc.

## **Warranty Claims**

Warranty claims are valid for 6 months and will only be accepted if the material or sewing is found to be defective. Photographic evidence must be provided prior to any goods being returned to Global Automotive Accessories for a warranty claim. Failure to follow the fitting instructions will void any warranty claims. Although the material is durable and stretchable in nature, if the cover is fitted too aggressively, like all materials it can tear. Please ensure that the covers are fitted gently and with care.

### **Any further questions please contact:**

Andrew Leask  
Owner / Director

Global Automotive Accessories  
PO Box 6195  
Croydon North VIC 3136  
M: 0413 438 874

E: [andrew@globalautomotive.com.au](mailto:andrew@globalautomotive.com.au)

eBay Store: <http://stores.ebay.com.au/globalautomotiveaccessories/>

### **Thank-you for your purchase**

From all at Global Automotive Accessories we would like to thank-you for purchasing the LC200 – Rear Neoprene Seat Cover. Our success would not be possible without our loyal and valued customers. If you are satisfied with the quality of our products and services, we would greatly appreciate it if you could recommend our products to your family or friends.