


# Fitting Instructions for the Toyota HiLux (Gen 8) Rear Neoprene Seat Cover

Please read this document in its entirety prior to fitting the seat cover. If you have any specific questions or troubles fitting the seat cover, please contact us first, as we are more than willing to assist with any enquiry.

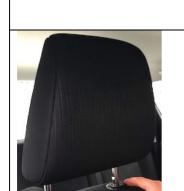

Step 1) Push the front seats as far forward to the front of the vehicle, to ensure an easier fitment of the rear seat cover.

Step 2) Remove all 3 headrests by pressing the button on the right hand side and lifting the headrest out completely.




Step 3) Turn the neoprene headrest cover inside out and place on the headrest.





Step 4) Roll the headrest cover onto the headrest (the headrest cover should no longer be inside out). The 'Feature thread' should be facing the front of the vehicle. The back sewn thread facing the rear – As per the photos to the left.

**Please Note:** The Centre headrest is a different size, please refer to Step 6.

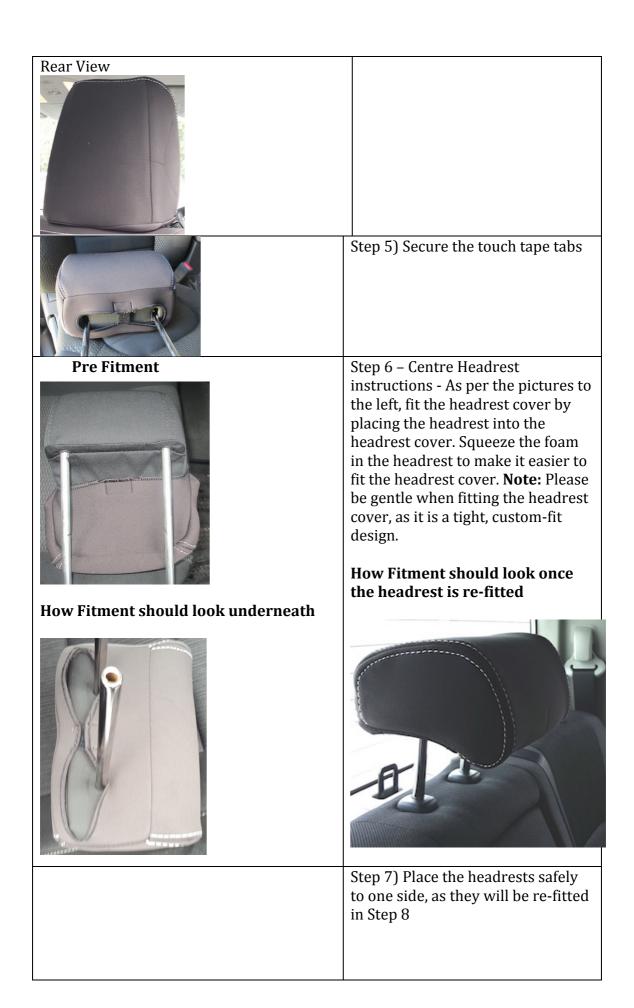

Step 8) **Backrest Fitment** – As the backrest section cannot be folded down (it is locked in place), as a starting point you should place the backrest seat cover over the backrest section. You should then re-fit one headrest at a time through the eyelets. This will act as a locking mechanism for the seat cover, so that it can be fitted much easier in the later steps. **Note:** Ensure that the covers is fitted underneath the seat belt (not over the top of it) Step 9) Tuck the top section of the neoprene cover between the backrest and the plastic panel. Please Note: There are areas, which it is an incredibly tight fit. In these tight areas, it is easiest to use a wooden ruler (or similar) to push the neoprene through the gap. Step 10) Ensure that the shoulders of the seat cover (on both sides) are tucked in nicely. There is a small gap in which the material can also be pushed through.



Step 11) Prior to the upcoming steps it is important to remove the seat belt buckles from their webbing. To do this simply lift up the cushion (Refer to step 13 to see how you can lift up the cushion) and remove the buckles from their webbing and place on the floor.



Step 12) Carefully tuck the neoprene between the gap of the backrest and the cushion. This will be used to join the velcro to the carpet on the other side of the backrest. **Note:** It is much easier to tuck the material through the gap when the cushion section is lifted up (Please refer to step 13 to see how you can lift up the cushion)



Step 13) – To raise the cushion section simply pull the binding tape and latch and then lift the cushion section



Step 14) Please ensure that the velcro protection is not removed until **step 17.** Please ensure that the seat cover is tucked ABOVE the isofix bar as indicated in the photo. There are 3 isofix points throughout the rear seat.



Step 15) When re-fitting the seat belt buckles, ensure that the webbing is pulled out from the slit that is made in the seat cover. The seat belt buckle will then go through the webbing (but not through the neoprene slit). Step 16 showcases how the seat belt buckle should appear when installed correctly.



Step 16) The photo to the left illustrates how the seat belt buckle should appear when fitted correctly through the webbing (but not through the neoprene slit).

**Removing the Velcro** 



Step 17) In this step you will fit the velcro to the carpet, which is located on the back of the backrest. In order to do this place you hand under the isofix bar, as per the photo to the left, labeled 'Removing the velcro'. Pull the neoprene through the gap as far as possible (as per Step 14) to ensure that the backrest cover has a tight snug fit. Once pulled through sufficiently, remove the protective touch tape and affix to the carpet on the back of the backrest.



Note: Please don't throw away the removed protective touch tape, as it will be necessary to keep in the event that you remove the seat covers – Further details included in 'Removal of the Seat Cover – Special Considerations'



Step 18) The photo to the left showcases how the seat belt buckle should look when the entire backrest section is fitted correctly.

Step 19) **Cushion Fitment** – As there is a 60% and 40% split in the cushion, we have designed a 2 piece cushion seat cover. The same process applies for both cushion covers. Start by lifting the cushion – As per Step 13




Step 20) After the cushion is raised, place the appropriate cover over the cushion. Tuck the neoprene through the gap between the cushion and the backrest. Prior to removing the protective touch tape, ensure that you are happy with the fitment. See the photo below of how the cushion should be fitted.





Step 21) If happy with the fitment in Step 20, lift the cushion section up and remove the protective touch tape. Affix the velcro to the carpet on the cushion section, as per the photos to the left.

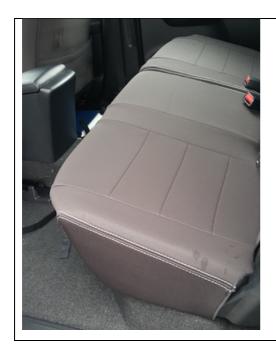

Step 22) Repeat steps 19, 20 and 21 for the other cushion cover. Once fitted correctly the cushion covers should look like the photo to the left.

Lower the cushion section to its normal position. Ensure that the seat belts buckles are still accessible after the cushion section has been locked into its normal position.

# **Removal of the Seat Cover - Special Considerations**

- 1) Removal of the headrest covers Carefully remove the headrest from the base of the backrest. Once the headrest cover has been removed, please ensure that touch tape tabs are then secured together This will prevent any damage / fraying of threads, as a result of the touch tape sticking to the threads on the seat cover.
- 2) Removal of the backrest and cushion cover Once completely removed, re-attach protective touch tape tabs that were removed. This will prevent any damage / fraying of threads, as a result of the touch tape sticking to the threads on the seat cover.

#### **On-going Maintenance / Care Instructions**

- 1) Please use a warm cloth to remove any dirt or grime from the seat cover. Please then allow the seat cover to naturally dry.
- 2) Although our seat covers are incredibly durable, Global Automotive Accessories does not recommend that you vacuum your seat covers. Regular vacuuming over time, may compromise the strength of the seat cover. Please use other suitable methods (such as a dustpan) to remove excessive dust, dog hair etc.

## **Warranty Claims**

Warranty claims are valid for 6 months and will only be accepted if the material or sewing is found to be defective. Photographic evidence must be provided prior to any goods being returned to Global Automotive Accessories for a warranty claim. Failure to follow the fitting instructions will void any warranty claims. Although the material is durable and stretchable in nature, if the cover is fitted too aggressively, like all materials it can tear. Please ensure that the covers are fitted gently and with care.

## Any further questions please contact:

Andrew Leask Owner / Director

Global Automotive Accessories PO Box 6195 Croydon North VIC 3136 M: 0413 438 874

E: andrew@globalautomotive.com.au

eBay Store: http://stores.ebay.com.au/globalautomotiveaccessories/

#### Thank-you for your purchase

From all at Global Automotive Accessories we would like to thank-you for purchasing the Ford Ranger – Rear Neoprene Seat Cover. Our success would not be possible without our loyal and valued customers. If you are satisfied with the quality of our products and services, we would greatly appreciate it if you could recommend our products to your family or friends.