





Please read this document in its entirety prior to fitting the seat cover. If you have any specific questions or troubles fitting the seat cover, please contact us first, as we are more than willing to assist with any enquiry.

	<p>Step 1) Push the front seats as far forward to the front of the vehicle, to ensure an easier fitment of the rear seat cover.</p>
	<p>Step 2) Remove all 3 headrests by pressing the button on the right hand side and lifting the headrest out completely.</p>
	<p>Step 3) Turn the neoprene headrest cover inside out and place on the headrest.</p>
<div style="display: flex; justify-content: space-around;"> <div data-bbox="236 1552 483 1861"> <p>'Rolling on'</p>  </div> <div data-bbox="563 1552 823 1861"> <p>Front View</p>  </div> </div>	<p>Step 4) Roll the headrest cover onto the headrest (the headrest cover should no longer be inside out). The 'Feature thread' should be facing the front of the vehicle. The back sewn thread facing the rear – As per the photos to the left.</p> <p>Please Note: The Centre headrest is a different size, please refer to Step 6.</p>

Rear View



Step 5) Secure the touch tape tabs

Pre Fitment



Step 6 – Centre Headrest instructions - As per the pictures to the left, fit the headrest cover by placing the headrest into the headrest cover. Squeeze the foam in the headrest to make it easier to fit the headrest cover. **Note:** Please be gentle when fitting the headrest cover, as it is a tight, custom-fit design.


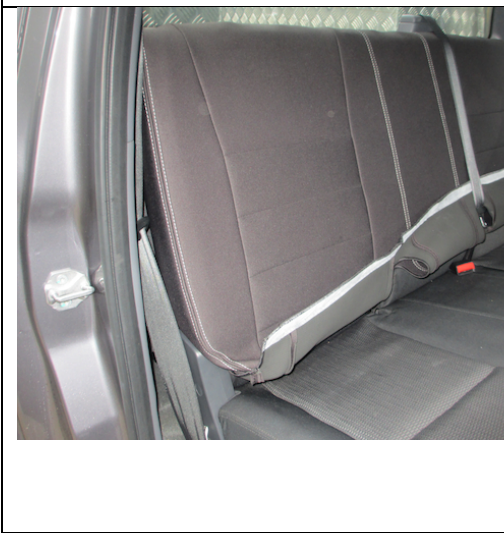

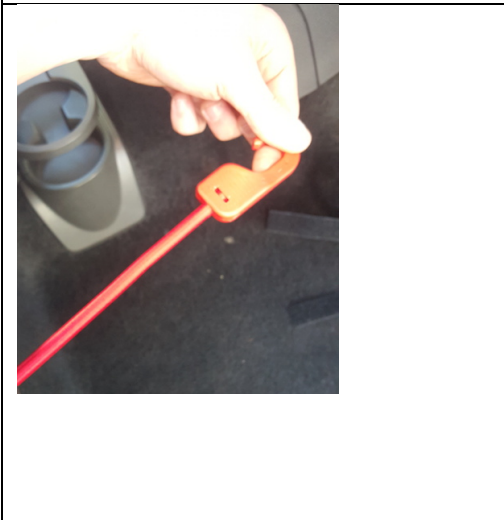
How Fitment should look underneath






How Fitment should look once the headrest is re-fitted – The photo below is an example of the Toyota HiLux (however it is similar in nature)



Step 7) Place the headrests safely to one side, as they will be re-fitted in Step 9

	<p>Step 8) Backrest Fitment – Lower the backrest by pulling the tag on the top left and right hand side. For the easiest fitment of the backrest seat cover, lower the backrest to a 45-degree angle.</p>
	<p>Step 9) Place the backrest cover over the seat back. To ensure the easiest possible fitment, you should re-fit one headrest at a time through the eyelets. This will act as a locking mechanism for the seat cover, so that it can be fitted much easier in the later steps. Note: Ensure that the covers is fitted underneath the seat belt (not over the top of it). Once fitted, ensure that the tags, which are used to lower the backrest, are lined up and gently pulled through the slits.</p>
	<p>Step 10) Carefully tuck the neoprene between the gap of the backrest and the cushion. This will be used to join the velcro to the carpet on the other side of the backrest. Note: It is much easier to tuck the material through the gap when the cushion section is lifted up (Please refer to step 11 to see how you can lift up the cushion)</p>
	<p>Step 11) – To raise the cushion section simply pull the strap and then lift the cushion section.</p>

	<p>Step 12) In this step you will fit the velcro to the carpet, which is located on the back of the backrest. In order to do this lower the backrest section (as per Step 8) to a flat position. Pull the neoprene through the gap as far as possible (as per Step 10) to ensure that the backrest cover has a tight snug fit. Once pulled through sufficiently, remove the protective touch tape and affix to the carpet on the back of the backrest.</p> <p>Note: Please don't throw away the removed protective touch tape, as it will be necessary to keep in the event that you remove the seat covers – Further details included in 'Removal of the Seat Cover – Special Considerations'</p>
	<p>Step 13) Cushion Fitment – As there is a 60% and 40% split in the cushion, we have designed a 2 piece cushion seat cover. The same process applies for both cushion covers. Start by lifting the cushion – As per Step 11</p>
	<p>Step 14) After the cushion is raised, place the appropriate cover over the cushion. Tuck the neoprene through the gap between the cushion and the backrest. Prior to removing the protective touch tape, ensure that you are happy with the fitment. See the photo below of how the cushion should be fitted (The photo to the left is of the Toyota Hilux rear – however the same principles apply)</p>

	
	<p>Step 15) If happy with the fitment in Step 14, lift the cushion section up and remove the protective touch tape. Affix the velcro to the carpet on the cushion section, as per the photos to the left.</p> <p>(The photo to the left is of the Toyota Hilux rear – however the same principles apply)</p>
	<p>Step 16) Repeat steps 13, 14 and 15 for the other cushion cover. Once fitted correctly the cushion covers should look similar to the photo to the left. (The photo to the left is of the Toyota Hilux rear – however the same principles apply)</p> <p>Lower the cushion section to its normal position. Ensure that the seat belts buckles are still accessible after the cushion section has been locked into its normal position. We have created a hole in the seat covers so that the buckles are still accessible.</p>

Removal of the Seat Cover – Special Considerations

- 1) Removal of the headrest covers – Carefully remove the headrest from the base of the backrest. Once the headrest cover has been removed, please ensure that touch tape tabs are then secured together – This will prevent any damage / fraying of threads, as a result of the touch tape sticking to the threads on the seat cover.
- 2) Removal of the backrest and cushion cover – Once completely removed, re-attach protective touch tape tabs that were removed. This will prevent any damage / fraying of threads, as a result of the touch tape sticking to the threads on the seat cover.

On-going Maintenance / Care Instructions

- 1) Please use a warm cloth to remove any dirt or grime from the seat cover. Please then allow the seat cover to naturally dry.
- 2) Although our seat covers are incredibly durable, Global Automotive Accessories does not recommend that you vacuum your seat covers. Regular vacuuming over time, may compromise the strength of the seat cover. Please use other suitable methods (such as a dustpan) to remove excessive dust, dog hair etc.

Warranty Claims

Warranty claims are valid for 6 months and will only be accepted if the material or sewing is found to be defective. Photographic evidence must be provided prior to any goods being returned to Global Automotive Accessories for a warranty claim. Failure to follow the fitting instructions will void any warranty claims. Although the material is durable and stretchable in nature, if the cover is fitted too aggressively, like all materials it can tear. Please ensure that the covers are fitted gently and with care.

Any further questions please contact:

Andrew Leask
Owner / Director

Global Automotive Accessories
PO Box 6195
Croydon North VIC 3136
M: 0413 438 874
E: andrew@globalautomotive.com.au

Thank-you for your purchase

From all at Global Automotive Accessories we would like to thank-you for purchasing the Volkswagen Amarok – Rear Neoprene Seat Cover. Our success would not be possible without our loyal and valued customers. If you are satisfied with the quality of our products and services, we would greatly appreciate it if you could recommend our products to your family or friends.