

Store this manual in the pocket provided underneath the Car Seat Cover.

AWARNING

Carefully read and understand all instructions and warnings in this manual. Failure to properly use this Car Seat increases the risk of **SERIOUS INJURY** or **DEATH** in a sudden stop or crash.

KEEP INSTRUCTIONS FOR FUTURE USE.

Store this manual in the pocket provided on the side of the car seat base.

Secure-Lift™ 30
INFANT CAR SEAT



Child Weight: 4 to 30 lb (29.5 to 13.6kg). Child Height: 29.5" or less (74.9 cm).

OWNER'S MANUAL

Para instrucciones en Español, conéctese a www.babytrend.com o llamar al: 1-800-328-7363.



Baby Trend, Inc. 13048 Valley Blvd. Fontana CA 92335 1-800-328-7363 (8:00 a.m. ~ 4:30 p.m. PST) www.babytrend.com



CS04_011724 Copyright © 2024, Baby Trend, Inc.

TABLE OF CONTENTS

TABLE OF CONTENTS

W	ARNINGS TO ALERT YOU TO POSSIBLE DANGERS	3
Н	OW TO REGISTER YOUR SAFETY SEAT	4
S	AFETY INFORMATION	5
	3.1 About your child	
	3.2 About your vehicle	
	3.3 About Active Air Bags	7
	3.4 About an unoccupied Safety Seat	7
	3.5 About this Safety Seat	8
	3.6 About use as a carrier	8
S	ELECTING THE BEST LOCATION FOR THE SAFETY SEAT	11
	4.1 Overall Considerations in Selecting a Location	11
	4.2 Check that the Vehicle Seat Meets the Following Requirements	
	4.3 Check that the Vehicle Seat Belt is Safe to Use	
S	AFETY SEAT FEATURES AND THEIR PROPER USE	19
	5.1 5-Point Harness	
	5.2 Rear View of Car Seat	20
	5.3 Rear View of Component Locations	21
	5.4 Base	
	5.5 Use of the Safety Seat with the Base	24
	5.6 Other Features	
	5.7 Operation of the Carry Handle	
	5.8 Attaching the Canopy	
	5.9 Ergonomic Side Carry Grip	
	5.10 Insert Use	
	5.11 Adjustment of the Shoulder Straps	
	5.11.1 Car Seat with Adjustable Back Safety Seat	
	5.11.2 Car Seat use of Fixed Back Shoulder Position	31

Low Birthweight Harness Routing	35
SING INFANT RESTRAINT	38 37
ECURING THE SAFETY SEAT OR BASE IN THE VEHICLE	
7.2 Installation of the Safety Seat / Vehicle Belt Installation of Base: 7.3 Installation of the Base using LATCH 7.4 Setting Proper Recline of the Safety Seat / Base 7.5 To Deploy Elevation Foot 7.5 .1 Elevation Foot Height Adjustment 7.5 .2 To Lower Elevation Foot 7.6 Elevation Aids 7.7 Elevation Aids Base Use 7.8 Pool Noodle and Towel Examples	44 50 57 58 59 59
INAL SAFETY CHECKS 8.1	61
9.1 Using the Safety Seat in an Airplane	62 62 62 64
VARRANTY	

1.0 WARNING

1.0 WARNING

WARNINGS TO ALERT YOU TO POSSIBLE DANGERS

The ultimate safety of your child depends on the proper installation of the Safety Seat in your vehicle. Proper installation requires that you read and understand this entire manual and your vehicle's owner's manual before placing your child in the Safety Seat. **DO NOT** allow others to install or use this safety seat unless they completely understand it's proper use and installation.

Improper use of this Safety Seat can result in death or serious injury from a crash, sharp turn or sudden stop.

Your child's safety depends on:

- Choosing the best location within your vehicle for the Safety Seat. Seating positions with Active Air Bags must be avoided.
- Adjust the harness shoulder strap locations to the appropriate height for your child.
- 3. Adjust the harness length to be snug around your child.
- 4. This Safety Seat is only to be used in the rear-facing position.
- Proper use and routing of the seat belts in your vehicle is essential for proper installation. Not all vehicle seat belts will adequately secure the Safety Seat.
- Proper recline angle of the Safety Seat is required for maximum protection of your child.

HOW TO REGISTER YOUR SAFETY SEAT

Please complete the following information regarding this Safety Seat:

Model Number :
lanufacture Date :
Purchase Date :

The model number can be found on a label on the side of the Safety Seat. The manufactured date can be found on a label on the bottom of the seat.

Please fill out the prepaid registration post card attached to the safety harness and mail it today. In addition, we may find a need to update this instruction manual from time to time.

Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, email address if available, and the restraint's model number and manufacturing date to **Baby Trend, Inc, 13048 Valley Blvd. Fontana CA 92335** or call **1-800-328-7363** or register online at

https://babytrend.com/pages/car-seat-product-registration For recall information, call the U.S. Government's Vehicle Safety Hotline at 1–888–327–4236 (TTY: 1–800–424–9153)., or go to http://www.NHTSA.gov. 3.0 SAFETY 3.0 SAFETY

SAFETY INFORMATION

3.1 About your child

- This Safety Seat is designed and tested to accommodate a child of a specific range of HEIGHT and WEIGHT. Using the Safety Seat for a child whose weight or height is outside of these limits will increase the risk of death or serious injury in the event of a crash. Please see the Warning label on the Safety Seat located on the child's right side for weight and height limits for your model. Also noted on manual cover.
- Special needs children, such as pre-term babies, may suffer difficulties in using this Safety Seat. The angle of recline in this Safety Seat may not be appropriate for Special Needs babies. If your child has special needs or any breathing difficulties, please discuss vehicle Safety Seats with your pediatrician, or other competent health care provider, to ensure the safety of your child.
- Never leave your child unattended, even for a moment.
- Do Not Dress your child in bulky clothing or other garments that will hinder the harness from being snug around your child and properly latched between your child's legs.

3.2 About your vehicle

 Proper installation of the Safety Seat in your vehicle and proper securing of your child in the Safety Seat are essential to ensure

- the safety of your child. Quick turns, sudden stops, or other maneuvers in avoiding a crash, as well as a crash, can injure your child if not properly secured in the seat or if the seat is not properly installed in the vehicle.
- There are many different types of vehicles, seat belt systems, or other occupant restraint systems in use today. Accordingly, this manual can only give guidelines for proper installation in your vehicle. In addition to this manual, you must also read and understand the vehicle owner's manual, which should address use of child restraints. If your vehicle owner's manual does not address the installation of child restraints, please contact your local vehicle dealer, or the vehicle's manufacturer, to obtain this information before using this Safety Seat.
- Some vehicles do not have any safe location for this Safety Seat to be installed. In addition, many vehicles do not have seat belt systems that will adequately hold this Safety Seat in the required position. Please refer to both this manual and your vehicle owner's manual for complete information for proper safe installation of this Safety Seat.
- Never combine this Safety Seat or Base with any other Safety Seat or Base from any other manufacturer. If you are in need of an additional Base, please contact your local dealer or Baby Trend, Inc. to obtain one.
- This Safety Seat is certified for use in Motor Vehicles and Aircraft and conforms to all applicable Federal Motor Vehicle Safety Standards.

3.0 SAFETY 3.0 SAFETY

3.3 About Active Air Bags

NEVER PLACE THIS SAFETY SEAT IN A VEHICLE SEATING LOCATION THAT HAS AN ACTIVE AIR BAG. If an Active Air bag inflates, it can hit the safety seat with great force and cause death or serious injury to your child. Refer to your vehicle owner's manual for additional information and warnings about Active Air bags, and supplemental restraints, and their proper use with Safety Seats.

3.4 About an unoccupied Safety Seat

- Never leave the Safety Seat or Base unsecured in your vehicle. An unsecured seat or base can fly through the vehicle in the event of a crash, sudden stop or sharp turn and cause serious injury to the driver, who may then loose control of the vehicle, or to passengers. When not in use, either remove the seat and or base from the vehicle or make sure that both are securely belted to the vehicle according to these instructions.
- The Safety Seat may become very hot if left in direct sunlight. Your child may suffer burns from hot plastic components. Always check the seat for hot surfaces that may come into contact with your child before placing your child in the seat. We suggest that you cover the seat with a blanket or towel if it will be subject to direct sunlight while you are away from the vehicle.

3.5 About this Safety Seat

- This Safety Seat is constructed of plastic that can deform over time if left with any object in the seat while stored. DO NOT leave heavy objects in the seat while not in use. DO NOT store the seat in the trunk of your car with heavy objects on it or with pressure on the seat from the trunk lid.
- Replace the Safety Seat and Base after an accident of any kind. An accident, even a minor accident, can cause undetectable damage to the Safety Seat or Base that may cause the Seat or Base to fail in a subsequent accident. DO NOT use the safety seat if it is damaged or broken.
- Discontinue use of the Safety Seat and Base after seven (7).
 years from the date of manufacture. The date of manufacture
 can be found on the label located on the underside of the
 Safety Seat or Base. When discarding an out of date seat,
 please ensure that someone finding the seat will be unable to
 use it. We suggest that you disable the seat by removing the
 pad and harness and discarding the pieces at different times.

3.6 About use as a carrier

Never Leave Your Child Unattended, even if they are asleep. Very often when you arrive at your destination you will find that your child has fallen asleep in the Seat. Do not leave the child unattended, even for a minute. Your child can tip or move the carrier by their movements, kicking or grabbing on to their surroundings. If the carrier tips over, your child can suffocate

3.0 **SAFETY**

3.0 SAFETY

from the surface that the seat is on as well as from the pressure on their chest from the safety harness. In addition, if the carrier is placed too upright, the child's head can fall forward and cause the child to have difficulty breathing. To avoid death or serious injury from suffocation, falls and other hazards:

- Always place the carrier on a firm and level surface. Never place the carrier on soft or plush surfaces such as a bed, comforter, couch, sofa, chair, etc. The carrier has a very high possibility of tipping over if placed on a soft or plush surface.
- Fall hazard: Child's movements can slide carrier. Never place
 the carrier near the edge of high surfaces such as tables,
 counter tops, shelves, or other elevated surfaces. To prevent
 falls, stay within arm's reach whenever the carrier is not on the
 floor or ground.
- Child can strangle in loose safety harness straps. Never leave child in carrier when straps are loose or undone. Always use the safety harness as instructed in this manual when the child is in the carrier.
- Before lifting the carrier with the handle, check that the handle is firmly locked into position. The carrier will pivot about an unlocked handle and can result in injury to your child.
- Strings and cords can cause strangulation:
 - **DO NOT** place items with string around a child's neck, such as hood strings, pacifier cords, etc.

- DO NOT suspend strings on or over carrier.
- DO NOT attach strings to toys.
- **DO NOT** place the carrier near a window where cords from blinds or drapes can strangle a child.

AWARNING

- Never leave child unattended.
- SUFFOCATION HAZARD: Infant carrier can roll over on soft surfaces and suffocate child, NEVER place carrier on beds, sofas, or other soft surfaces.
- STRANGULATION HAZARD:
- Child can strangle in loose restraint straps.
 Never leave child in carrier when straps are loose or undone.
- Children have **STRANGLED** in loose or partially buckled harness straps. Fully restrain the child even when carrier is used outside the vehicle.
- FALL HAZARD: Child's activity can move carrier. Never place carrier on counter tops, tables, or other elevated surface. The carrier can fall from the shopping cart. Do not use on shopping cart.





4.0 LOCATION

SELECTING THE BEST LOCATION FOR THE SAFETY SEAT

AWARNING

Not every location within an automobile may be safe for the installation of this Safety Seat. In fact, some automobiles have no seating position that is safe for the installation of a safety seat. Improper placement of this Safety Seat within a vehicle will increase the risk of death or serious injury.

Please follow the instructions in this manual and in your vehicle owner's manual carefully to ensure proper location and installation of this Safety Seat. If you are uncertain about the proper location of the Safety Seat within the vehicle, contact your vehicle manufacturer directly, or through their dealer before using this seat. You are also invited to call Baby Trend at 1-800-328-7363 for additional information or assistance.

4.1 Overall Considerations in Selecting a Location

- The rear seating positions have been shown to be statistically safer for children than the front seating position.
- We recommend that you use the center rear seat position as the safest location for the Safety Seat. In addition, whenever possible, have an adult ride in the rear with the child in order to monitor the child.

 If the driver is the only adult in the vehicle and the child requires constant monitoring, then the forward seating position may be used if there is no passenger side Active Air bag and all of the following requirements are met for this location.

4.2 Check that the Vehicle Seat Meets the Following Requirements

AWARNING



DO NOT place rear-facing child seat on front seat with air bag. DEATH OR SERIOUS INJURY can occur. The back seat is the safest place for children 12 and under.

Never place this Safety Seat in a vehicle seating location
that has an Active Air Bag! Active Air Bags inflate with great
force! An inflating active Air Bag can strike a Safety Seat with
enough force to cause death or serious injury to your child.
If your vehicle is equipped with a front passenger side Active
Air bag, please refer to the vehicle's owner's manual for
additional information about Active Air bags and child safety
seat installation.

4.0 LOCATION

 DO NOT place this Safety Seat in any vehicle seat that faces to the rear or to either side of the vehicle (Fig. 14-1 & 14-2).

- DO NOT use this Safety Seat in a vehicle that has a vehicle seat back that does not lock into place. A seat back that folds forward must have a latch or locking mechanism to prevent it from flying forward and striking the child in a sudden stop or accident.
- Please review your vehicle owner's manual
 to determine the best location for the Safety
 Seat or to determine if any locations are
 unsafe for safety seat installation. If you
 do not have the vehicle owner's manual
 or the owner's manual does not address
 child safety seat installation, please contact
 the vehicle manufacturer to obtain this
 information before using the safety seat.



Fig. 14-1



Fig. 14-2

for use with the Safety Seat. Even newer vehicles can have seat belts systems that are not safe for use with the Safety Seat. These systems may look safe but their method of operation precludes their use with the Safety Seat. If you are unsure if the vehicle seat belt is safe for use with the Safety Seat, please contact the vehicle manufacturer for additional information.

AWARNING

Carefully analyze the operation of the vehicle safety belts before using the Safety Seat. Being able to thread the vehicle seat belt through the Safety Seat or Base is not an indication that the vehicle seat belt is safe to use. Carefully read this section on seat belt systems, review your vehicle owner's manual in detail, and heed any and all warning labels on your vehicle's seat belt. Your vehicle may require a modification or special seat belt in order to be safely used with this Safety Seat. Please see your vehicle dealer for this service.

Seat belt systems that are NOT safe for use with the Safety Seat: DO NOT use the following types of seat belt systems with the Safety Seat. These belt systems will not hold the Safety Seat securely in place at all times. In addition, a locking clip will not make these belt systems safe to use.

4.3 Check that the Vehicle Seat Belt is Safe to Use

The Safety Seat is designed to be tightly installed at all times. The vehicle seat belt must be capable of maintaining tight installation at all times. A variety of vehicle seat belt systems have been installed on vehicles that are not safe

4.0 LOCATION

- DO NOT use a lap belt that stays loose after installed and locks only in a crash or sudden stop. These lap belts utilize an Emergency Locking Retractor and are often found in combination with motorized shoulder belts. Because these belts will allow the Safety Seat to move about on the seat, the chance of the Safety Seat being out of the proper position in a crash is very high. Accordingly, do not use the Safety Seat with this type of Seat Belt system. Please see your vehicle's dealer or owner's manual for information on converting this seat belt system to one that is acceptable for use with a Safety Seat (Fig. 15-1).
- DO NOT use a lap/shoulder belt system if the lap belt and shoulder belt each have retractors at one end. This type of seat belt system will not adequately restrain the Safety Seat (Fig. 15-2).
- DO NOT use a seat belt that is connected to the door in any way. These types of seat belts are designed to automatically surround the occupant when the door is closed. This type of seat belt will NOT adequately restrain the Safety Seat. (Fig. 15-3).



Fig. 15-1



Fig. 15-2



Fig. 15-3

 DO NOT use a seat belt that is anchored on the seat more than 2 inches forward of the crease between the seat bottom and the seat back. This type of seat belt anchors the Safety Seat too far forward and the Safety Seat will not be safely restrained in the vehicle (Fig. 16-1).








Fig. 16-2

16


If you have any of the above seat belt systems, **DO NOT** use it to secure the Safety Seat in the vehicle. Look in the vehicle for a location that has a more suitable seat belt system as described in the section following. You may also contact your vehicle's manufacturer to inquire about installing a seat belt system that is adequate to restrain a Safety Seat.

4.0 LOCATION

Seat belt systems that are Adequate for use with the Safety Seat:

The following seat belt systems can be used with the Safety Seat provided, that all of the other requirements prescribed in these instructions, including seat position, and all instructions provided by your vehicle's owner's manual are followed.

 A lap belt that is manually adjusted and will remain tight while the vehicle is in motion is suitable for use with the Safety Seat. Pulling the belt through the buckle after the buckle is fastened tightens this type of seat belt. The center rear seat belt is most often this type of seat belt (Fig. 17-1).




lengthened again (Fig. 17-2).
A lap/shoulder combination seat belt with a latch plate that locks the lap belt into position is suitable for use with the Safety Seat. Once this type of seat belt is fastened, the latch plate prevents the lap belt from loosening.

fastened, must be unbuckled and allowed to retract fully before allowing the belt to be



This combination seat belt does not require a locking clip (Fig. 18-1).

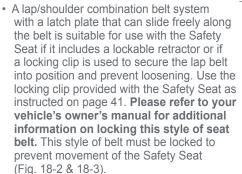




Fia. 18-1

Some on-base locking clip applications based on the automobile buckle stalk length may necessitate the locking clip is placed in the center of the base belt path (Fig. 18-4).

Contact Baby Trend at 1-800-328-7363 to obtain a Locking Clip.








Fig. 18-3

SAFETY SEAT FEATURES AND THEIR PROPER USE

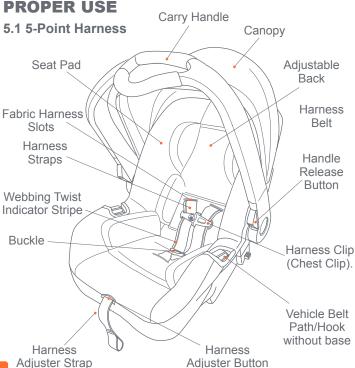


5.2 Rear view of Car Seat

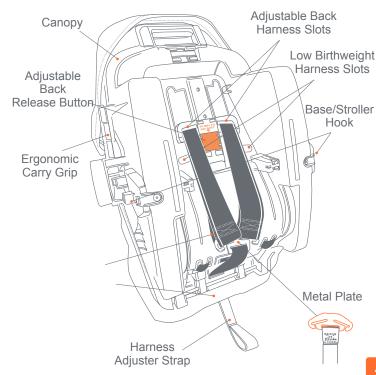



5.0 FEATURES


5.3 Rear view of Component locations

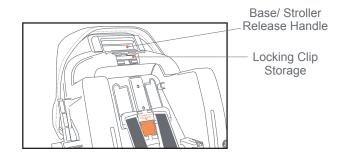

Webbing Twist Indicator Stripe

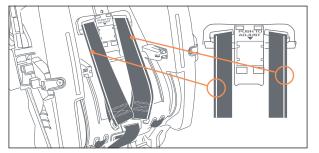

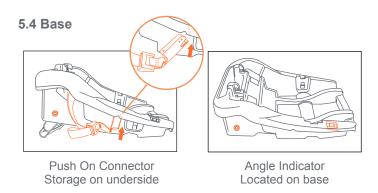


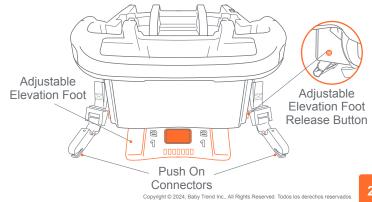

5.0 FEATURES


Your Safety Seat base can be installed with either the vehicle belt or with the included LATCH attachment system.

To properly install the Safety Seat and protect your child, you must carefully follow the instructions that correspond with the model you have purchased.

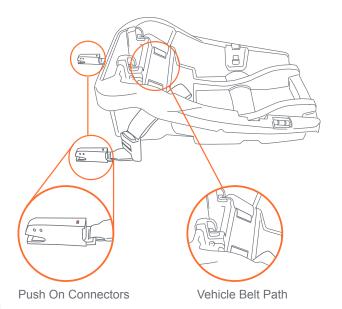

5.5 Use of the Safety Seat with the Base

- To remove the car seat from the base, squeeze the Base Release handle, located below the head end of the Safety Seat, to release the Safety Seat from the Base. Refer to (Fig. 24-1).
- To attach the Safety Seat to the Base, align the Safety seat with the Base and push down until the Safety Seat latches onto the Base. Check that both sides of the Safety Seat are securely attached to the base.

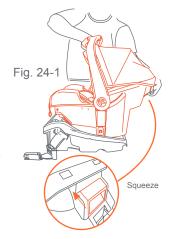

5.6 Other Features

Harness

We manufacturer several different styles of Safety Seat each with various levels of features, adjustments, and weight and size ratings. Please follow the instructions that correspond with the features included on your particular model.



5-Point Harness

5.0 FEATURES

Seat Angle Indicators

The Seat Angle Indicator is used to ensure that the seat is installed at the proper degree of recline to adequately protect your child in a crash.



Locking Clip

The Locking Clip is stored at the back of the Safety Seat and is used to securely install the Safety Seat with certain types of vehicle lap/ shoulder combination belts. Contact Baby Trend at 1-800-328-7363 to obtain a Locking Clip



The Seat Angle Adjuster raises and lowers the front of the Base in order to obtain the proper angle of recline for proper installation of the Safety Seat when using the Base.




5.7 Operation of the Carry Handle

AWARNING

Toys or other objects attached to carry handle can cause injury in a crash. Never attach toys or other objects to handle when in vehicle.

The Carry Handle has five positions: Rebound, the carry position, a mid-storage position, a storage position and the non-rocking position.

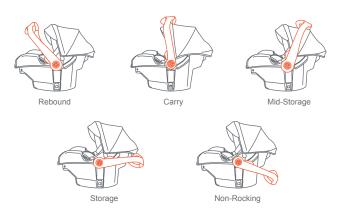

5.0 FEATURES

In-Vehicle Handle Use

ONLY use **Rebound** or **Storage** Handle positions in vehicle. Use **Storage position** for children greater than 22 lb or if feet can touch the handle (Fig. 27-1).




Fig. 27-1

To adjust handle position

- Depress the two buttons located on the handle just above the connection to the Car Seat shell to release the handle.
- Slowly rotate the handle to the desired position. The buttons should pop out and the handle should automatically lock into the new position (Fig. 27-2).
- Before lifting the Car Seat, push on the handle to check that both sides of the handle have locked into the Carry position.



Fig. 27-2

5.8 Attaching the Canopy

Slip the canopy stays through the sleeves on the canopy.

The canopy is attached by inserting the ends of the canopy plastic stays into the female fittings found on the inside of the handle hub (Fig. 28-1).

Use the hook and loop fasteners on the rear side of the fabric to join the canopy to the Car Seat frame (Fig. 28-2).



Fig. 28-1



5.9 Ergonomic Side Carry Grip

 Rotate handle to the carry position. Cross forearm through the carry handle to place your hand on the grip (Fig. 28-3).



5.0 FEATURES

5.10 Inserts Use

- Use is not mandatory
- · ONLY use inserts with children who weigh between 4-18 lbs.
- · NOT included in all models. styles may vary.





Seat Insert

5.11 Adjustment of the Shoulder Straps

AWARNING

Failure to properly adjust the harness on your child increases the risk of death or serious injury in the event of a sharp turn, sudden stop or crash. Please follow the instructions very closely to ensure that the harness is properly adjusted to fit your child at all times. Your child will grow very rapidly! Please check the fit of the harness every time you use the Safety Seat.

5.11.1 Car Seat with Adjustable Back Safety Seat

This Car Seat includes a sliding Adjustable Back that will adjust the height of the harness straps as the back is adjusted (Fig.30-1).

- 1. The proper height of the harness straps is at or just below your child's shoulders (Fig. 30-2).
- 2. Press the Blue button behind the seat back to raise or lower the moving seat back and harness straps (Fig. 30-3).
 - To adjust the seat back height, press the Blue moving back adjuster button behind to increase the seat back height and to decrease the seat back height. Each adjustment position will raise or lower the slots 12.5mm (1/2").
- Button must remain in the out position after adjustment (Fig. 54-1). DO NOT use the Car Seat with the Harness adjusted above the child's shoulders as the child will not be held securely in a sharp turn, sudden stop, or crash.
- If the metal plate comes in contact with the Blue release button (a) and limits the harness length adjustment, change the metal plate to the next longest harness loop (Fig.30-4).

See section 5.13 Harness Length Adjustment.

Proper height is even or just below shoulder








Fig. 30-3



5.0 FEATURES

5.11.2 Car Seat use of Fixed Back Shoulder Position. -Low Birthweight Harness Routing

- ONLY use this position if the child's shoulder are below the lowest position of the adjustable seat back (Fig. 31-1).
- The fixed seat back of this Car Seat features. one height adjustment for the harness straps for Low Birthweight children.
- The harness straps must be used in the fixed back position with the straps even with or just below your child's shoulders.






Fig. 31-1

The harness straps are adjusted as follows:

- 1. After verifying that your child's shoulders are below the lowest adjustable back position by placing your child in the Car Seat such that your child's bottom is all the way to the rear and bottom of the seat (Fig. 31-1).
- 2. Remove child from Car Seat.
- 3. Remove the Car Seat from the Base and rotate the Carry Handle to the rebound, carry or storage position.


- 4. Loosen the Harness Straps by depressing the Harness Adjuster Button located below the flap just ahead of the Harness Buckle and pulling on the harness straps (Fig. 32-1).
- 5. Move adjustable seat back to the top position by pressing the blue button and pull up (Fig. 32-2).
- 6. Turn the seat over, Locate the Metal Adjuster Plate near the bottom of the seat (Fig. 32-3). Remove both Harness Straps from the Belt Adjuster Plate.



Fig. 32-1




Fig. 32-2

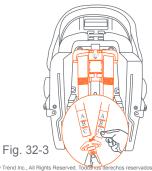


5.0 FEATURES

5.11.2 Car Seat use of Fixed Back Shoulder Position. -Low Birthweight Harness Routing continued

- 7. From the front of the seat, pull the Harness Straps out through the harness slots in the adjustable back and seat pad (Fig. 33-1).
- 8. Position the Harness Strap over the fixed back Harness Slot (Fig. 33-2) and using the included Belt Threading Tool, push the Harness Straps through the Slots, in the seat pad and the seat shell, repeat for the other Shoulder Strap (Fig. 33-3).





Belt Threading Tool

Fig. 33-3

the Harness Straps through the Slots until you have enough strap to reach the Belt Adjuster Plate (Fig. 34-1). 10. Ensure the harness strap ends are fully hooked on the metal plate.

9. From the rear of the Car Seat, pull

- Both sides must be threaded in the same position, position A (Fig. 34-2).
- 11. Inspect the Harness Straps from the front and rear to ensure that they are not twisted. Twisted straps can prevent proper tightening of the Harness and thus may not adequately restrain your child in a sharp turn, sudden stop or crash.
- 12. Before using the Safety Seat, please pull on the Harness Straps from the front to ensure that they are securely reattached.
- 13. Fold webbing over metal plate and secure with hook and loop fastener (Fig. 34-3 Fig. 34-4).

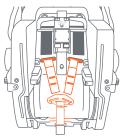


Fig. 34-1



Fig. 34-2





Fig. 34-4

5.0 FEATURES

5.12 Adjustment of the Crotch Strap Length

The crotch strap is adjustable in length to ensure a safe and comfortable fit for harness. The crotch strap length should be adjusted such that a gap of 1/2" to 1" is present between the ears of the buckle, and the top of the child's thigh, disregarding any clothing or diaper (Fig. 35-1). Your child will grow very quickly so always check that the buckle is the proper height whenever placing your child in the Safety Seat.

The crotch strap length adjustments: To shorten buckle webbing length, thread the anchor bracket through the slot closest to the in-use position. Ensure the Anchor Bracket is completely through. To lengthen buckle webbing, undo the anchor bracket from the second slot and pull the buckle up. Ensure the Anchor Bracket secures in place (Fig. 35-2).

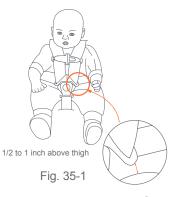






5.13 Harness Length Adjustment

There are three harness length adjustment positions.




- 1. Loosen harness straps by pressing the Harness Adjuster Button and pulling the Harness straps toward you.
- 2. From the backside of the car seat unfasten harness end loops from metal plate (Fig. 36-2).
- 3. From backside fasten harness end loops on to metal plate (Fig 36-3).
- 4. Ensure the harness strap ends are fully hooked on the metal plate. Both sides must be threaded in the same position (Fig 36-3).
- 5. If using Position A, loop B and C must be on top of the Belt Adjuster Plate (Fig. 36-4).







Fig. 36-3



6.0 INFANT RESTRAINT

5.0 FEATURES

6.1 Size and Weight Limitations

AWARNING

DEATH or SERIOUS INJURY can occur

- Proper use is required

Your child must meet <u>ALL</u> these requirements:

- Weight between 4 and 30 lbs 1.82 and 13.6 kg)
- Height is 29.5 inches (74.9 cm) or less
- The Harness Straps must be at or just BELOW child's shoulders when in highest adjustment position.



USING INFANT RESTRAINT

6.2 Securing your Child in the Safety Seat / Carrier

AWARNING



Children have STRANGLED in loose or partially buckled harness straps. Fully restrain the child even when carrier is used outside the vehicle.

Failure to properly secure your child in the Safety Seat / Carrier increases the risk of death or serious injury from suffocation or falls, or in the event of a sharp turn, sudden stop or crash.

In a crash, the safety seat provides no protection for your child unless the Harness Straps are properly installed according to these instructions. Make sure that the harness straps are properly adjusted and secured whenever using the Safety Seat, even when using as a carrier.


Please follow these instructions carefully to properly secure your child.

6.0 INFANT RESTRAINT

6.0 INFANT RESTRAINT

 Check that the Harness Straps are installed in the proper slot or adjusted to the proper height as described in section 5.11, Adjustment of the Shoulder Straps, preceding.

- The clothing you dress your child in will affect the proper use of the Safety Seat. Please dress your child in clothing that will:
 - Allow the Harness Straps to securely latch between your child's legs.
 - Keep the shoulder straps properly located on your child's shoulders.
- 3. Place the Safety Seat on a firm and level surface. Move the carry handle to the non rocking position. Loosen the Harness Straps by pulling on the straps while pushing on the Harness Adjuster Button located below the pad just in front of the buckle. Unfasten the Harness Chest Clip. Unbuckle the Harness Straps and drape the Harness Straps over the Seat back or to the sides of the Safety Seat (Fig. 39-1).
- Place your child in the Safety Seat so that the child's bottom is against the back and bottom of the seat (Fig. 39-2).
- Pull the harness straps down over your child. Check that the harness straps are not twisted.



Incorrect

Fig. 39-2

6.3 For the 5-Point Harness

 Insert both buckle tongues into the harness buckle on the crotch strap. Pull up and test buckle tongues to be sure they are secure (Fig. 40-1). Fasten the Harness Chest Clips together (Fig. 40-2). Position the Harness Chest Clip, by sliding the Clip either up or down on the Harness Straps, so that it is level with the child's armpits (Fig. 40-3). Make sure that you hear the tongues click into the buckle and check that both are firmly latched by pulling upward on the straps. If the harness straps are not securely buckled, the safety seat will NOT provide protection for your child. DO NOT use the safety seat, even as a carrier, if the harness does not securely buckle. Please call Baby Trend at 1-800-328-7363 for assistance.





Fig. 40-1



Fig. 40-2

Accessory products for use with the Safety Seat are acceptable for use provided that they do not interfere with the harness assembly, or the proper adjustment of the harness such that it remains tight on the child's shoulders at all times.



Fig. 40-3

6.0 INFANT RESTRAINT

7.0 INSTALLATION

- From the front of the Safety Seat, pull outward on the Harness Adjuster Strap to tighten the Harness Straps Make sure that both Harness Straps are flat and snug on your child's shoulders (Fig. 41-1).
- In Adjustable Back Safety Seat Mode, If the metal plate comes in contact with the Blue release button (a) and limits the harness length adjustment, change the metal plate to the next longest harness loop (Fig.41-2).
 See section 5.13 Harness Length Adjustment.

A snug strap should not allow any slack. It lies in a relatively straight line without sagging. It does not press on the child's flesh or push the child's body into an unnatural position.





Fig. 41-2

Thick, soft, or other compressible material in excess of 1/4 inch thick should not be placed behind or under the child or between the child and harness straps. Examples of accessory products are head support pillows or rolled blankets to add additional head support.

AWARNING: Toys or other objects attached to carry handle can cause injury in a crash. Never attach toys or other objects to handle when in vehicle. Never store or place items such as pacifier, toys, blankets behind the Adjustable Back Head rest.

SECURING THE SAFETY SEAT OR BASE IN THE VEHICLE

Please read carefully section 4.3, **Check that the Vehicle Seat Belt is Safe to Use**, before proceeding with the installation of the Safety Seat. Please understand that due to the extremely large number of vehicles in use today, and the correspondingly large number of safety belt systems, this section can only provide guidance, as to the proper installation of the Safety Seat, that must be combined with the information provided by your vehicle manufacturer in order to obtain a proper and safe installation.

Failure to properly install and secure the Safety Seat in a rear facing position within the vehicle increases the child's risk of death or serious injury in the event of a sharp turn, sudden stop or crash. Carefully follow these instructions, and the instructions provided by your vehicle manufacturer for the installation of child safety seats, to ensure that the Safety Seat is properly located, positioned and held tightly installed at all times.

7.0 INSTALLATION

7.1 Preparation

- 1. Park your vehicle on a level surface so that the level indicator located on the left side of the Safety Seat will properly indicate the proper angle of recline of the seat.
- 2. Make sure you have selected an acceptable location for the safety seat as instructed in section Selecting the Best Location for the Safety Seat on page 11.
- 3. Check again for any Active Air bags. DO NOT use any location that has an active air bag or is adjacent to an Active Air bag such that, when deployed, the Active Air bag may come into contact with the Safety Seat. Many passenger side Active Air bags are designed to deploy to protect the passenger side as well as the center front seating position. Please see the Active Air bag warnings in your vehicle owner's manual to help determine unsafe locations in the vehicle.
- 4. If the front seat position is used, slide the vehicle seat as far to the rear as possible to prevent the safety seat from striking the dash in a crash. If the rear seat position is used. slide the vehicle seat directly in front of the Safety Seat forward enough to prevent the Safety Seat from striking the vehicle seat back in a crash.
- 5. Check that the vehicle seat back is locked in the upright position and will not fold forward onto the Safety Seat. (Fig. 44-1).

7.2 Installation of the Safety Seat / Vehicle **Belt Installation of Base:**

AWARNING: Toys or other objects attached


to carry handle can cause injury in a crash. Never attach toys or other objects to handle when in vehicle.

- 1. Remove any toy or other objects attached to carry handle before installing car seat in vehicle.
- 2. Remove the Safety Seat from the base by squeezing the base release handle located under the center of the head end of the Safety Seat and lifting upward on the Safety Seat (See Fig. 24-1). Store both LATCH push on connectors as shown in Fig. 51-1.
- 3. If you are using the Base with the Safety Seat, place the Base in the rear-facing position in a forward facing vehicle seat as shown in (Fig. 44-2). If you are using the Safety Seat without the Base. place the Safety Seat in a rear-facing position in a forward facing vehicle seat as shown in (Fig. 45-1). The Child must face the rear of the vehicle and Safety Seat must be placed in a vehicle seat that faces forward.



Folding seat must be locked

Fig. 44-1



Lap/Shoulder Belt



Lap Belt only Fig. 44-2

7.0 INSTALLATION

- See (Fig. 40-2) for the proper threading of the vehicle belt through the Base and (Fig. 45-1) for the proper threading of the belt through the Safety Seat without the Base.
- Buckle the seat belt being careful that the seat belt is not twisted and is securely latched into the appropriate buckle, and not the adjacent buckle (Fig. 46-1).
- 6. Proper installation of the Safety Seat or Base requires that the seat belt be very tight. To tighten the seat belt, push down hard with your knee or hand on the Safety Seat or Base while pulling and tightening the seat belt. Check that there is no slack in the seat belt on either side of the Safety Seat or Base, or anywhere along the path of the belt, and that the seat belt is tight from end to end. (Fig. 46-1 and 46-3). Adjust handle to the correct position seen below in (Fig. 45-2).

ONLY use **Rebound** or **Storage** Handle positions in vehicle. Use **Storage position** for children greater than 22 lb or if feet can touch the handle (Fig. 45-2).



Lap/Shoulder Belt



Fig. 45-1




Fig. 45-2








Fig. 46-2

Fig. 46-3

- 7. To tighten a lap belt only:
 - An automatically retracted lap seat belt is tightened by feeding belt back into its retractor while pushing down hard on the Safety Seat or Base. Make sure that the retractor locks the lap belt into place and that the belt remains very tight (Fig. 46-4).




• A manually adjusted lap seat belt is tightened by pulling on the free end of the seat belt while pushing down hard on the Safety Seat or Base. If you experience difficulty tightening the seat belt, unbuckle the seat belt, tighten the seat belt a small amount and re-buckle the seat belt. Repeat this procedure until the seat belt is very tight around the Safety Seat or base. Check that the seat belt remains very tight around the Safety Seat or base (Fig. 46-5).



7.0 INSTALLATION

- 8. To tighten a combination lap/shoulder seat belt:
 - A lap/shoulder combination belt with a locking buckle is tightened by pulling upward on the shoulder portion of the seat belt while pushing down hard on the Safety Seat or Base. If you experience difficulty tightening the seat belt, unbuckle the seat belt, tighten the seat belt a small amount and re-buckle the seat belt. Repeat this procedure until the seat belt is very tight around the Safety Seat (Fig. 47-1).
- 9. A lap/shoulder combination seat belt with a buckle that can slide freely along the seat belt may require the use of a locking clip (Fig. 47-2). Check your vehicle's owner's manual to see if the vehicle manufacturer has provided an alternate manner, such as a locking retractor in which to prevent movement of the lap portion of the seat belt.






- To install the locking clip, tighten the buckled seat belt by pulling upward on the shoulder portion of the seat belt while pushing down hard on the Safety Seat or Base.
- While maintaining downward pressure on the Safety Seat or Base, squeeze the shoulder belt and lap belt together just above the buckle to prevent from moving. Unbuckle the seat belt being careful to prevent movement of the buckle.
- Secure the shoulder belt to the lap belt by installing the locking clip 1/2 inch from the buckle as shown in (Fig. 48-1).

Some on-base locking clip applications based on the automobile buckle stalk length may necessitate the locking clip is placed in the center of the base belt path (Fig. 48-2).

 Re-buckle the seat belt and check that the seat belt is very tight around the Safety Seat or Base. Pull on the lap belt to ensure that the locking clip is locking the lap belt and it remains very tight.



Contact Baby Trend at 1-800-328-7363 to obtain a Locking Clip.




Fig. 48-2

7.0 INSTALLATION

10. If you are using the Base, check that nothing is on top of the base, or anything that will interfere with the proper latching of the Safety Seat to the Base. Place the Safety Seat onto the Base and push down until the Safety Seat latches securely to the Base and you hear a click (Fig. 49-1). Pull upward on the Safety Seat to check that the Safety Seat is securely latched onto the base (Fig. 49-2).






If the Safety Seat does not securely latch onto the Base, the Safety Seat will NOT provide Protection for your child. DO NOT use the Safety Seat with the Base if it does not securely latch into place. Please call Baby Trend at 1-800-328-7363 for assistance.

11. Adjust carry handle to the correct position: ONLY use Rebound or Storage Handle positions in vehicle.

Use Storage position for children greater than 22 lb or if feet can touch the handle (Fig. 49-3).



Fia. 49-3

7.3 Installation of the Base using LATCH



Lower Anchors and Tethers for Children (LATCH). System is designed to make installation of child safety seats easier by requiring child safety seats to be installed without using the vehicle's seat belt system. By September 1, 2002, two rear seating positions of all cars, mini vans and light trucks will come equipped with lower child safety seat anchor points located between a vehicle's seat cushion and seat back. Also by September 1, 2002, all child safety seats will have two attachments which will connect to the vehicle's lower anchor points. Together, the lower anchors and upper tethers make up the **LATCH** system. Rear-facing infant seats do not make use of the upper tether.

7.0 INSTALLATION

- Remove any toy or other objects attached to carry handle before installing car seat in vehicle.
- Locate a LATCH seating position as identified in your vehicle owner's manual. Some LATCH seating positions may require deploying of anchors, or installation of guides.
- Remove the Safety Seat from the base by squeezing the base release handle located under the center of the head end of the Safety Seat and lifting upward on the Safety Seat (Fig. 24-1).
- 4. Remove the LATCH Push On Connectors from their storage position inside the base (Fig. 51-1). Place the Base in the rearfacing position in a forward facing vehicle seat as shown in (Fig. 51-2). The Child must face the rear of the vehicle and Safety Seat must be placed in a vehicle seat that faces forward.




Fig. 51-2

Push On LATCH Connector Storage

Fig. 51-1

5. Locate the **LATCH** anchors in the vehicle seat (Fig. 51-2). Once located, snap the Safety Seat **LATCH** connectors onto the steel rod. Listen for the click and check that both connectors are firmly attached to the anchor rods by pulling outward on the connectors. The **LATCH** connector indicator window will turn Green when the **LATCH** connector is attached to the **LATCH** Anchor (Fig. 52.1).

6. Proper installation of the Base requires that the **LATCH** webbing be very tight. To tighten the webbing, push down hard with your knee or hand on the Base while pulling upward on each webbing end. The webbing will automatically lock in place. Check that there is no slack in the webbing on both sides of the base and that the base is tightly installed (Fig. 52-2 and 52-4).

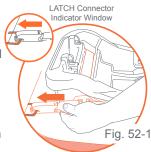



Snap onto anchors Fig. 52-2



Fig. 52-3



Fig. 52-4

7.0 INSTALLATION

7. Check that nothing is on top of the base or anything that will interfere with the proper latching of the Safety Seat to the Base. Place the Safety Seat onto the Base and push down until the Safety Seat latches securely to the Base and you hear a click. Pull upward on the Safety Seat to check that the Safety Seat is securely latched onto the base (Fig. 24-1).

If the Safety Seat does not securely latch onto the Base, the Safety Seat will provide No Protection for your child. DO NOT use the Safety Seat with the Base if it does not securely latch onto the Base. Please call Baby Trend at 1-800-328-7363 for assistance.

8 To remove the base from the vehicle, squeeze the webbing release button on the LATCH Push On Connector to loosen the webbing (Fig. 53-1a).

NOTE: The LATCH connector can not be released from the **LATCH** anchor if the webbing is tight. Press the red LATCH release button on each Push On Connector to release the connector from the anchor (Fig. 53-1b).

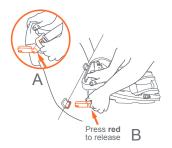


Fig. 53-1

7.4 Setting Proper Recline of the Safety Seat / Base

For your child's safety, the Safety Seat must be properly reclined when installed in the vehicle. The Safety Seat includes a Seat Angle Indicator on the lower portion of the shell on the child's left side, to assist in achieving the proper angle of recline for the Safety Seat (Fig. 54-1).



Use weight range as appropriate See warning label on safety seat

Fig. 54-1

AWARNING

Failure to properly recline the Safety Seat on the vehicle seat increases the risk of death or serious injury. If the Safety Seat is positioned too upright, the child's head may drop forward and result in breathing problems. If the Safety Seat is too reclined, excessive force may be exerted on the child's shoulders and neck in a crash. The following instructions must be carefully followed to ensure proper recline angle for the Safety Seat.

7.0 INSTALLATION

- 1. Safety Seat with Base: Make sure the vehicle is parked on level ground. Lock the Safety Seat onto the Base and check that the Safety Seat is level side to side on the vehicle seat (Fig. 55-1). Check the Seat Angle Indicator that matches the weight of your child.
 - If the Seat Angle Indicator shows the bubble centered between the lines, the seat is installed at the proper level of recline for occupants 4-22 lb. (Fig. 55-2).
 - If the Seat Angle Indicator shows the level line parallel with the ground, the seat is installed at the proper level of recline for occupants greater than 22 lb. to 30 lb. (Fig. 55-3).
 - If the Seat Angle Indicator bubble level (4-22 lb.) is not centered or level line (23-30 lb.) is not parallel with the ground, extend the elevation foot, See section 7.5 To Deploy Elevation Foot, under the front of the base at the foot end to achieve the correct position (Fig. 55-4). If the correct elevation can not be achieved see section 7.5 Elevation Aids. Re-tighten the vehicle seat belt as instructed in section. securing the Safety Seat or Base in the Vehicle








Fig. 55-3



Fig. 55-4

2. Safety Seat without Base: Check that the Safety Seat is

level side to side on the vehicle seat. Check the Seat Angle Indicator that matches the weight of your child (Fig. 56-1).



Fig. 56-1

 If the Seat Angle Indicator line is not level, the Safety Seat is either too upright or too reclined. If the Safety Seat is too reclined adjust the Safety Seat as shown in (Fig. 56-2), until the level indicator shows level. If the Safety Seat is too upright, place a tightly rolled towel, or pool noodle, under the foot end of the Safety Seat until the level indicator shows level (Fig. 56-3). Re-tighten the vehicle seat belt as instructed in section Securing the Safety Seat or Base in the Vehicle.







Fig. 56-3

7.0 INSTALLATION

7.5 To Deploy Elevation Foot

1- Turn Base over with elevation foot away (Fig. 57-1).

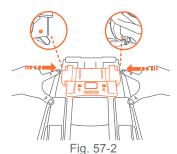


Fig. 57-1

4- Gently Move elevation foot, back and forth to confirm the elevation foot is in the locked position (Fig. 58-1).



2- Press elevation foot release buttons located on the side of the base (Fig. 57-2).



3- While holding buttons in rotate elevation foot up into the locked position (Fig. 57-3).



7.5 .1 Elevation Foot Height Adjustment

- 1- Press blue elevation foot release button located on the front of the of the base to change base height to positions (Fig. 58-2).
- 2- While holding blue button in, move the elevation foot up or down into the locked position. Gently Move elevation foot up and down to confirm the foot is in the locked position of positions 2, 3, or 4.

NOTE: Position 1 is the store position (Fig. 57-1).


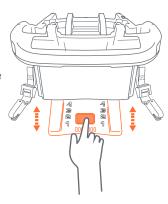



Fig. 58-2

7.0 INSTALLATION

7.5.2 To Lower Elevation Foot

- 1- Press elevation foot release buttons located on the side of the base (Fig. 59-1).
- 2- While holding buttons in rotate elevation foot up into the locked position (Fig. 59-2).

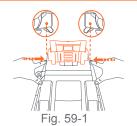



7.6 Pool Noodle / Elevation Aids

- If the Seat Angle Indicator level line is not parallel with the ground, or the bubble is not centered, using the Elevation Foot, stow the elevation foot under the base, place a rolled towel, folded towel or pool noodle under the front of the base (Fig. 59-3), or at the foot end of carriers (Fig. 60-1), to achieve the correct position.
- A rolled towel, folded towel or pool noodle may be placed at the back of the base for elevation (Fig. 60-2).



Fig. 59-3



Fig. 60-1



Fig. 60-2

7.7 Base Use

 When placing a pool noodle(s), rolled or folded towel ensure the elevation aid extends beyond the outside edge of the base by at least 1 inch (Fig. 60-3).





Fig. 60-3

60

7.8 Pool Noodle and Towel Examples but not limited to:



8.0 FINAL CHECKS

9.0 ADD'L INFORMATION

FINAL SAFETY CHECKS

8.1 Checking Safety Safety

- If your child is already in the Safety Seat, check that the harness is properly fitted and tight as instructed in the section 6.1, Securing your Child in the Safety Seat / Carrier.
- 2. Make sure that the Safety Seat is tightly installed and secure in the vehicle by performing the following test every time you use the Safety Seat. Firmly push down and side to side on the head end of the Safety Seat to make sure that the vehicle seat belt does not loosen at all and that the vehicle seat belt is fastened very tightly around the Safety Seat / Base. If you find that the vehicle seat belt loosens or that the seat easily moves or rotates downward, please see section entitled Selecting the Best Location for the Safety Seat to determine if the position you have selected is adequate and check that you have completed all of the steps in the section entitled Securing the Safety Seat or Base in the Vehicle.

DO NOT use this seating location if the Safety Seat does not remain tightly installed in the vehicle seat!

- 3. Remove any toys or other objects attached to carry handle
- 4. Adjust carry handle to an approved in-vehicle-use position.

ADDITIONAL INFORMATION

9.1 Using the Safety Seat in an Airplane

This Safety Seat may be used with and without the Base in an airplane in the same manner as it is used in an automobile. Please check with the airline in advance to determine their policies regarding the use of Safety Seats aboard the airplane. The Safety Seat must be used in only a forward facing airplane seat. Please ask the flight attendant for assistance in placement of the Safety Seat. Please follow these instructions for proper installation and perform the Final Safety Check as instructed herein.

9.2 Using your Baby Trend Safety Seat with a Baby Trend Stroller

Please see the stroller owner's manual for information on the use of the Safety Seat with the Baby Trend stroller.

9.3 Cleaning and Maintenance

The hard surfaces of the Safety Seat, (plastic components and metal parts). May be cleaned by wiping with a solution of water with mild soap. **DO NOT** use bleach as it may weaken plastic components. Dry all surfaces with a clean towel.

The Harness Straps may be spot cleaned with a solution of mild soap and water or may be replaced if they become overly soiled. **DO NOT** launder the straps as they may become damaged or weakened. Please contact Baby Trend customer service to order replacement harness straps.

9.0 ADD'L INFORMATION

9.0 ADD'L INFORMATION

DO NOT use lubricants of any kind on any of the components of the Safety Seat and Base, including the buckle and LATCH system.


The seat pad may be washed as follows:

- Remove the harness shoulder straps from the Safety Seat as instructed in the section Adjustment of the Shoulder Straps.
- For the 5-point harness, unthread the shoulder strap from the Harness-tie and Buckle Tongues, leaving the Buckle Tongues in the Buckle. Be sure to note how they are threaded to assist in reassembling.
- 3. For the Adjustable Back Safety Seat, carefully remove the headrest fabric then adjust the Adjustable Back to its lowest position. Carefully remove the seat fabric. For the Fixed Back Safety Seat, carefully remove the seat fabric. For 5-point harness models, do not unthread the lower portion of the harness from the Safety Seat.

DO NOT use the Safety Seat Without the Seat Pad.

- 4. For care and maintenance see fabric tag.
- Reinstall seat pad on Safety Seat when dry being careful to reassemble the shoulder straps at the appropriate height as described in section Adjustment of the Shoulder Straps.
- For the 5-point harness models, place seat pad on Safety Seat, threading the Harness straps through the Pad bottom slots and pulling the Buckle through the opening at the rear of the flap on

Pad. Thread the Harness Straps through Buckle Tongues and Harness-Tie. See section **Adjustment of the Shoulder Straps** for re-threading of shoulder straps.



Inspect the Harness Straps from the front and rear to ensure that they are not twisted. Twisted straps can prevent proper tightening of the Harness and thus may not adequately restrain your child in a sharp turn, sudden stop or crash. Before using the Safety Seat, please pull on the Harness Straps from the front to ensure that they are securely re-attached.

9.4 Replacement Parts


If You Need Help or Replacement Parts, please call our Customer Service Department at **1-800-328-7363** between the hours of 8:00 a.m. and 4:30 p.m., Pacific Standard Time, Monday through Friday or visit us online at **www.babytrend.com**

9.0 ADD'L INFORMATION

WARRANTY

9.5 Cozy Cover

1- Installation (Not included with all models). Slide the cozy cover / boot over the front on the Infant seat. Secure the cozy cover / boot by sliding the strap through the path of the belt or by clipping the strap to the edge of the car seat frame as illustrated.

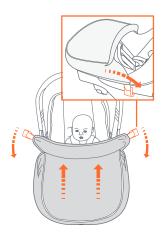

WARRANTY

DO NOT RETURN YOUR PRODUCT TO THE STORE.
PLEASE CONTACT BABY TREND® FOR REPLACEMENT
PARTS, SERVICE AND REPAIR.

The Baby Trend® warranty covers workmanship defects within 1 year of purchase. Any product which has been subjected to misuse, abuse, abnormal use, excessive wear and tear, improper assembly, negligence, environmental exposure, alteration or accident, or has had its serial number altered or removed invalidates all claims against the manufacturer. Any damage to property during installation is the sole responsibility of the end user. Customer Service Department can be contacted at 1 (800). 328-7363 Monday through Friday between 8:00 a.m. and 4:30 p.m. (PST). Return Authorizations are required prior to returning product(s). to Baby Trend®. Please visit http://babytrend.com/pages/limited-warranty for complete warranty details.



If you experience any difficulty in using this product, please contact our customer service department at 1-800-328-7363 between the hours of 8:00 a.m. and 4:30 p.m. Pacific Standard Time for assistance. Please have your model number and manufacturing date available when you call. This information can be found on a small sticker on the bottom of the product.



Baby Trend, Inc. 13048 Valley Blvd. Fontana CA 92335 1-800-328-7363 (8:00 a.m. ~ 4:30 p.m. PST) www.babytrend.com