
# OOKAMI GOLD®

## Honing Block Instructions

### Part # 20651

Parts List:	2	OOKAMI GOLD® Honing Block	(Part # 20650)
	3	Sheets OOKAMI® Deburr Paper	(Part # 20660)
	3	Sheets OOKAMI® Finish Paper	(Part # 20665)

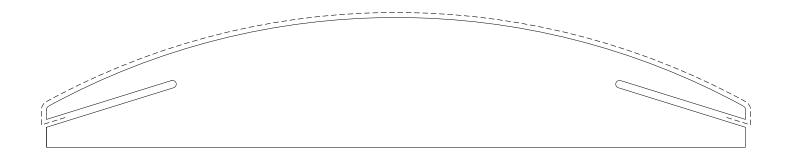

#### Installation of OOKAMI® papers:

- 1. Center and align the OOKAMI® Deburr paper on the OOKAMI GOLD® Honing Block, abrasive side up. (The DEBURR is readable.)
- 2. Fold one end over the end of the block and tuck it between the flexible upper section of the block and the brass pins.
- 3. Press down on the upper section so that the pins hold the paper in place.
- 4. Pull the paper firmly to the other end of the block and tuck it between the pins and upper section.
- 5. Press down the upper section.
- 6. The paper should now be tight over the curved top of the block, with no wrinkles or bulges.



800-888-3832 864-587-6008 864-587-0660 fax www.wolffindustries.com customerservice@wolffind.com

### How to use the OOKAMI GOLD® Honing Block:

1. Sharpen both blades on the left hand side of the Twice as Sharp®

For Best Results: Use a 600 grit or finer diamond.

**Note**: DO NOT remove burrs by spreading the blades or using the pink or white hones.

2. Angle the shears blade on the block and match the set or twist.

For Best Results: Take scissors apart.

- 3. Press down on the blades with two or three fingers. DO NOT hold onto the handle while honing.
- 4. Hone the blae forward and back on the OOKAMI GOLD® Honing Block to remove the burrs and produce a smooth line on the inside, all along the cutting edge.
- 5. Do the same to the other blade.





- Repeat the steps to both blades with the OOKAMI® Finish paper.
- 7. Proceed with the polishing steps on the OOKAMI GOLD® Polishing Wheel.

**Note:** NEVER use the OOKAMI GOLD® Honing Block after final polishing. Always cut off the extremely fine polishing burr.

For more instructions on using the OOKAMI GOLD® Honing Block or the OOKAMI GOLD® Sharpening System, see the OOKAMI GOLD® Instructional Video. (Part #28401)