


# iPV 8

## User Manual

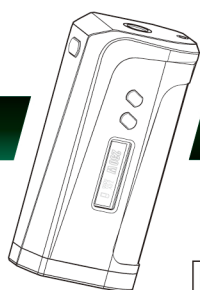

**MAX 230W**

- TEMP: You can press "-" or "+" button to adjust temperature limit value.
- COIL: Press "+" button to choose atomizer types among Ni200, Ti01, SS304, SX PURE, MANUAL TCR. Please match the "Coil Type" you choose exactly with the actual type of atomizer wire to achieve accurate TC performance. (After choosing "Manual TCR", you can set the TCR to use other coils except Ni/Ti/SS/ SX Pure.)
- Version: it will show what chip-set in your mod.
- Exit on: press + button to exit from menu mode to standby mode.

- (-1). Screw the TC coil atomizer into the 510 thread. Make sure the atomizer and the device are well connected.
- (-2). Press the "-" and "+" button simultaneously to set resistance. Setting resistance is an essential step when using TC function, before setting resistance, please make sure the coil is at normal temperature. Then TC function can work well.

### Standard Package

- 1x iPv 8 device
- 1x Micro USB cable
- 1xUser manual
- 1xGift box



### Specification

Output Power: 10W-230W	Output Voltage: 1.0V-7.0V
Output Joule: 10J-120J	Input Voltage: 6.4V-9.0V
SX Pure Output: 10W-230W/ 10J-120J	Output Current: 1.0A-45.0A
Standard Resistance:0.15ohm-3.0ohm	Input Current: 1.3A-45.0A
Joules Mode Resistance:0.05ohm-1.5ohm	Temp. limit Centigrade: 100°C-300°C
TCR Value: 0.00050-0.00700	Temp. limit Fahrenheit: 212°F-572°F

Powered by YiHi SX330-F8 Chip

### How to Use the SX Pure in Joule mode?

1. Choose "SX Pure" in the menu of "Coil" in the Joule mode, then exit from Joule mode to standby mode.
2. Press the "-" and "+" button simultaneously to set resistance. Then you can enjoy SX Pure.

**⚠ Notice: Do not set resistance when the coil is hot!**

### How to Enjoy the Pure Flavor in Wattage mode?

1. Choose "SX Pure" in the menu of "Coil" in the Joule mode, then exit from Joule mode to Power mode.
2. Screw the iPv Pure tank on iPv8, then SX Pure can work with resistance range same as the Joule mode and wattage range of 10-230W.

### Main Features

- Temp. control with SX Pure/SS304/ Ni200/ Ti wire
- Temp. control with all suitable kinds of wire by TCR setting
- Low Voltage Protection
- Low Resistance Protection
- High Input Voltage Warning
- Output Short Circuit Protection
- Reverse Battery Protection
- Temperature overheat protection
- Visual Operating System
- Directly charging

### Adjust Wattage and Joule


Under the standby mode, press the +/- to adjust the wattage/ Joule. The adjustment will speed up/down when keep pressing the +/- button for long time.

### Lock and Unlock

- Lock. Press power button 3 times continuously to lock the device.
- Unlock. Please repeat the step above.

**⚠ Notice: Please use a standard DC 5V/1A charger.**

### How to Operate iPv 8 Mod

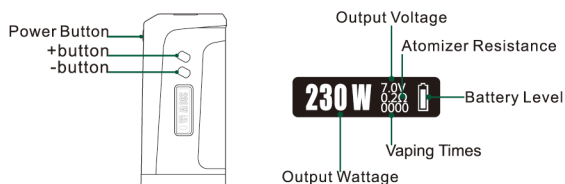

#### 1. Turn On/Off

-Turn On. Press the power button 5 times continuously to turn on the device. During power up you'll see the "Pioneer4you" logo followed by the device type "iPV 8". Then the device will step into standby mode.

-Turn Off. Under the standby mode, press power button 5 times to access the first menu "System Off", then press "+" button to turn off the device.

#### 2. Power mode- watt mode.

-Click the power button 5 times to access the main menu: System Off, Power Mode/ Exit On.

-Press the power button to choose "Power Mode" in the main menu.

-Pressing the power button to access "Exit On", then press "+" button can exit to the standby mode.

#### 3. Joule Mode- temp. control mode

-Click the power button 5 times to access the main menu.

-(Press the power button to switch the main menus and choose Mode "Power", then press "+" button to access Joule mode, if the device is in Power mode.)

(Please note the Power Button is to switch menus!)

-UNIT: Switch the temperature types between "Centigrade" & "Fahrenheit" by pressing the "+" button.

### Tips

Please read the instructions and precautions before using the device.

- 1.The device is not suitable for children, woman who is pregnant or breast feeding, or person at risk of heart disease, hypertension and diabetes, or taking medicine for depression and asthma.
2. This unit may include small parts. Please keep out of reach of children and pets.
3. Charge batteries when the power level is below 10 percent.
4. Please do not place it excessively hot or cold environments
5. Please don't insert the battery backwards; no vapor will be produced when this happens.
6. Please do not drop, throw, or abuse the device.
7. This product is sold purely for recreational purpose-----it is not a smoking cessation product and has not been tested as such.

### Warranty

Please consult with Pioneer4you official distributors for their warranty and return policy. Pioneer4you warranty does not apply to products purchased through unauthorized vendors.



www.pioneer4you.com

Thanks for your reading!