








TALON CONTROLS





› Deploying the Talon(s)

1

- Press the Home  button.
- Use the Menu Up  and Menu Down  buttons to find the Talon Control menu at the bottom of the display screen.
- Quickly double press the Right Softkey  to select the Down option.

NOTICE: When engaging the Talon to deploy, quickly double press the button twice to deploy. The remote will not recognize the press as a double press if the time between presses is too delayed.

- While the anchor is deploying, the action can be paused on the remote by either pressing the Right Softkey  or Left Softkey  again.
- The paused deployment can be resumed by quickly double pressing the Right Softkey  again.
- Once the deploying anchor gets to its full length of travel or comes in contact with the bottom, it will go through an anchoring sequence determined by the current Mode and then stop.

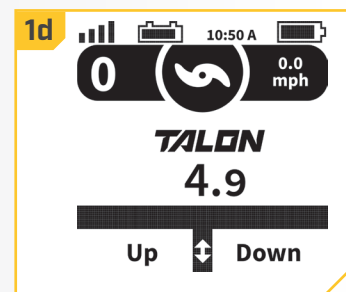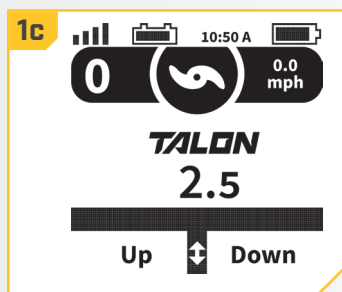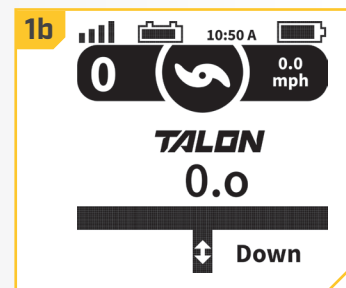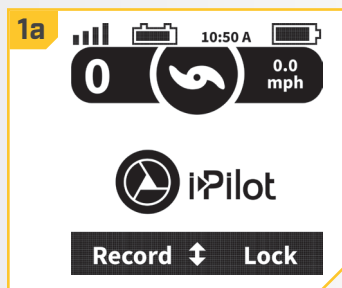

NOTICE: You do not need to press and hold the button to keep the Talon deploying. The Talon will automatically continue to deploy when the button is pressed until it has reached its full deployment length, received input to stop or completes anchoring.

NOTICE: Unless the Talon Control setting on the i-Pilot Remote is set to Right or Left, the remote will control both Talons when deploying. Be mindful of which Talon(s) is selected when deploying them.

WARNING








Take care that neither you nor other persons approach the Talon too closely, while operating, neither with body parts nor with objects. The Talon is powerful and may endanger or injure you or others. While the Talon is operating, watch out for persons swimming and for floating objects. Persons who lack the ability to run the Talon or whose reactions are impaired by alcohol, drugs, medication, or other substances are not permitted to use this product.





CAUTION

The Talon is equipped with a Deployment Notification Alarm. The Alarm is needed to comply with warranty requirements and when properly installed the alarm will only sound when the ignition key is turned on when the Talon is not fully retracted. Boat control may be affected by a deployed Talon. Take note of the Alarm, and always watch to make sure that the Talon is fully retracted while the boat is operating.

Retracting the Talon(s)

Use the buttons on the Indicator Panel to retract the Talon anchor.

- 1
 - a. Press the Home  button.
 - b. Use the Menu Up  and Menu Down  buttons to find the Talon Control menu at the bottom of the display screen.
 - a. To retract the Talon, Left Softkey .
 - b. While the anchor is retracting, the action can be paused on the panel by either pressing the Right Softkey  or Left Softkey  again.
 - c. The paused retraction can be resumed by pressing the Left Softkey  again. Once the retracting anchor on the Talon gets to its fully retracted state, it will stop.

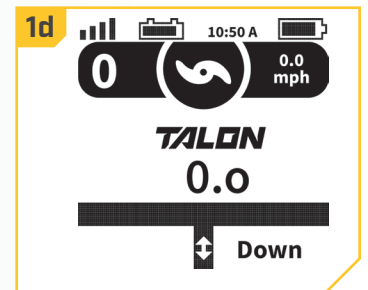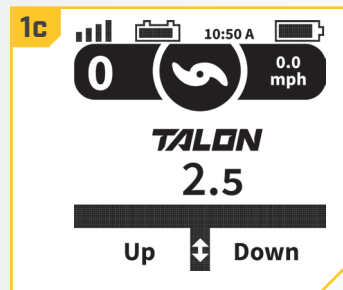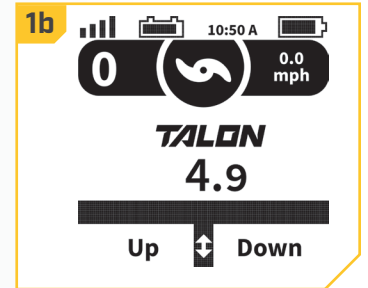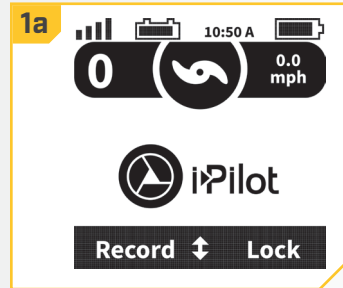

CAUTION





Be sure that the Talon is clear of obstructions and persons while retracting. The spaces between the 3 stages of the Talons can create a pinch point. Do not come in contact with the Talon while it is retracting to avoid the pinch point.

NOTICE: Unless the Talon Control setting on the i-Pilot Remote is set to Right or Left, the remote will control both Talons when retracting. Be mindful of which Talon(s) is selected when retracting them.



NOTICE: You do not need to press and hold the button to keep the anchor retracting. The Talon will automatically continue to retract when the button is pressed until the Talon is either fully retracted or receives input to stop.

Toggle the Talon Anchor Mode

Toggle the Anchor Mode on the i-Pilot Remote when the water or anchoring conditions change to fit your anchoring needs.

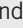- 1
 - a. Press the Home  button.
 - b. Use the Menu Up  and Menu Down  buttons to find the Anchor Mode option at the bottom of the display screen.
 - c. Use the Right Softkey  to toggle between, Standard (Std.), Rough, and Soft. The current Anchor Mode will be visible on the display screen.



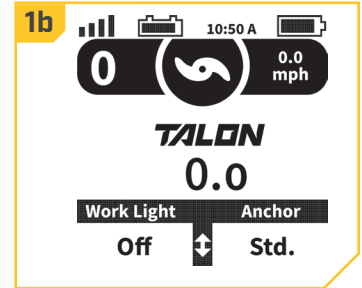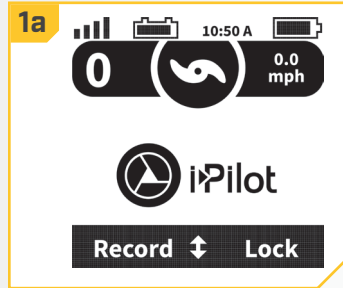

NOTICE: When the i-Pilot System is paired with two Talons, toggling the Anchor Mode on the i-Pilot Remote for one Talon will toggle the Anchor Mode for both Talons.






NOTICE: Read the "Using the Talon" section of the Talon Owner's Manual to learn more about Modes.

Toggle the Work Light Intensity

The Work Light on the Talon has a high - medium - low intensity setting of white LEDs and blue LEDs. When the Work Light is turned on, the LEDs will be either white or blue, and then an intensity setting can be selected.

- 1
 - a. Press the Home  button.
 - b. Use the Menu Up  and Menu Down  buttons to find the Work Light option at the bottom of the display screen.
 - c. Use the Left Softkey  to toggle between, Off, Low, Medium and High. The current Work Light Intensity will be visible on the display screen.

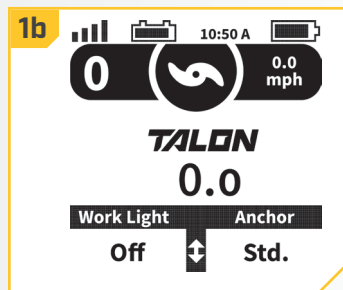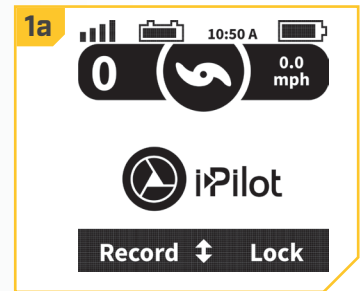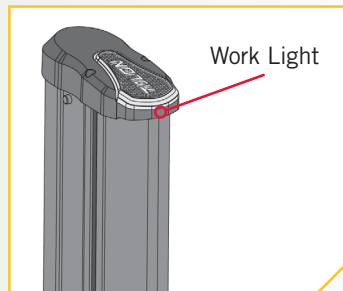




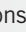
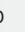
NOTICE: When the i-Pilot System is paired with two Talons, toggling the Work Light Intensity on one Talon will toggle the Work Light Intensity on both.





› Toggle the Work Light Intensity from the Options Menu



It is also possible to toggle the Work Light Brightness from the Options Menu, using the following instructions:

1

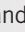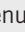

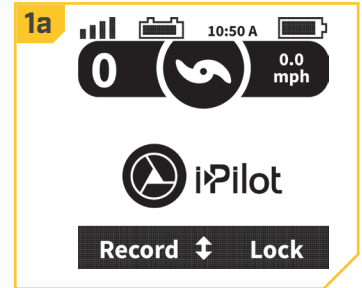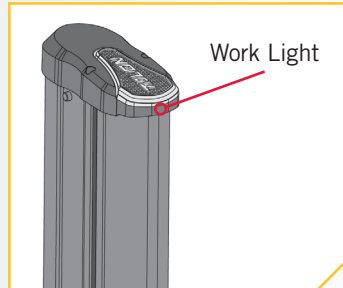
- a. Press the Home  button.
- b. Use the Menu Up  and Menu Down  buttons to find the Options Menu at the bottom of the display screen. Use the Left Softkey  to select it.
- c. In the Options Menu, use the Menu Up  and Menu Down  buttons to scroll to the Worklight Brightness Menu. Use the Ok  button to select it.

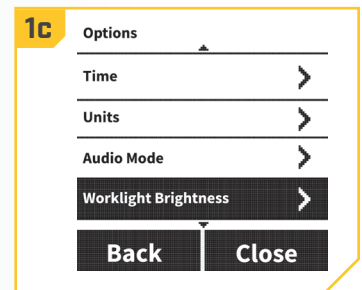
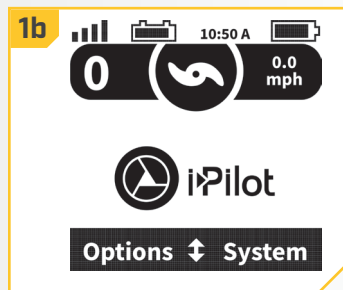


NOTICE: When the i-Pilot System is paired with two Talons, toggling the Work Light Intensity on one Talon will toggle the Work Light Intensity on both.










2

- e. Use the Menu Up  and Menu Down  buttons to scroll to Off, Low, Medium, or High.
- f. Use the Ok  button to select the option highlighted. The circle to the right of the selected Worklight Brightness will become solid when selected.



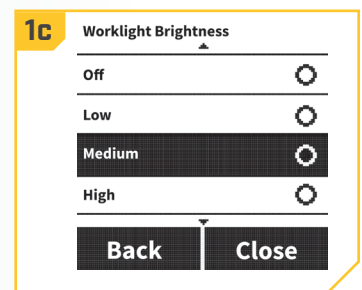
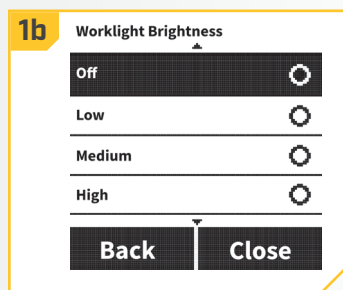





› Toggle the Work Light Color



When the Work Light is turned on, the LEDs will be either white or blue. The color of the Work Light can be changed from the Options Menu.

- 1**
 - a. Press the Home  button.
 - b. Use the Menu Up  and Menu Down  buttons to find the Options Menu at the bottom of the display screen. Use the Left Softkey  to select it.
 - c. In the Options Menu, use the Menu Up  and Menu Down  buttons to scroll to the Worklight Color Menu. Use the Ok  button to select it.

NOTICE: When the i-Pilot System is paired with two Talons, toggling the Work Light Color on one Talon will toggle the Work Light Color on both.

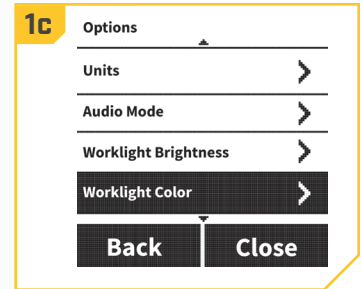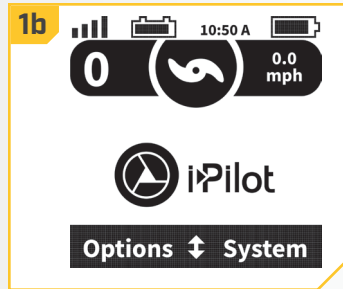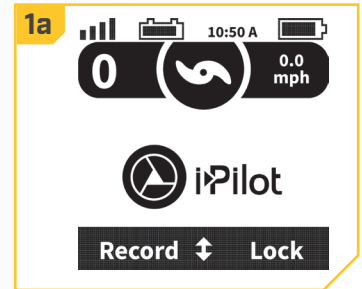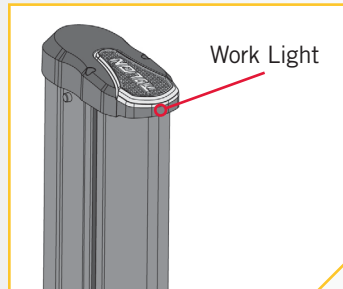

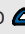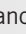

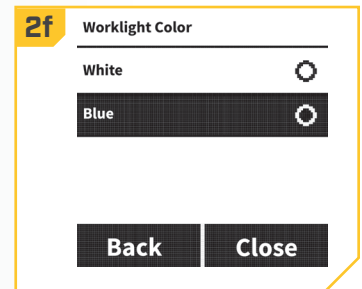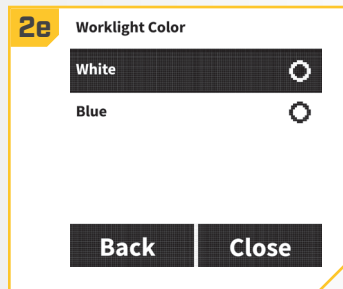



- 2**
 - e. Use the Menu Up  and Menu Down  buttons to scroll to White or Blue.
 - f. Use the Ok  button to select the option highlighted. The circle to the right of the selected Worklight Brightness will become solid when selected.






› Toggle the Auto-Retract Message

The i-Pilot Remote will display a message when the Auto-Retract message feature is engaged and the boat is traveling above 5 mph when the Talon is at any percentage of deployment. The remote will not display a message about the Talon if it is deployed and the Auto-Retract is deselected, even if the boat exceeds 5 mph.

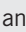
1

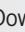- a. Press the Home  button.
- b. Use the Menu Up  and Menu Down  buttons to find the Options menu at the bottom of the display screen.
- c. Use the Left Softkey  to select the Options menu.
- d. In the Options menu, use the Menu Up  and Menu Down  buttons to find the Auto-Retract selection.


NOTICE: When the box next to Auto-Retract is marked with an X, the Auto-Retract message is engaged. By default the box is not marked.

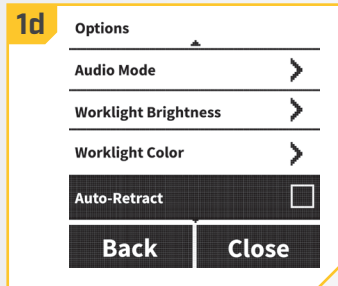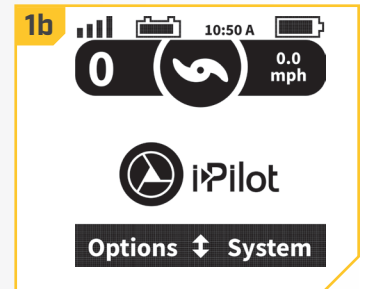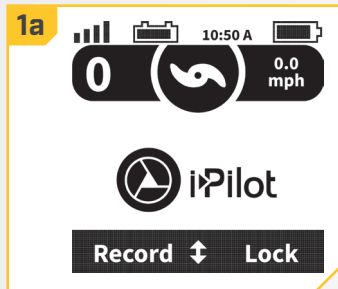

2






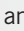

- e. By default, the Auto-Retract is toggled "off".
- f. To toggle the Auto-Retract, scroll to it in the menu and press the Ok  button to select it.

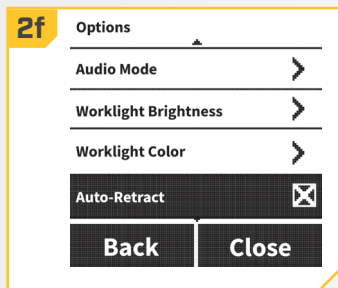NOTICE: When the i-Pilot System is paired with two Talons, engaging or disengaging the Auto-Retract message on one Talon will engage or disengage the Auto-Retract message on both.









Toggle the Active Talon

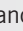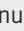When the i-Pilot System is paired to two Talons paired together, it is possible to control either the left or right Talon individually, or together. This is done from the Active Talon Menu selection in the Options Menu.

- 1 a. Press the Home  button.
- b. Use the Menu Up  and Menu Down  buttons to find the Options Menu at the bottom of the display screen. Use the Left Softkey  to select it.
- c. In the Options Menu, use the Menu Up  and Menu Down  buttons to scroll to the Active Talon selection. Use the Ok  button to select it.

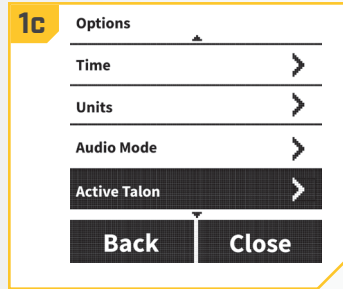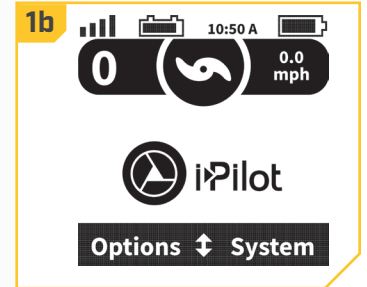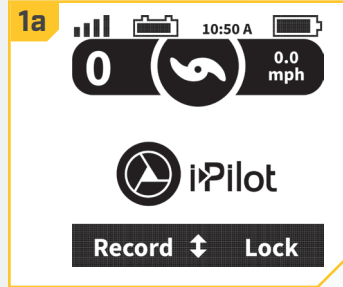NOTICE: Changing the ability to stow and deploy the Talon is the only feature that is changed with the Active Talon Menu selection. All other features that are selected for one Talon will apply to both in instances where the i-Pilot System is paired to two Talons paired together.



- 2 e. Use the Menu Up  and Menu Down  buttons to scroll to Left, Right, or both.
- f. Use the Ok  button to select the option highlighted. The circle to the right of the selected Active Talon will become solid when selected.

