


Z-WAVE DIMMER TOGGLE SWITCH

ZOOZ™
bright ideas

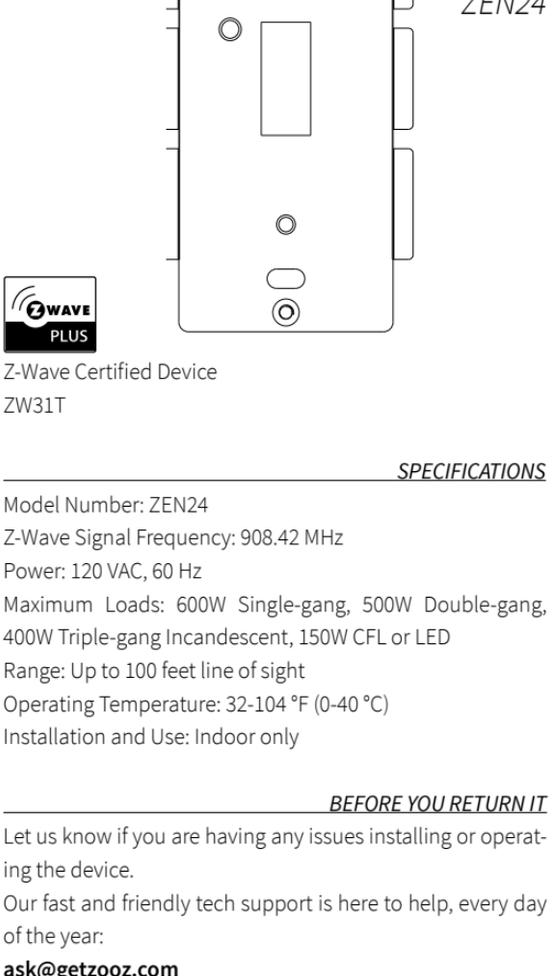

Z-Wave Certified Device
ZW31T

SPECIFICATIONS

Model Number: ZEN24
Z-Wave Signal Frequency: 908.42 MHz
Power: 120 VAC, 60 Hz
Maximum Loads: 600W Single-gang, 500W Double-gang, 400W Triple-gang Incandescent, 150W CFL or LED
Range: Up to 100 feet line of sight
Operating Temperature: 32-104 °F (0-40 °C)
Installation and Use: Indoor only

BEFORE YOU RETURN IT

Let us know if you are having any issues installing or operating the device.

Our fast and friendly tech support is here to help, every day of the year:

ask@getzooz.com

Go to **getzooz.com** to find out how to make your home smarter and safer.

CAUTION

This is an electrical device - please use caution when installing and operating the switch.

Remote control of appliances may result in unintentional or automated activation of power.

Do not use this Z-Wave device to control appliances which produce the risk of fire, burns, or electrical shock when unattended.

WELL DONE!

You have picked the finest solution for your smart home congrats! Now it's time to enjoy these great features of your new product:

- Manual or remote on/off control and dimming from your mobile device or computer (when included to a Z-Wave gateway controller)

- Z-Wave Plus with improved 500 chip for faster and safer wireless communication

- Works with most high-quality DIMMABLE LED, CFL, and incandescent bulbs

- Based on universal command classes - supported by most Z-Wave controllers

- May be associated and grouped with other Z-Wave devices for advanced home automation

- Built-in Z-Wave signal repeater for a stronger and more reliable network

INSTALLATION**WAIT!**

Make sure the load you are about to connect does not exceed 600W for incandescent lights or 150W for DIMMABLE CFL or LED.

Check your wiring first and confirm that you have all of the following present in your gang box: load (most often black), line (most often black), neutral (most often white), and ground (most often green).

If you are not comfortable identifying the wiring and completing the installation, please consult a licensed electrician. POWER OFF FIRST!

Before you take out the old switch and start replacing it with your new Z-Wave device, turn the power OFF for the circuit at the service panel.

The switch must be installed according to standards of the National Electric Code in the United States or the Canadian Electrical Code and all applicable local regulations. If you do not have any experience handling electrical fixtures, please

DO NOT install this device on your own. Hire a qualified professional instead as ignoring any of the above requirements may result in personal injury and/or equipment damage.

The below instructions are for single-pole installation only. If you are looking to install the switch as a 3-way, please contact us first: **ask@getzooz.com**

DO NOT connect this Z-Wave switch with ANY regular electrical switches because it will damage your Z-Wave device.

1. Start by making sure power is OFF at switch box before you proceed

2. Take out the wall plate and mounting screws from the existing switch

3. Remove the old switch from the gang box carefully

4. Verify that you have identified the wiring in the switch box correctly and you are able to recognize line, load, neutral, traveler, and ground

5. Disconnect all wires from the old switch, labeling selected wires if needed


6. Verify that you are dealing with copper wired as this is the only approved type of wiring for this installation

7. Connect the wires to the terminals of your new Z-Wave switch, starting with ground

Always turn the screws CLOCKWISE to tighten the wires.

NOTE: Make sure you have identified all wiring correctly before connecting the switch. Load and line **CANNOT** be swapped. Neutral (most often white) wire is required for this device to function.

Please show this manual to your electrician to get them familiarized with Z-Wave switch wiring requirements.

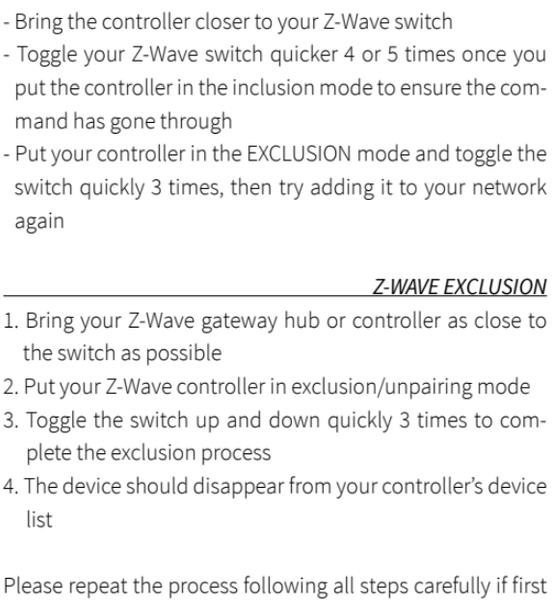

NOTE: The Traveler terminal is to be used for 3-way or 4-way wiring **ONLY** and should be insulated if the switch is installed in a 2-way configuration where one switch controls one load.

8. Secure your Z-Wave switch in the box with mounting screws, handle the wires with care

9. Install the wall plate of your choice and you're done!

Now turn the power back on and test the device.

First, see if you are able to control the light manually. Simply press and release the toggle up (on) or down (off).

If the test fails, please check the following:

- that power has been fully restored at the circuit

- that you have wired the switch exactly according to the instructions in this manual

- that the load type is supported by this device (see specifications for details)

Once you have tested manual control, it's time for the fun part - **wireless control.**

Z-WAVE INCLUSION

1. Bring your Z-Wave gateway hub or controller as close to the switch as possible

2. Put your Z-Wave controller in inclusion/pairing mode

3. Toggle the switch up and down quickly 3 times to finalize the inclusion process

4. A new on/off device should appear on your controller's device list

Q: I have not been able to add the device to my network after several attempts, what do I do now?

A: If you are unable to include the Z-Wave switch to your controller, please try one of the following:

- Bring the controller closer to your Z-Wave switch

- Toggle your Z-Wave switch quicker 4 or 5 times once you put the controller in the inclusion mode to ensure the command has gone through

- Put your controller in the EXCLUSION mode and toggle the switch quickly 3 times, then try adding it to your network again

Z-WAVE EXCLUSION

1. Bring your Z-Wave gateway hub or controller as close to the switch as possible

2. Put your Z-Wave controller in exclusion/unpairing mode

3. Toggle the switch up and down quickly 3 times to complete the exclusion process

4. The device should disappear from your controller's device list

Please repeat the process following all steps carefully if first attempt is unsuccessful.

Z-Wave Automation and Advanced Functionality:

Once the Z-Wave switch is added to your network, you are able to turn the device on or off remotely from your mobile device, computer, or Z-Wave remote control.

Depending on your Z-Wave gateway's home automation software capabilities, you may be able to associate your Z-Wave switch in groups with other Z-Wave devices to schedule scenes and create events.

Please refer to your controller's user guide for advanced programming instructions as they are a little different for every software.

WARRANTY

This Limited Warranty applies to physical goods, and only for physical goods, purchased from Zooz (the "Physical Goods").

What does this limited warranty cover?

This Limited Warranty covers any defects in material or workmanship under normal use according to instructions from the User Manual during the Warranty Period. Warranty coverage applies to purchases made from authorized dealers only. See full list of Zooz distributors here: getzooz.com/buy

During the Warranty Period, Zooz will repair or replace, at no charge, products or parts of a product that prove defective because of improper material or workmanship, under normal use and recommended maintenance. Zooz does not assume the cost of return shipping for warranty service.

During the Warranty Period, Zooz will repair or replace, at no charge, products or parts of a product that prove defective because of improper material or workmanship, under normal use and recommended maintenance. Zooz does not assume the cost of return shipping for warranty service.

How long does the coverage last?

The Warranty Period for Physical Goods purchased from Zooz is 12 months from the date you purchased this product.

What does this limited warranty not cover?

This Limited Warranty does not cover any problem that is caused by:

- conditions, malfunctions or damage not resulting from defects in material or workmanship

- improper handling or installation of the product

The warranty does not cover purchases from unauthorized dealers or second-hand sources. The warranty does not cover return shipping cost for warranty service.

What do you have to do?

To obtain warranty service, please contact us to determine the problem and offer a quick solution for you:

warranty@getzooz.com

You may also get in touch with a reseller of the product directly to return or replace the product within 30 days of purchase or within applicable resellers returns period.

IN NO EVENT SHALL ZOOZ OR ITS SUBSIDIARIES AND AFFILIATES BE LIABLE FOR ANY INDIRECT, INCIDENTAL, PUNITIVE, SPECIAL, OR CONSEQUENTIAL DAMAGES, OR DAMAGES FOR LOSS OF PROFITS, REVENUE, OR USE INCURRED BY CUSTOMER OR ANY THIRD PARTY, WHETHER IN AN ACTION IN CONTRACT, OR OTHERWISE EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

ZOOZ'S LIABILITY AND CUSTOMER'S EXCLUSIVE REMEDY FOR ANY CAUSE OF ACTION ARISING IN CONNECTION WITH THIS AGREEMENT OR THE SALE OR USE OF THE PRODUCTS, WHETHER BASED ON NEGLIGENCE, STRICT LIABILITY, BREACH OF WARRANTY, BREACH OF AGREEMENT, OR EQUITABLE PRINCIPLES, IS EXPRESSLY LIMITED TO, AT ZOOZ'S OPTION, REPLACEMENT OF, OR REPAYMENT OF THE PURCHASE PRICE FOR THAT PORTION OF PRODUCTS WITH RESPECT TO WHICH DAMAGES ARE CLAIMED.

ALL CLAIMS OF ANY KIND ARISING IN CONNECTION WITH THIS AGREEMENT OR THE SALE OR USE OF PRODUCTS SHALL BE DEEMED WAIVED UNLESS MADE IN WRITING WITHIN THIRTY (30) DAYS FROM ZOOZ'S DELIVERY, OR THE DATE FIXED FOR DELIVERY IN THE EVENT OF NONDELIVERY.

FCC NOTE

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT.

SUCH MODIFICATIONS COULD VOID THE USERS AUTHORITY TO OPERATE THE EQUIPMENT.

STORE INDOORS WHEN NOT IN USE. SUITABLE FOR DRY LOCATIONS ONLY.

DO NOT IMMERSE IN WATER. NOT FOR USE WHERE DIRECTLY EXPOSED TO WATER.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following conditions:

1. This device may not cause harmful interference,

2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used according to instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in any given installation.

If this equipment causes harmful interference to radio or television reception, the user may try to correct the interference by taking one or more of the following measures:

- Reorient or relocate receiving antenna

- Increase the separation between equipment and receiver

- Connect equipment into a separate outlet or circuit from receiver

- Consult the dealer or an experienced radio/TV technician for additional assistance

All brand names displayed are trademarks of their respective holders.

[c] Zooz 2016