
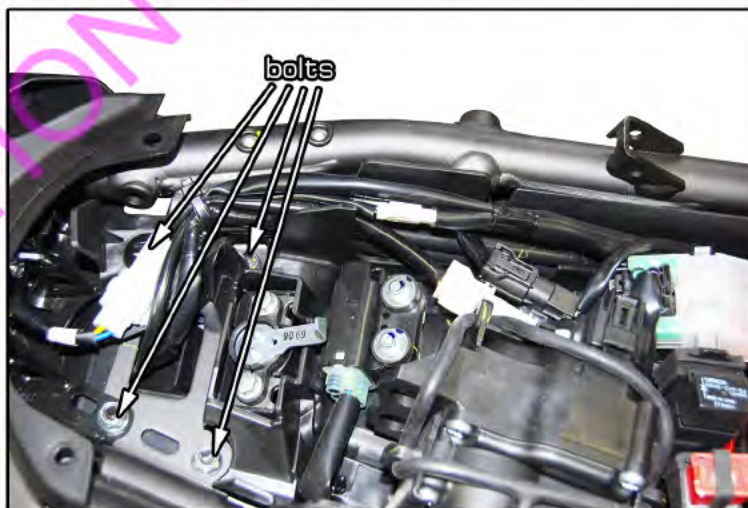
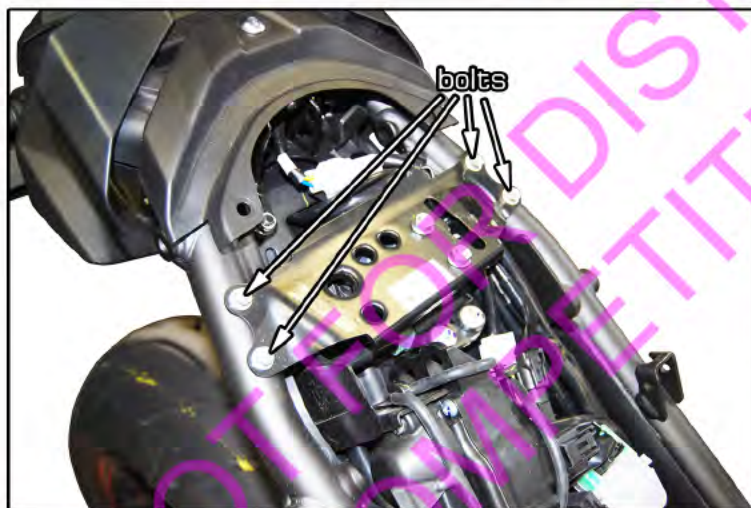


# COMPETITION WERKES

<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

(800)736-2114

## YAMAHA FZ10

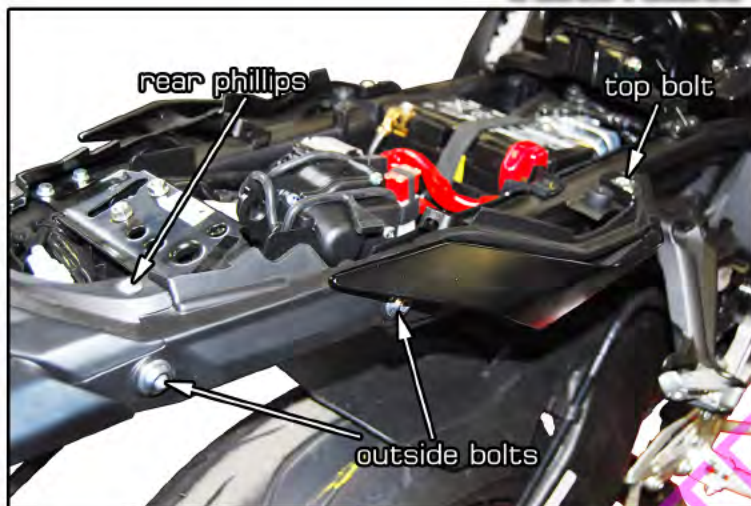

### REMOVAL:

- 1) Remove seat (use key).
- 2) Remove side panels (2- bolts on outside, 2- rivets underneath, 1- bolt on top, and 1- phillips at rear. Per side.) \*FIG's (A) & (B)
- 3) Remove seat latch cross bar (4- bolts). \*FIG (C)
- 4) Unplug wiring to signals and license light.
- 5) Remove rear fender (4- nuts). \*FIG D)
- 6) Cut wire to license light on rear fender (about 4" from connector).
- 7) Remove the turn signals from rear fender assembly (4- allen bolts top of fender; 4- phillips underneath, and pull plastic retainers from back of signals).

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

# COMPETITION WERKES

<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>

## YAMAHA FZ10



### WIRING COLOR CHART:

Right Turn= White Connector  
Left Turn= Black Connector

LICENSE LIGHT:  
Black to Black  
White to Black/Red



### PARTS LIST:

- 1- Main Assembly
- 2- Sets of Retaining Spacers
- 1- License Light
- 4- 4x10 Allen Bolts
- 4- 4mm Nuts
- 4- 6x20 Allen Bolts
- 4- 6x10 Allen Bolts
- 8- 6mm Nuts
- 8- Washers
- 1- 8" Zip- tie
- 2- Butt Connectors

- INSTALL:
- 1) Adhere license light to Main Assembly. \*FIG (F)
  - 2) Position turn signals into Main Assembly. Slide Retaining Spacers into rubber slot of signal base, secure with supplied 4x10 allen bolts and nuts, insert stock plastic retainers. \*FIG (E)
  - 3) Connect license light wire end to supplied License Light (4- butt connectors). \*See chart\*
  - 4) Route all wiring into storage area.
  - 5) Secure Main Assembly to tail using 6x20 allen bolts, washers, and nuts. \*FIG (F)
  - 6) Plug in wiring and check lighting for proper function.
  - 7) Replace seat latch cross member, side panels, and seat.

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.