



<<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>>

(800)736-2114

2021 Kawasaki ZX-10r

Delete Pipe

REMOVAL:

- 1) Remove rider seat to access exhaust valve servo motor.
- 2) Remove cable retaining clip. *FIG (A)
- 3) Loosen cable tensioners. *FIG (B)
- 4) Remove cables from exhaust valve servo motor.
- 5) Remove exhaust valve servo motor (2- screws, unplug wires). *FIG (C)
- 6) Remove plastic cable tie. *FIG's (E) & (F)
- 7) Remove metal cable tie (inside right frame upright- above swingarm pivot) *FIG (G)
- 8) Pull cables down and forward as shown in *FIG (H).
- 9) Remove rear exhaust canister (1-clamp, 1- bolt).
- 10) Remove lower exhaust chamber (1-clamp, 1-bolt) *NO E* rearmost bolt in side panel can be removed for access.


INSTALLATION:

- 1) Plug in the supplied Servo Eliminator to plugs left vacant from the exhaust valve servo motor. *FIG (D)
- 2) Install WerkesUSA Delete Pipe (use 3" clamp, stock bolt, and supplied 10mm Nyloc Nut) No gasket! Leave loose.
- 3) Install rear canister (use stock clamp and bolt)
- 4) Adjust exhaust for clearance and tight n all hardware Replace side panel bolt if needed.
- 5) Replace seat.
- 6) Clean exhaust of fingerprints and grime with WD-40 (or similar).

PARTS LIST:

1- Delete Pipe 1- Servo Delete (21-5001) 1- 10mm Nyloc Nut 1- 3" Clamp

****IMPORTANT**** To insure uniform coloring thoroughly clean with WD-40 or like product before starting motorcycle ****IMPORTANT****

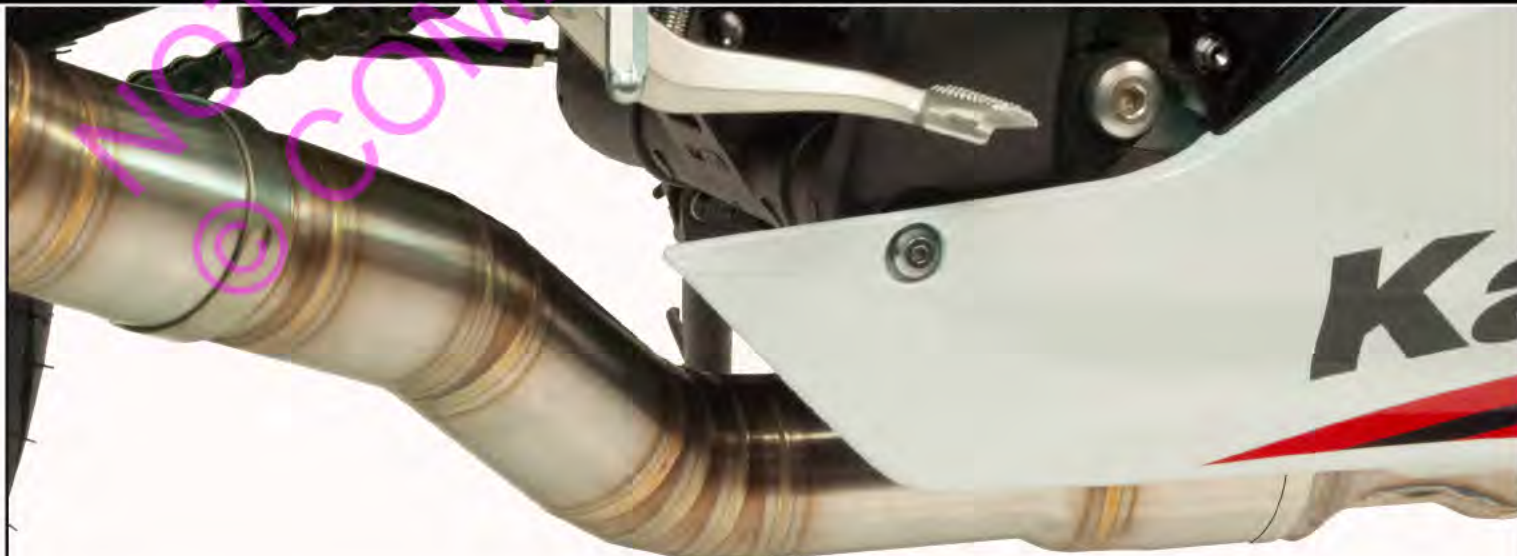

The purchaser releases Competition Werkes Inc. from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.

WK1006D

