

PARTS LIST

BC2000RS

CONTENTS


1. MAIN BODY	1 ~ 2
2. GEARCASE	3 ~ 4
3. ENGINE	5 ~ 8
4. CARBURETOR, FUEL TANK	9 ~ 10
5. ACCESSORIES	11 ~ 12

2010. 01.




P/N 522939

1. BC2000RS
MAIN BODY

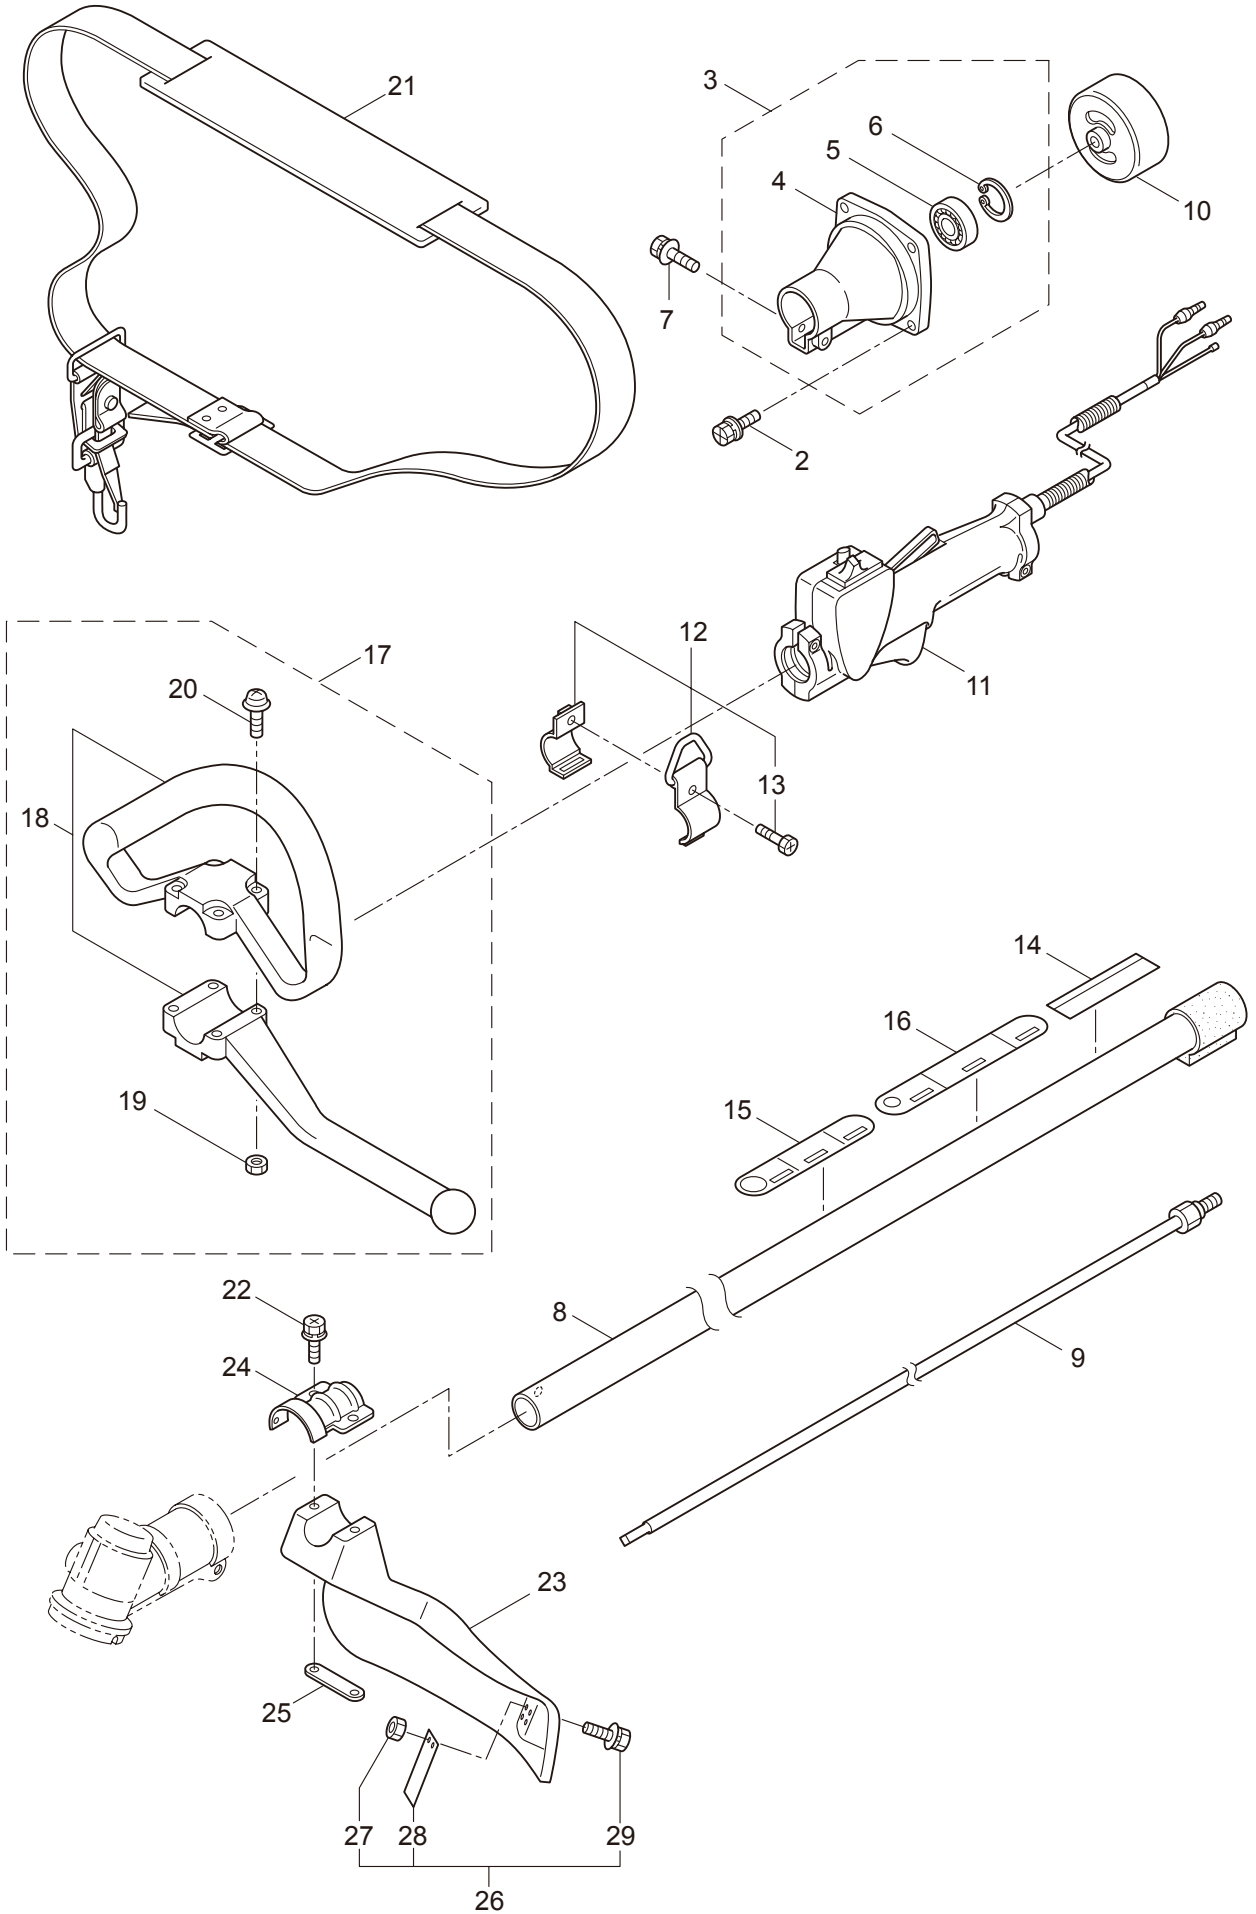


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	363705	BC2000RS	1	
1-2	817002	Bolt	4	M5x20
1-3	221473	Clutch Case Ass'y	1	Incl.4-6
1-4	221474	Clutch Case	1	
1-5	016405	Bearing	1	#6200ZZ
1-6	013825	Snap Ring	1	#30
1-7	096042	Bolt	1	M5x30
1-8	223252	Driveshaft Tube	1	
1-9	221524	Driveshaft Ass'y	1	
1-10	229091	Clutch Drum	1	
1-11	223153	Throttle Trigger	1	
1-12	054691	Hanging Bracket Ass'y	1	Incl.13
1-13	089738	Bolt	1	M5x15
1-14	230996	Label	1	BC2000RS
1-15	221501	Label	1	Warning
1-16	221502	Label	1	Caution
1-17	225698	Loop Handle Ass'y	1	Incl.18-20
1-18	225699	Loop Handle	1	
1-19	081027	Nut	4	M5
1-20	222142	Screw	4	M5x28
1-21	220533	Hanging Strap Ass'y	1	
1-22	096042	Bolt	2	M5x30
1-23	231000	Safety Cover	1	
1-24	225962	Bracket	1	
1-25	225963	Threaded Bracket	1	
1-26	222898	String Cutter Ass'y	1	Incl.27-29
1-27	081027	Nut	2	M5
1-28	222900	String Cutter	1	
1-29	092548	Bolt	2	M5x15

2. BC2000RS
GEARCASE

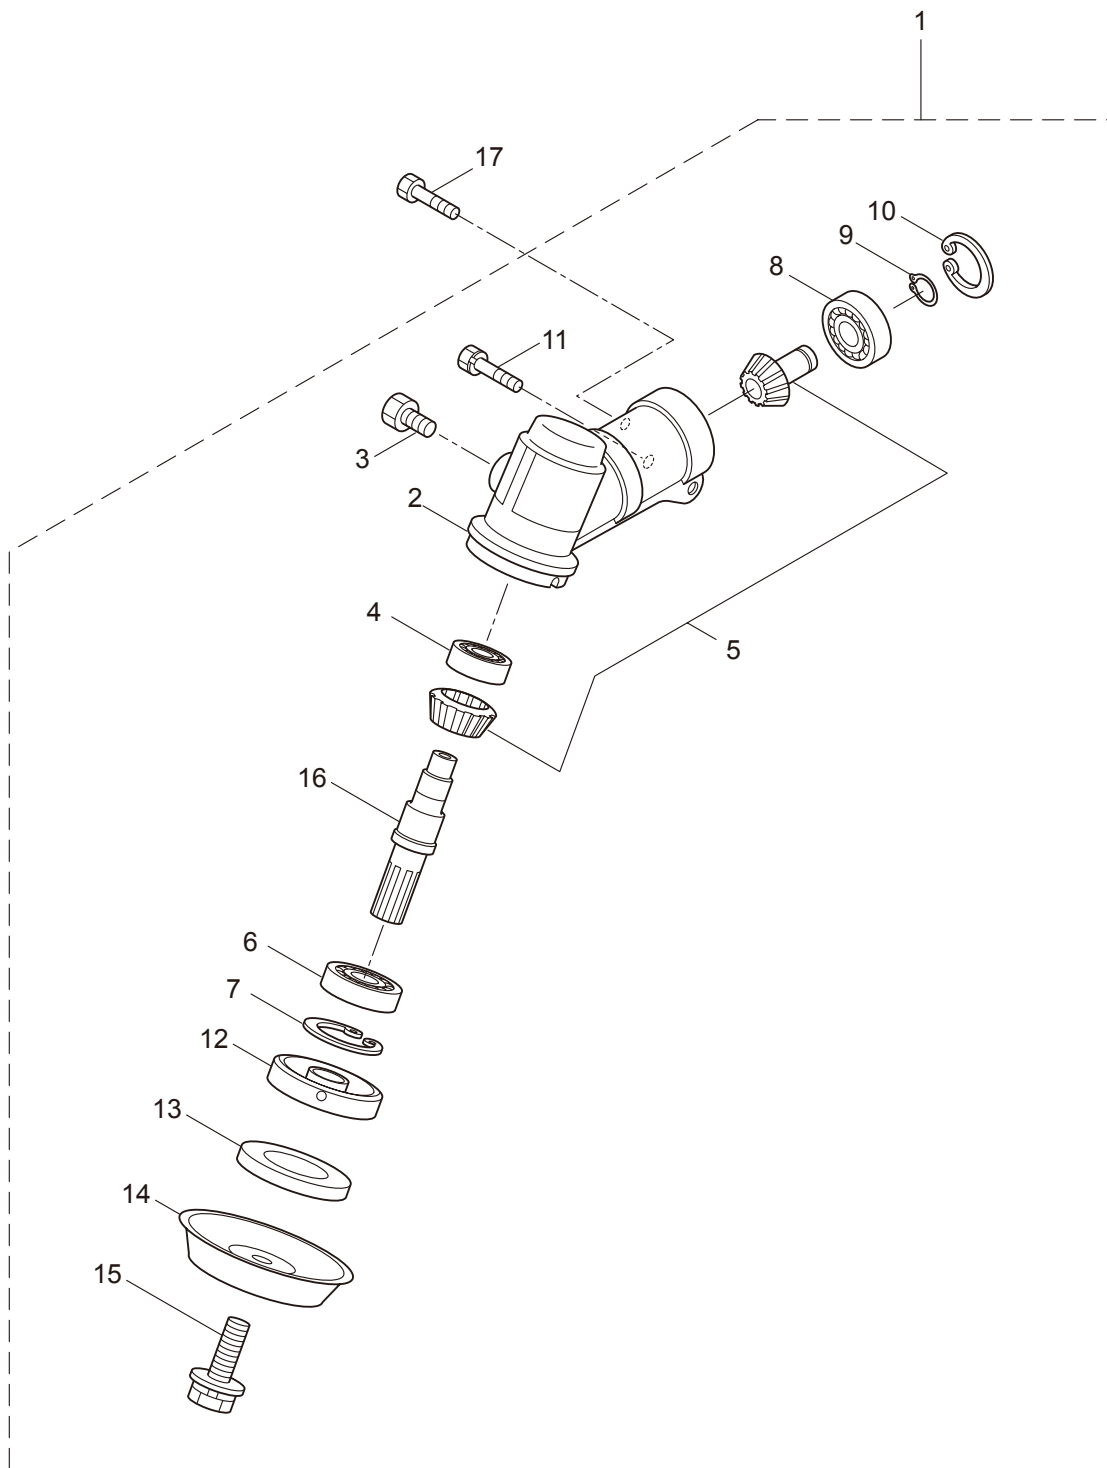


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	221657	Gearcase Ass'y	1	Incl.2-16
2-2	220467	Gearcase	1	
2-3	089819	Bolt	1	M6x8
2-4	219205	Bearing	1	#626
2-5	227110	Gear Set	1	
2-6	212999	Bearing	1	#6001 2RK
2-7	055185	Snap Ring	1	#28
2-8	140268	Bearing	1	#609Z
2-9	140269	Snap Ring	1	WR9
2-10	140270	Snap Ring	1	#24
2-11	092561	Bolt	1	M5x25
2-12	212986	Boss Adapter	1	
2-13	140275	Clamping Washer	1	
2-14	215547	Stabilizer	1	
2-15	215610	Bolt	1	M8x22,Counterclockwise
2-16	219430	Blade Shaft	1	
2-17	089737	Bolt	1	M5x12

3. BC2000RS ENGINE

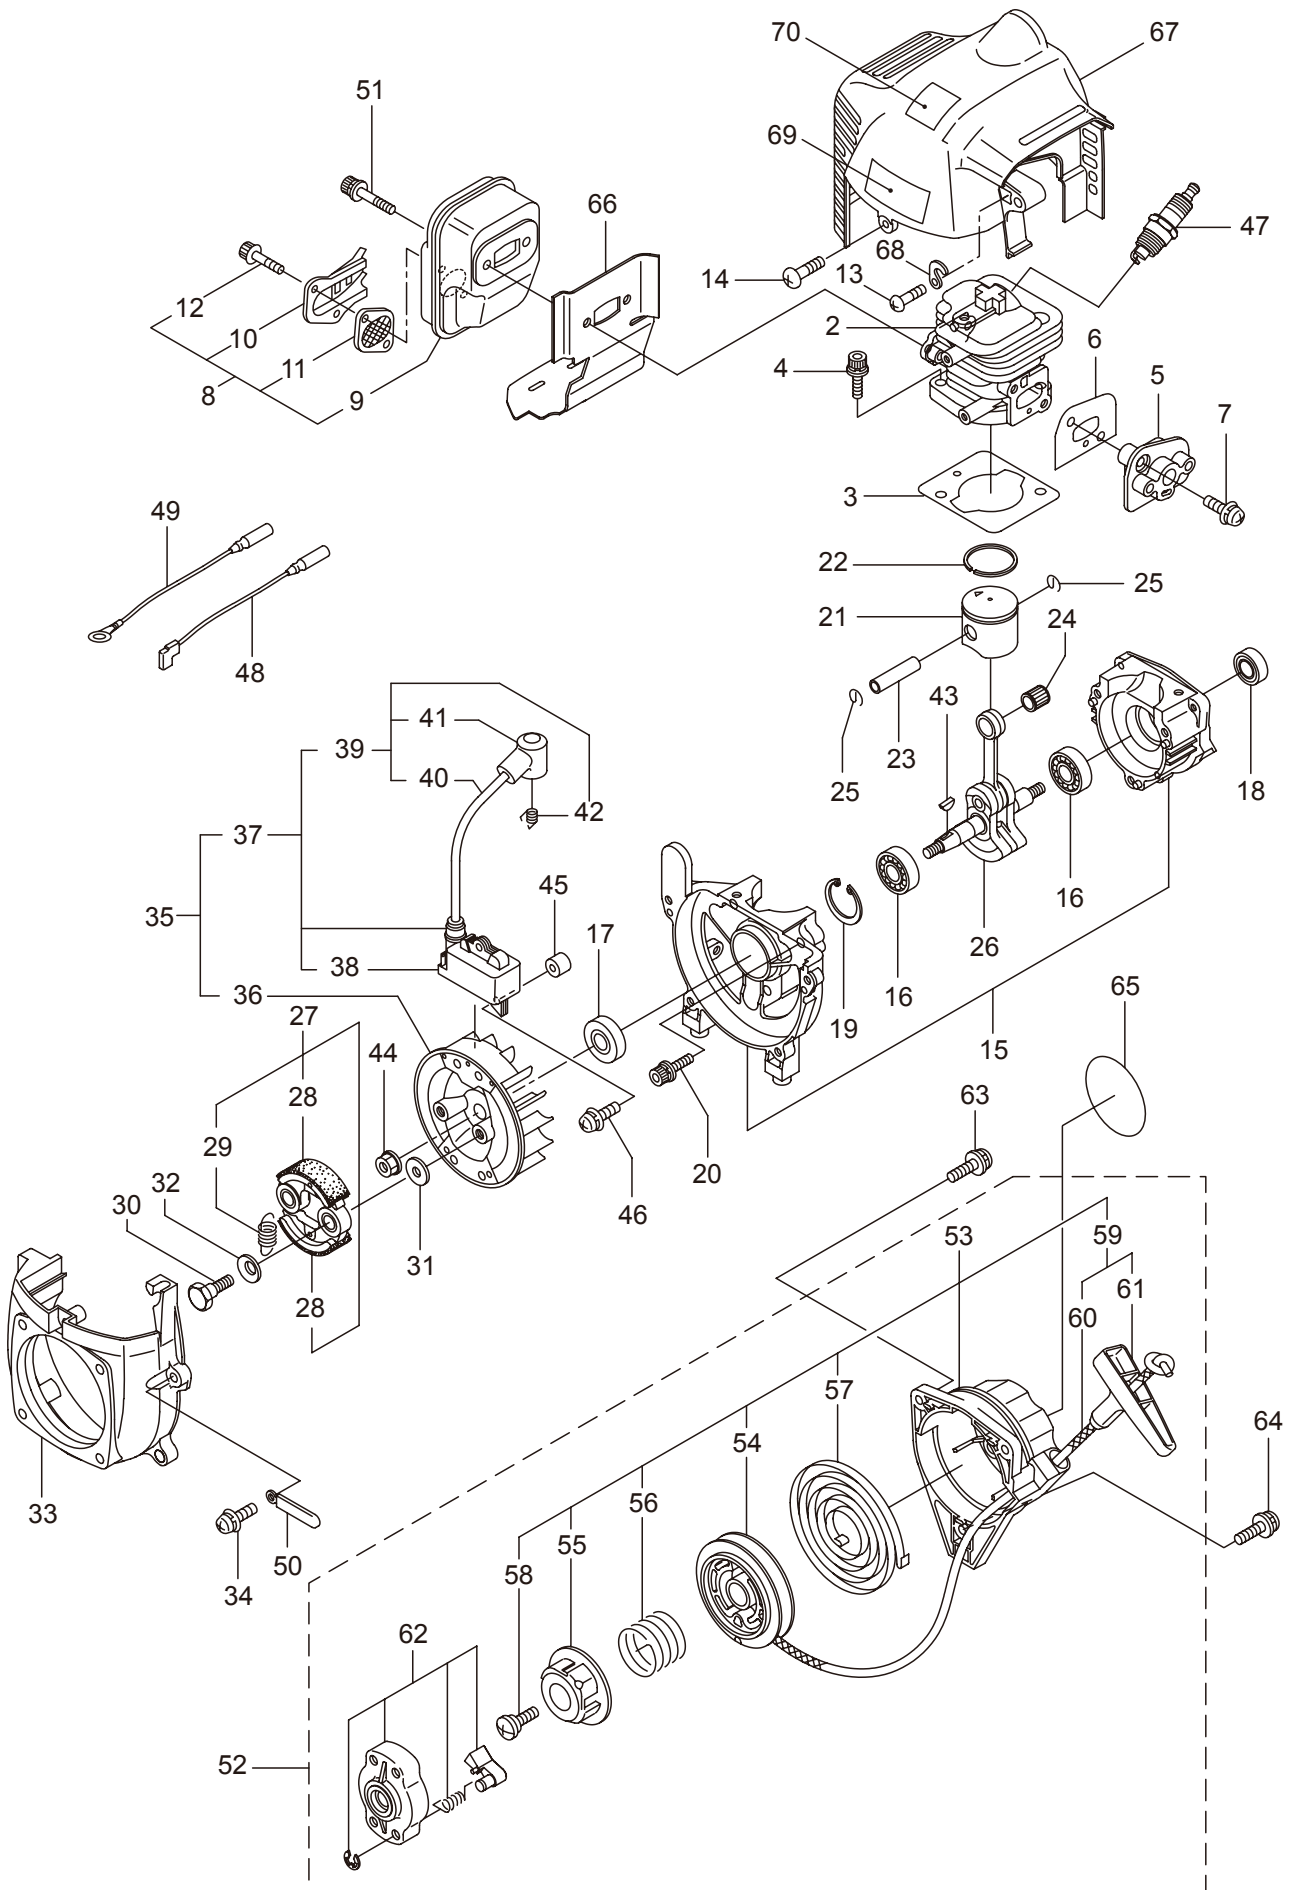


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	858703	Engine	1	EE200/24
3-2	268608	Cylinder	1	New gasket required
3-3	283420	Gasket	1	
3-4	267290	Cap Screw	2	M5x20
3-5	263772	Insulator	1	New gasket required
3-6	267049	Gasket	1	
3-7	269826	Screw	2	M5x25
3-8	283855	Muffler Ass'y	1	Incl.9-12
3-9	283850	Muffler	1	
3-10	268171	Muffler Tail	1	
3-11	267056	Spark Arrester	1	
3-12	265107	Cap Screw	2	M4x10
3-13	283984	Screw	1	M3x10
3-14	280144	Tapping Screw	1	
3-15	280341	Crankcase	1	
3-16	280488	Bearing	2	PPL 6001
3-17	261492	Oil Seal	1	ISCD12287
3-18	261386	Oil Seal	1	ISCD12227
3-19	055185	Snap Ring	1	#28
3-20	261612	Cap Screw	3	M5x30
3-21	261032	Piston	1	
3-22	261158	Piston Ring	1	
3-23	261036	Piston Pin	1	
3-24	281288	Bearing, Needle	1	
3-25	261576	Clip,Piston	2	
3-26	283879	Crankshaft/Conn.Rod Ass'y	1	
3-27	269168	Clutch Ass'y	1	Incl.28,29
3-28	269169	Clutch Shoe	2	(2)required
3-29	269173	Spring, Clutch	1	
3-30	269647	Clutch Bolt	2	
3-31	269175	Washer	2	6.1x15x1.6
3-32	261777	Wave Washer	2	
3-33	283386	Fan Cover	1	
3-34	269831	Screw	4	M5x20
3-35	283567	Magneto Ass'y	1	Incl.36-42
3-36	283397	Rotor/Fan	1	
3-37	283645	Ignition Coil Ass'y	1	Incl.38-42
3-38	283722	Coil	1	
3-39	283646	Spark Plug Wire Ass'y	1	Incl.40-42
3-40	283647	Spark Plug Wire	1	
3-41	283178	Plug Boot	1	
3-42	283270	Connector	1	
3-43	261076	Woodruff Key	1	3x10
3-44	261417	Nut,Rotor	1	M8
3-45	280381	Spacer	2	

3. BC2000RS ENGINE

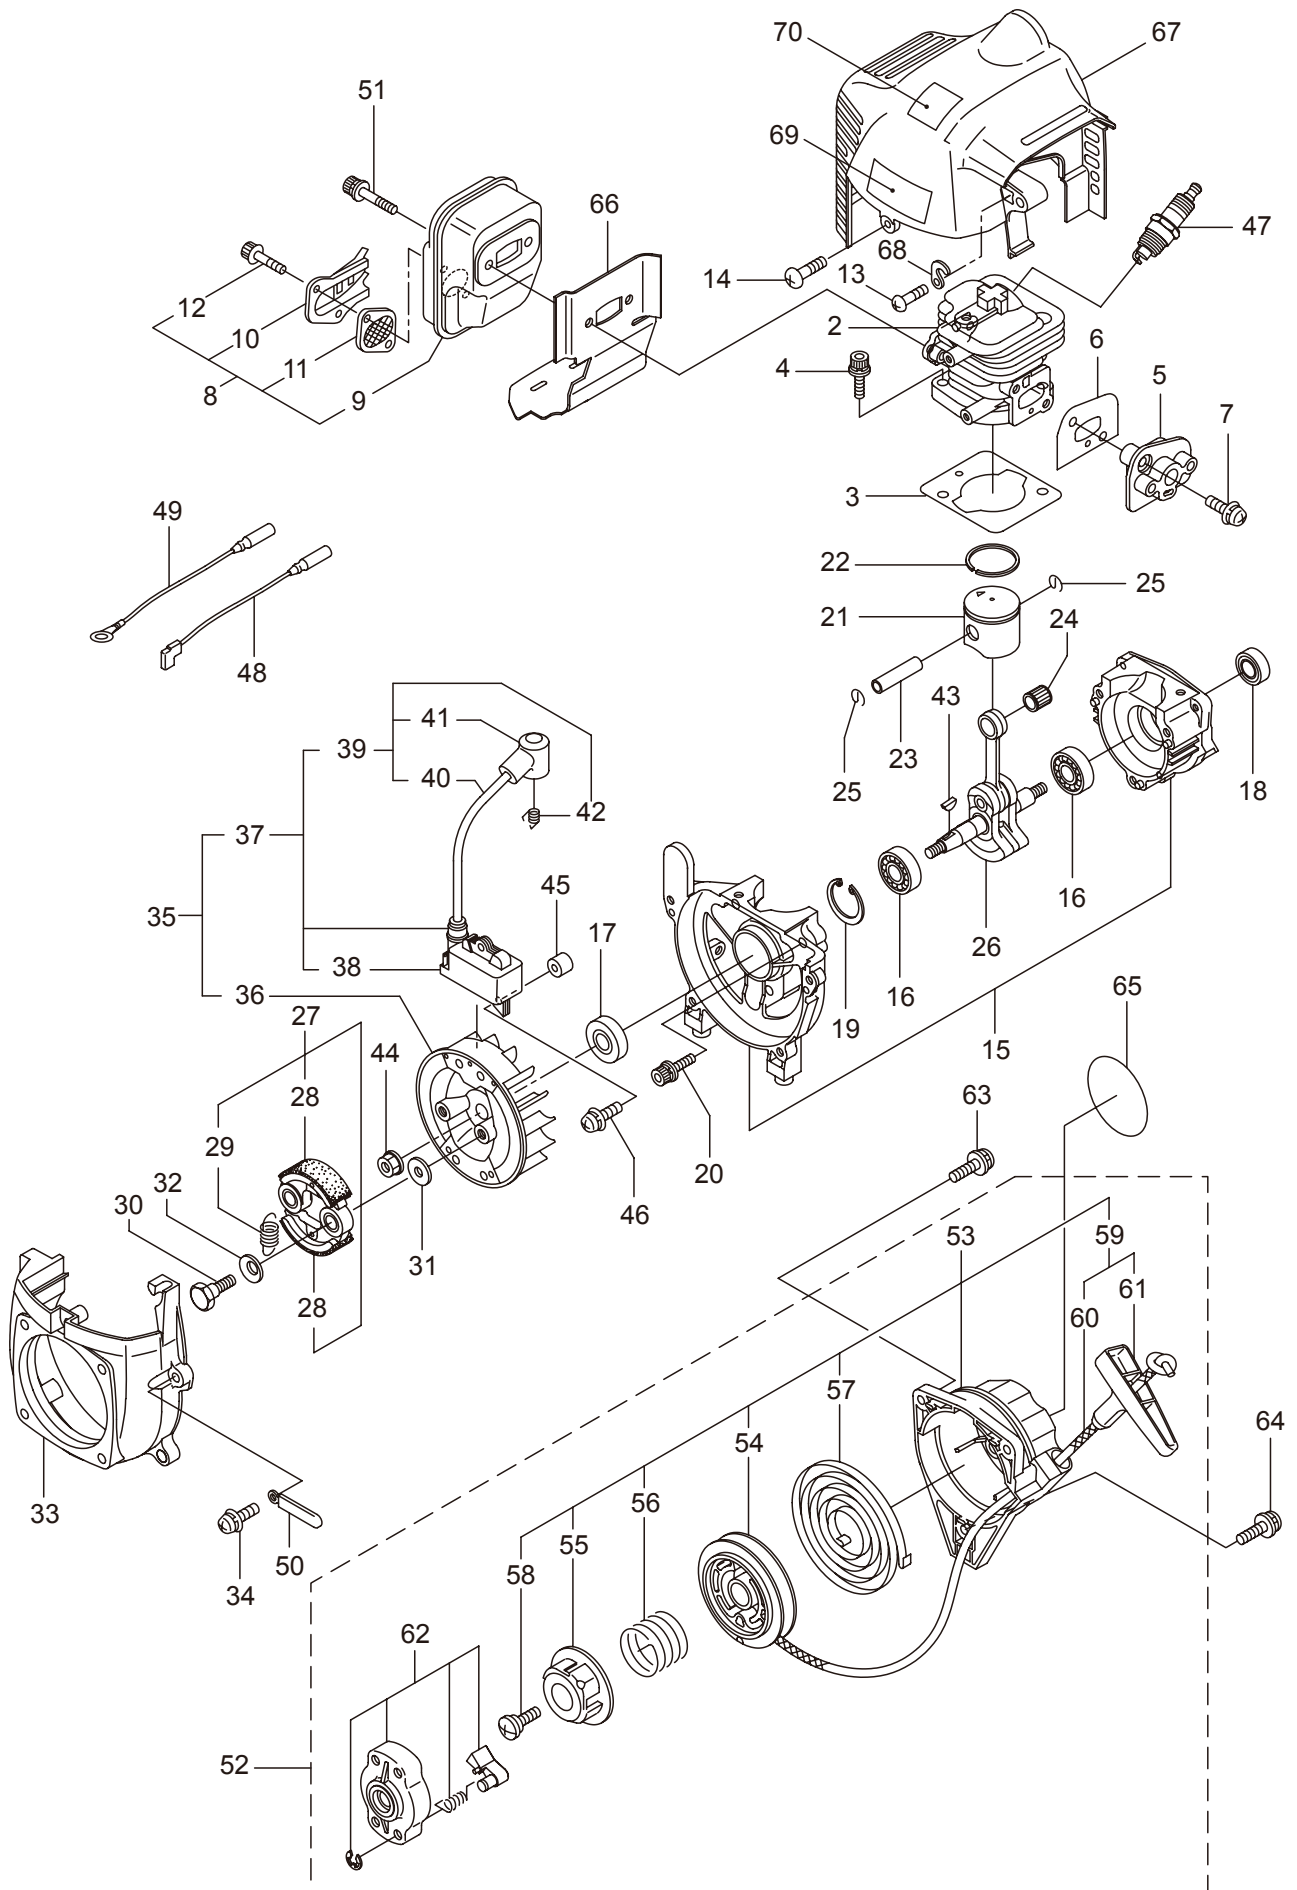





Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-46	269832	Screw	2	M4x25
3-47	262483	Spark Plug	1	NGK BPMR6Y
3-48	269722	Lead	1	
3-49	282880	Wire, Lead	1	
3-50	264588	Clamp	1	
3-51	266264	Cap Screw	2	M5x50
3-52	282404	Recoil Starter Ass'y	1	Incl.53-62
3-53	282405	Recoil Ass'y	1	Incl.54-61
3-54	283411	Reel	1	
3-55	283412	Cam Plate	1	
3-56	280930	Spring	1	
3-57	280931	Spiral Spring	1	
3-58	267213	Screw	1	
3-59	280932	Starter Rope Ass'y	1	Incl.60,61
3-60	280933	Starter Rope	1	
3-61	267219	Starter Grip	1	
3-62	280934	Starter Pawl Ass'y	1	
3-63	280489	Screw	2	M4x20
3-64	269833	Screw	1	M4x16
3-65	286126	Label	1	REVERSE2 EE200
3-66	280409	Gasket	1	
3-67	282926	Top Cover	1	
3-68	283983	Hook	1	
3-69	286122	Label	1	MARUYAMA
3-70	214128	Label	1	82dB

4. BC2000RS
 CARBURETOR, FUEL TANK

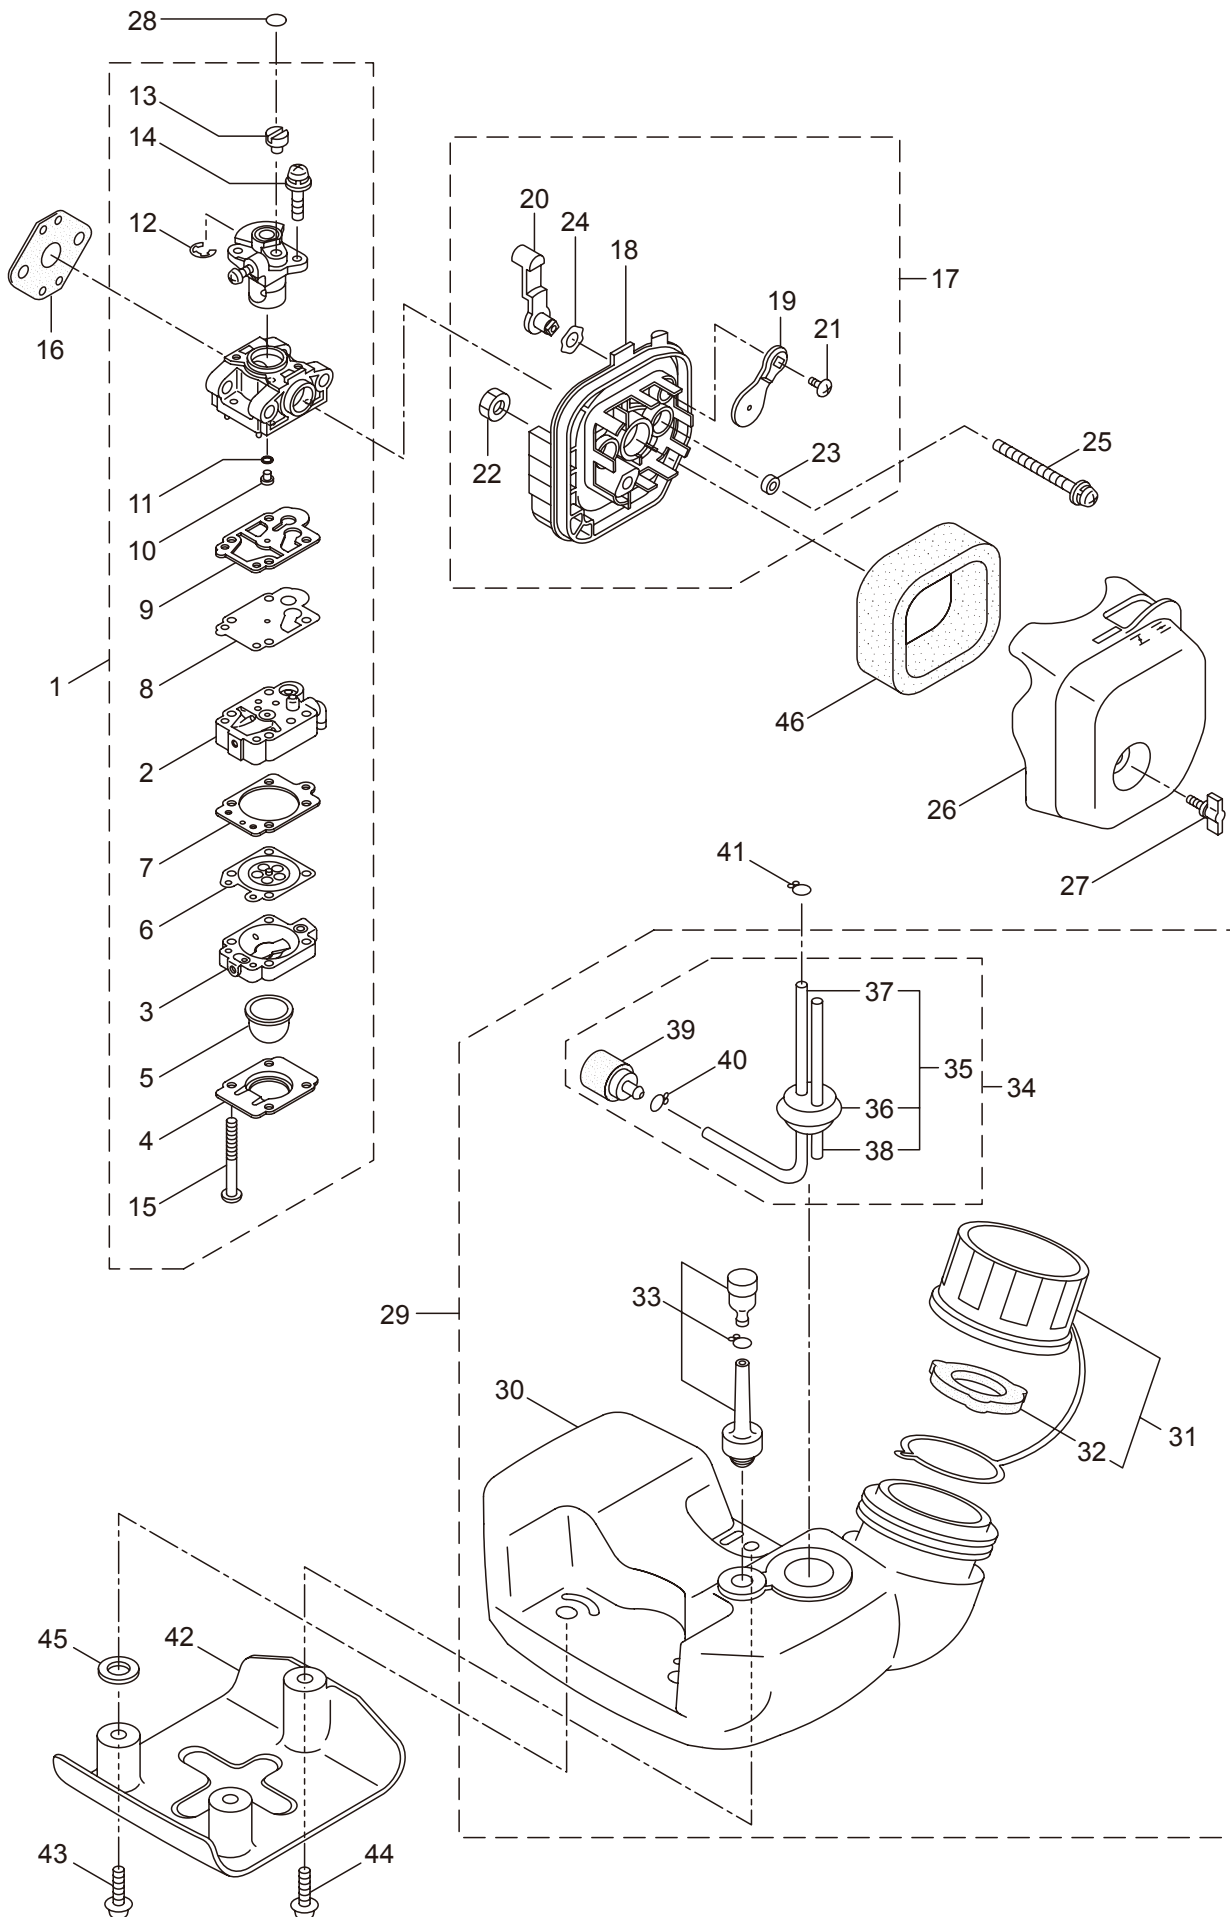

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	281980	Carburetor Ass'y	1	Incl.2-15
4-2	263739	Pump Body	1	
4-3	262991	Purge Body	1	
4-4	262992	Cover Plate	1	
4-5	261874	Primer Bulb	1	
4-6	283905	Diaphragm, Meterring	1	
4-7	262993	Gasket	1	
4-8	262994	Diaphragm,Fuel Pump	1	
4-9	282576	Gasket	1	
4-10	262120	Main Jet	1	#40
4-11	261871	O-Ring	1	
4-12	261876	E-Ring	1	
4-13	261658	Swivel	1	
4-14	264682	Screw	2	
4-15	262996	Screw	4	
4-16	261864	Gasket	1	
4-17	284823	Case Ass'y	1	Incl.18-24
4-18	269050	Case Body	1	
4-19	284802	Valve	1	
4-20	284803	Lever	1	
4-21	269032	Screw	1	
4-22	081028	Nut	1	M5
4-23	269051	Sleeve	2	
4-24	284816	Washer	1	6.4x11x0.15
4-25	281777	Screw	2	M5x55
4-26	283772	Cleaner Cover	1	
4-27	281438	Knob	1	
4-28	280020	Swivel Ring	1	
4-29	285728	Fuel Tank Ass'y	1	Incl.30-40
4-30	285664	Fuel Tank	1	
4-31	281564	Fuel Tank Cap Ass'y	1	Incl.32
4-32	269377	Gasket	1	
4-33	261696	Breather Ass'y	1	
4-34	265752	Fuel Pipe Pick-up Ass'y	1	Incl.35-40
4-35	264031	Fuel Pipe Ass'y	1	Incl.36-38
4-36	261115	Grommet	1	
4-37	261690	Fuel Pipe	1	160L
4-38	263038	Return Pipe	1	3x6x85L
4-39	264653	Filter Ass'y	1	
4-40	261117	Clip	1	
4-41	261117	Clip	1	
4-42	285704	Stand	1	
4-43	284042	Screw	2	M5x20
4-44	284043	Screw	1	M5x25
4-45	284075	Washer	2	9x16xT0.6
4-46	269030	Element	1	

5. BC2000RS
ACCESSORIES

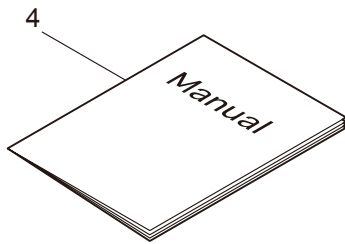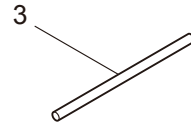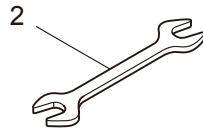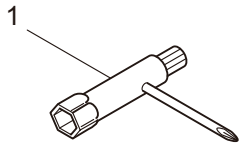

Ref. No.	Part No.	Part Name	Q'ty	Remarks
5-1	210418	Box Spanner	1	13x19x(+)
5-2	022865	Double-ended Wrench	1	8x10
5-3	210181	Lever Handle	1	3.5x170L
5-4	231424	Instruction Manual	1	