



DYNAMIQUE

INITIAL ASSEMBLY

Initial Assembly

Your Dynamique comes partially assembled. No tools are necessary to finish assembly.




In one box will be your Frame, Seat, Footrest, Handle, Articulating Mechanism, and any extra parts you ordered.



In another box will be your bi-skis.

1) Install the Bi-Skis to the Articulating mechanism.

Align the feet of the Articulating Mechanism behind the ski's bindings. Compress the retaining ring on the front binding and slide the Ski backwards onto the Articulating Mechanism. Once fully in, the retaining ring will snap into place around the Articulating Mechanism's foot.

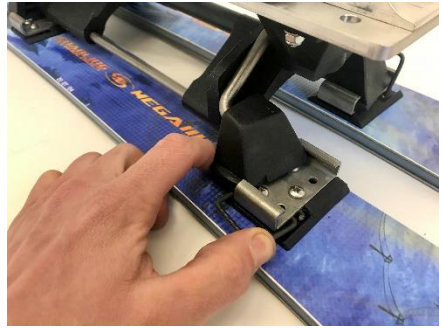

2) Install the Articulating Mechanism to the Frame.

Place the lower frame within the channels of the Articulating Mechanism. Push two quick release skewers into the ski from the right side and secure with the thumb nut of the other side. Clamp quick release lever to secure the mechanism and frame.



3) Set up the Seat.

See the image to the right for proper setup.

- The waist and thigh use pads secured with a ratcheting ladders.
- The seat angle adjustment has two extension buckles at the front of the thighs secured to two ratcheting ladders from the seat back.
- On the seat back is a Velcro limiter strap. Loop it under the webbing guide and back over onto itself.



4) Remove and discard the wooden dowels from the foot and handle tubes.

The pin is not pinned through the dowel. Remove the dowel first and then remove the pin.



5) Install the Footrest.

Be careful to slide each side in straight and at the same time. Slide / tap the footrest into the tubes. If necessary, a rubber mallet can be used to overcome initial friction. If necessary, tighten the ankle angle adjustment clamps.



11) Install the handle.

**ENABLING
TECHNOLOGIES**

enablingtech.com

Enabling Technologies // 303.578.9345
2200 S Jason St Denver, CO 80223
info@enablingtech.com