Assembly and operating instructions hammock CLIPPER



Shown is the CLIPPER

Crazy Chair® is the internationally registered trademark of Pimiento OHG, for exclusive, high-quality hanging chairs, hammocks, stainless steel stands and matching accessories.

The complete range of services, such as idea, design, development, production, marketing and sales is provided at several locations in Germany.



Scope of supply

please check for completeness

A = 1 all-weather hammock

B = 2 short ropes (already attached)

C = 2 safety shackles, stainless steel (snap-in)

D = 2 suspension ropes each 2 m

Not included in delivery:

Corresponding ropes are required for suspension over long distances. High quality Ropes, weather-proof, seawater-proof, 1,000 kg breaking load can be ordered from us.

Description:

The CLIPPER is a weatherproof, back-friendly hammock without cross bars, which remains open when lying down and does not fold up over the person lying inside. This is guaranteed by the special shape cut, the 5 strip combinations made of high-quality materials, special seams and the strap processing.

The CLIPPER can also be attached to difficult places or narrow balconies and is easy to carry due to its small, light packing size.

CLIPPER Hammock


It is knotted ready to use. If suspension ropes are attached to the right and left of the hammock, ideally knotted as a loop, you only need to latch the two safety shackles into the suspension ropes of the CLIPPER.

Convincing technical data:

Weatherproof hammock without spreader bars Lying surface 100 cm x 230 cm Clamping length from 250 cm Lying load 150 kg Own weight 1.7 kg

Product Features:

very stable, not tilting, a lot of lying comfort ergonomic lying quality skin-friendly, breathable mesh fabric stays pleasantly airy and cool in strong sunlight insensitive to rain, sun/UV, sea water miscellaneous Color Stripe Combinations Colours do not fade even after years easy-care, robust, durable TÜV-tested, EU-patent, US-patent Design + production takes place in Germany

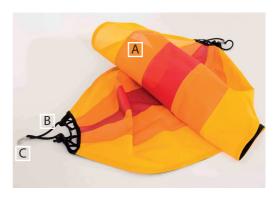



Extra suspension ropes as a knot (e.g. around a tree trunk) and then hang the safety shackles of the CLIPPERs there. This makes it quick and easy to attach and detach the hammock.



Hanging the hammock.

Choose a suitable place to stretch the hammock, e.g. on a stand, between 2 trees or at 2 suitable fixing points. Take the enclosed ropes and attach them, knotted as a loop, to the two suspension points. If the length of the ropes is not sufficient, ropes of the appropriate length and load-bearing capacity must be provided. V4A safety shackles are attached to both ends of the hammock, which are now snapped into the loops of the extar suspension ropes.

Below are some instructions for mounting the CLIPPER at different distances.

For the rope distance (A to B) the distance from the shackle to the suspension point was measured in cm.

Distance from A to B in cm	240	260	280	300	350	400
A Height from the ground in cm	110	120	130	130	140	160
B Height from the ground in cm	110	120	130	130	140	160
A Distance rope in cm	0	15	35	40	60	100
B Distance rope in cm	0	15	35	40	60	100
Step-in height in cm	70	70	70	75	75	75
Notation: Rope distance measured from shackle to suspension point						

Calculation example of pitches.

The distance from A to B refers only to the single rope length. The values must therefore be doubled for the rope length required in the application, since a loop is laid and knotted. One knot consumes rope, therefore approx. 30 cm of rope should be added per knot.

Example for hammock (according to table):

Distance A to B is 350 cm. Hanging height 140 cm (from the ground to the hanging point).

Rope distance right and left each approx. 60 cm.

Rope is required as loop, 2x 60 cm = 120 cm.

Additional 30 cm rope per knot, 2x 30 cm = 60 cm.

Rope is laid around 20 cm thick tree, circumference

 $63 \text{ cm} (20 \times 3.14 = 62.8 \text{ cm}).$

Result:

If you hang a hammock between 2 trees, which are 350 cm apart, with a trunk circumference of approx. 63 cm and for safe assembly the rope is put 2x as a loop around the tree trunk, you need a rope of approx. 280 cm per hammock side, thus 2 x 280 cm ropes.

Tips for transport, storage, care.

In strong winds the hammock could flutter or turn like a propeller in the wind. Depending on the intensity of the "windbeating", it also puts a strain on the material or microgrid fabric. The coloured filament of the covering can rub off and partially peel off due to the wind blow. This results in unattractive color peeling. However, the stability of the hammock is maintained.

We would like to point out that damage to the material caused by strong winds is not covered by the guarantee, as it can be avoided if used correctly or, better still, the hammock is left hanging in good time and not exposed to the wind.

The All-Weather material was developed for outdoor use (can also be used indoors) and is insensitive to sun and moisture.

To clean the hammock, a sponge with water or a little soapy water is sufficient. Never use the high pressure cleaner or the washing machine.

The Crazy Chair logo is attached in the head area for orientation on the lying side. The black straps point to the hammock bottom.

Use and Safety Instructions

Read the instructions before use and keep them in case of further questions.

The CrazyChair hammock is ideal for relaxing, you lie back-friendly and relaxed in longitudinal direction. The hammock can support 150 kg.

The two suspension points must be adapted to the weight of the person and provide a secure attachment. The suspensions must correspond to the weight to be carried, taking into account the local conditions.

Check regularly that the suspension ropes and knots are correctly seated. Protect ropes from chafing, especially at edges or sharp corners.

Warranty.

The CrazyChair hammock All-Weather is handmade with great care and undergoes multiple inspections. If there is something wrong with the delivery or a defect in material or workmanship occurs, a corresponding repair or replacement will be made within the scope of the legal warranty. What is used is at the discretion of the manufacturer for each operation. No liability is assumed for any further consequential damages or failures. For the warranty a normal use in private use applies with careful handling (no commercial or public use). Improper treatment, environmental influences, colour changes, e.g. due to sunlight or damage caused by external influences are not covered by the warranty claims.

If metal rubs against metal during fastening, it is necessary to grease the areas regularly.

It is not a (children's) swing or playground equipment.

Children should only use the hammock in the presence of adults and should not be left unattended.

The packaging should be kept away from infants and children, as there is a risk of suffocation if they are put over their heads.

Do not hang the hammock near open fireplaces, fireplace, grill, etc..

We are happy to help.

For questions, advice and product information, please do not hesitate to contact us. If you need our advice on suspension, if you have any questions regarding the use of the CrazyChair Collection, or if you would like information about the product, accessories or other items in the CrazyChair Collection, please contact us. Crazy Chair - Made in Germany.



Hammock stand

For the hammock CLIPPER is the perfectly fitting stainless steel stand LUNO available as a supplement.

