

# FLYCAM Flowline Master for Camera & Gimbals with Placid Stabilizing Arm (FLCM-FLN-MSTR-PLA)

## Assembly Manual



### What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.




All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

## Flowline Master with Placid Setup

- Remove placid from foam packing. The placid arm has a cord attached to it. Join section 1 of the support bar to section 2 with a simple push-fit technique, as shown in the image.
- When assembled, the flowline master will look the same as shown in the image.
- Insert the placid arm into the support bar through the cord and secure it correctly with the help of a knob.
- To fix the placid arm at its appropriate position, attach one side of the safety shock cord to a knob on the placid arm. Then, drag the other side of the elastic cord across the flowline support arm, and attach it to the knob on the other side of the placid arm.
- Adjust & tighten the buckles provided at the chest and the waist.
- Loosen the knob of the camera hook and attach the camera to it. Tighten the knob to ensure a slip-free connection.

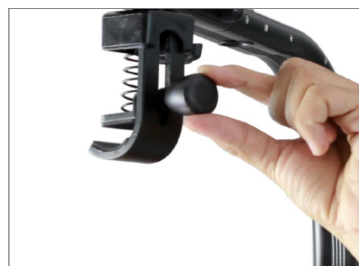

## For Safety Belt

- Attach one end of the safety belt with the support jacket and make a knot with the rest of the belt, as shown in the image. You can attach this belt in many areas according to your requirement.
- Attach the other end to your camera for more safety & protection.




- Through the balance adjustment Knob, you can adjust the balance anti-clockwise according to the weight of your setup.

**CAUTION:** Do not release the lever without removing the setup. It may result in severe damage to the camera.



## Detach the Placid from the Flowline Master

- Get the spring off the camera hook with the help of an Allen key.
- Pull the camera hook cup through the cord and remove the remaining cord from the cup.
- To remove the placid arm from its position, unscrew one side of the safety elastic cord from the placid arm's knob. Then, pull the other side of the elastic cord out from the flowline support arm.

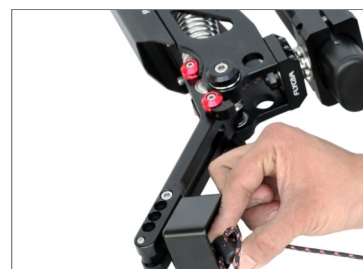

- Using an allen key, pull the mounting bracket of the placid arm out of the flowline support arm and remove the cord from the bracket. Make sure it comes out precisely through the hole in the placid arm.



## Cord Assembly into Flowline Master

- Insert the cord into the cup. Then, attach the cord lock to the cord.
- Secure the cord properly with the cord lock and insert the cord bundle into the cup.
- Attach the camera hook to the flowline support bar, as shown in the picture.



**Note:** The camera hook will be below the flowline support bar while using the camera, and it will be up when attaching the placid, as shown in the image.



## YOUR FLYCAM FLOWLINE MASTER FOR CAMERA & GIMBALS WITH PLACID ALL DRESSED UP AND READY TO GO



(SHOWN WITH OPTIONAL ACCESSORIES)

**Warranty:** We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

**Liability:** We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

**Contact Us:** In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.