








Supreme Professional Camera Dolly (DL-254-00)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

CASE-1	DOLLY CONFIGURATION		
	 <p>Foam Grip</p>	 <p>4 Platforms</p>	 <p>2 Double Pivot Track Wheels</p>
	 <p>Pushbar with Adapter</p>	 <p>4 leg Dolly Base</p>	 <p>2 Guide Track Wheels</p>


All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.





Track Setup

- Slide an extension section on to each end to complete a 12' run and install and tighten the screws to secure.

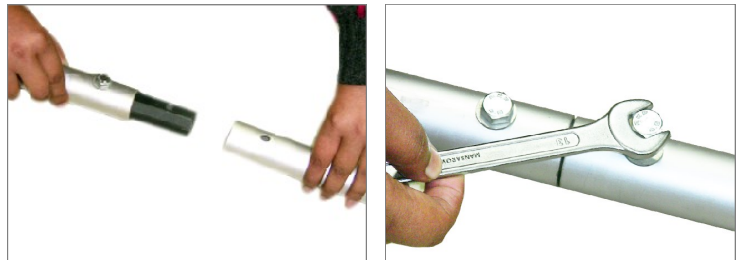

- Attach Track Stoppers and Track Feet to track for it's rigidity and to prevent your Dolly from running off rails.

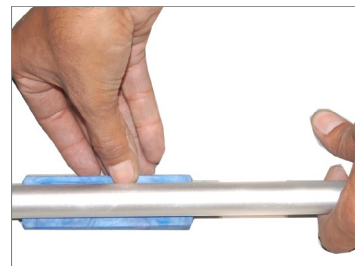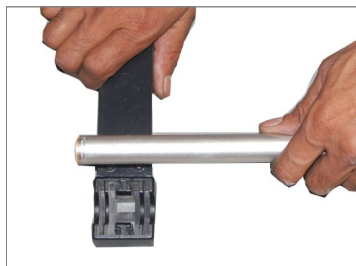

- Now, track is ready as shown in the picture.



■ Supreme Dolly Setup



- Your Dolly base is shipped with the leg extensions collapsed. Pull legs from dolly base, insert 4 long bolts (supplied) and tighten to secure.



- Insert 5th leg used to mount the 'puller' bar and handle and Now turn whole unit upside down.



- Insert wheels into the legs as shown and tighten them using provided bolts.

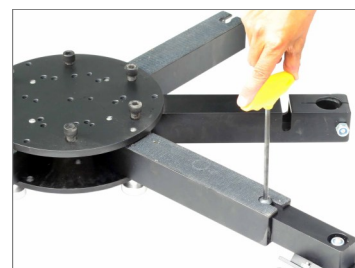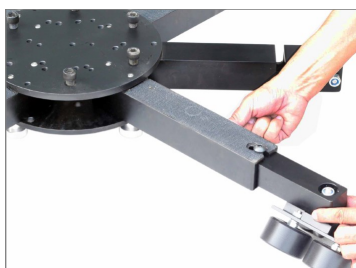


- All wheels are attached, now Place dolly on the track.



- Mount round base plate that supports the seat and tighten with supplied Allen bolts with the key.



- The 4 platform plates can be attached using the Velcro straps.

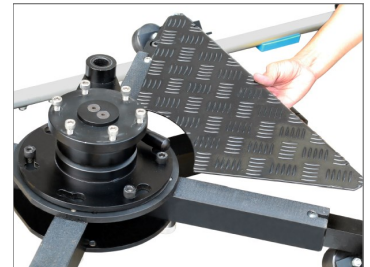

- Mount Telescopic Bazooka on round base plate. Tighten Bazooka to base plate using the supplied Allen bolts and key.




- Insert seat support side arm into the holder, then insert seat rod and tighten knob as shown in the image.



- Add the seat as shown. Vertical height adjustment is made.
- Tighten the brake of swivel seat mechanism to hold at one position.



- Insert Pushbar into dolly and adjust length of pushbar with the help of provided knob.

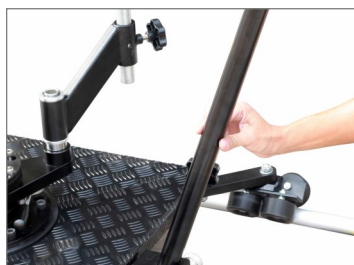

- Add foam grip handle to the pushbar and tighten it. Grips are fully foam padded for comfort.



YOUR PROAIM SUPREME PROFESSIONAL CAMERA DOLLY SYSTEM ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.