

OPERATION MANUAL

MODEL: V9



Warning to reduce the risk of injury, the user must read and understand the operator's manual

IMPORTANT SAFETY INSTRUCTIONS

Save these instructions

This is not a toy and is intended for proper use by legally competent mentally fit adults over the age of 21. Vulcan Flamethrowers, LLC and its, managers, members, agents, and representatives shall not be liable for any damages that result from improper or unauthorized use.

TO REDUCE RISK OF INJURY:

1. Read all instructions before operating product. Failure to follow all instructions listed below may result in burns, unintentional fires and/or serious injury or death.
2. KEEP OUT OF REACH OF CHILDREN
3. Inspect for leaks before operation. If you notice any leakage discontinue use immediately and contact Vulcan Flamethrowers LLC.
4. Never aim in the direction of anything you don't purposely intend on incinerating.
5. Do not touch the front of the flamethrower (nozzle or pilot torch) they will be hot during and after operation.
6. Do not loosen, unscrew or remove butane canister while a flame is present.
7. Remove butane canister when not in use.
8. Keep all parts of body as far away as possible from nozzle during use.
9. Do not refill fuel tank while pilot flame is ignited.
10. Do not use if there is any wind present.
11. Do not dent, puncture, bend or drop.
13. Do not expose to or use in temperatures higher than 100F or lower than 0F.
14. Fuel has the ability to drip from the nozzle of the device at any time. Always be sure the V9 is pointed safely away from people.
15. Never aim the flamethrower higher than 45 degrees.
16. When the pilot torch is lighted or the nozzle area has flames emitting do not point the nozzle towards your feet; fuel can drip at any time.
17. Turn the pilot torch gas valve to its fully closed position after use.
18. DO NOT DISASSEMBLE IN ANY WAY.
19. Do not press the button on the handle and run the pump when it's dry for more than 2 seconds or you will permanently damage the pump.
20. Never operate the flamethrower while under the influence of drugs and/or alcohol.

OPERATION

Before use charge your battery fully and mix your fuel in a fuel safe container.

Fuel: You can use straight gasoline or gasoline and diesel fuel mixed in a 60/40 ratio (60% gas to 40% diesel)

Straight gasoline is fine but you will sacrifice distance. You will shoot approximately 25 feet.

Gasoline and diesel mixed 60% gas to 40% diesel is our recommended mix for distance. You will

Achieve 30+ feet with this mix. You can add more diesel and achieve more distance. But the more diesel that is added the more difficult it will be to ignite fully.

We do not recommend using straight diesel. It is difficult to ignite and you will have a lot of unburned fuel falling to the ground.

NEVER THICKEN YOUR FUEL WITH AN ADDITIVE TO MAKE NAPALM. YOU WILL SEIZE THE PUMP AND VOID YOUR WARRANTY

The startup sequence is fuel, propane, battery. Ignite pilot torch switch unit on and every time you press the trigger button you will expel fire.




This QR Code will take you to an instructional video on YouTube or search You Tube for Vulcan Flamethrowers.

If you have an iPhone or smart phone, active your camera but do not take a picture. Aim it at the QR code and a link will appear, tap the link and it will take you to video.



This QR Code will take you to an instructional video on YouTube or search You Tube for Vulcan Flamethrowers.

1. Unscrew the cap and set aside. Fill the tank with your fuel mixture or straight gasoline. Screw the cap back on until it's Snug.
 - a. If you spill or drip any fuel on the side of the tank it's ok. Wipe off the tank with a towel and any other part of the body that may have fuel on it. We suggest using soap and water to clean off the body followed by a non-flammable cleaner like simple green.
 - b. If the tank is to full you can tip it and allow fuel to run out. If you choose this method you must use the above listed cleaning procedure. An easier method is to place a battery in the flamethrower and with the pilot torch off
 - c. Switch the flamethrower on and aim it in a safe direction and press the button to pump out the excess fuel.
2. Screw the propane cannister onto the burner. Do not over tighten or you run the risk of stripping the threads.
 - a. These tanks are available at Wal-Mart, Bass Pro Shops, Target and most sporting goods stores.
3. Insert the battery into the rear section of the flamethrower just below the rear handle.
 - a. Do not force the battery it has guide rails and should push in easily. The battery will be snug until the battery is inserted and removed several times.
 - b. To remove the battery firmly pinch the sides of the battery and pull straight back.
4. Slowly turn the handle on the pilot torch until you hear gas hiss.
 - a. When you hear the hiss press the ignitor until the gas ignites
 - b. After the pilot torch is lit turn the handle 1 and a half time to open it fully.
5. Now switch the flamethrower on. The on/off switch is located on the left side where the battery is inserted into the flamethrower. Previous versions had the on/off button on the side of the flamethrower.
6. Every time you press the trigger button you will emit a flaming stream 25+ feet.
7. When your finished using the flamethrower. The shut down process is just the reverse order of the startup process.
 - a. Set the flamethrower down then turn the pilot torch off. Switch the unit off. Now it is safe to refill.
8. If you're completely finished and ready to store your flamethrower. Remove the propane cannister and remove the battery. Make sure the pilot torch is cool to the touch before placing in a case, vehicle, gun room, storage closet, vehicle trunk/interior or bed/truck box.

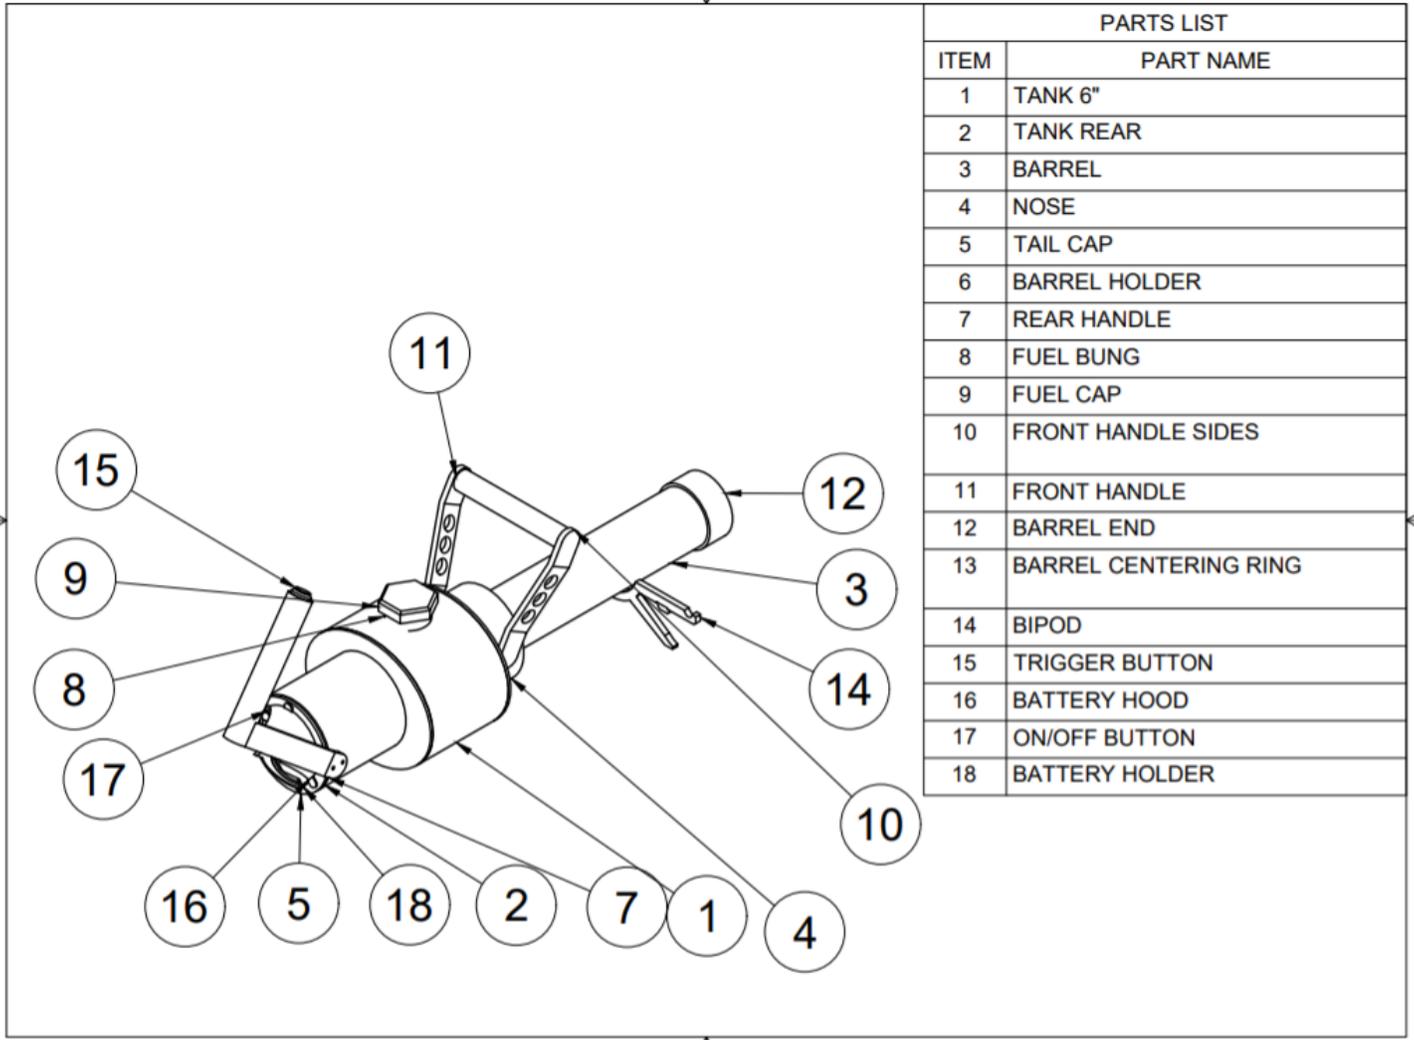

Please check out the frequently asked question section of our website. It's at the top of the page just click the link.

Information about your warranty is located on our website.

You can contact us at vulcanflamethrowers@gmail.com

Thank you for your purchase