

INSTALLATION INSTRUCTION


1. Using your plastic pry tool, insert in between the side crevice and pull up to loosen the center console panel.



2. Look underneath and locate the 12 pin connector, directly behind the stop/start switch.



3. Unplug the 12 pin connector by pushing the small tab and pulling the connector out.

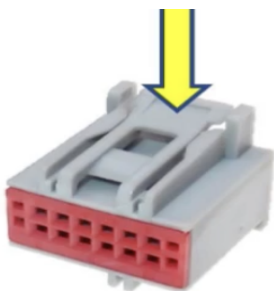

4. Plug in the stop/start harness in the 12 pin connector and attach the other side to the existing switch you just unplugged.



5. Pull out plastic side trim.



6. With a flat head, pull out the tab located on the drivers' side of the center console panel and remove the screw.




7. Open the cover below the steering wheel to access the fuse box.





8. Pull out little triangle-like plastic fascia.



9. Run the long wiring harness down through the side panel to the fuse area.

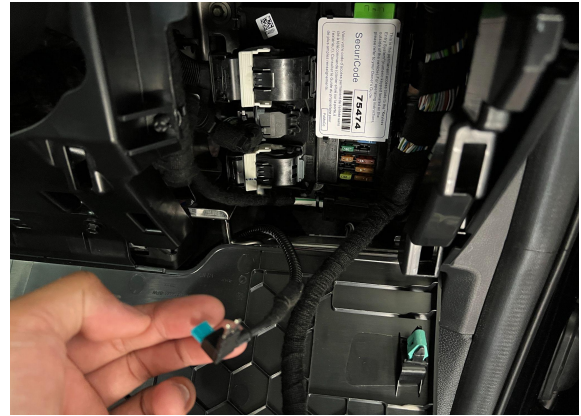


10. Using a pair of pliers or nose tip pliers, remove the 15amp fuse in row 36 as shown.

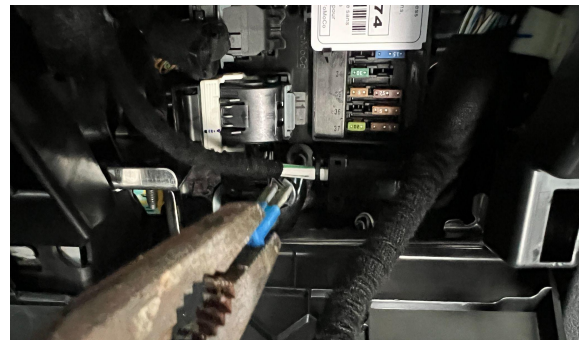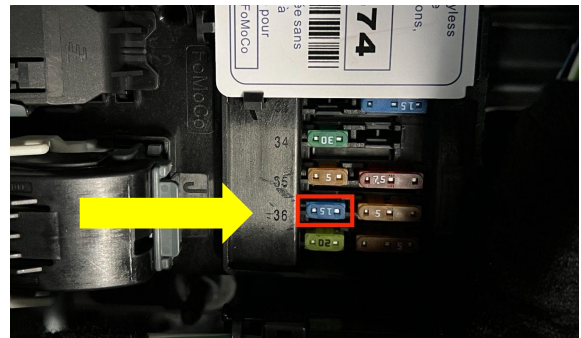

11. Now take the 15amp fuse, which you just removed, and insert it into the spare socket on the fuse tap.



12. Insert fuse tap into the socket you pulled the 15amp from

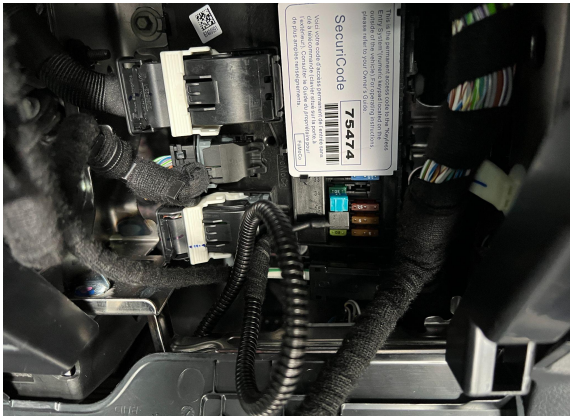


13. Zip tie the fuse tap wire wherever needed if necessary.

14. Close fuse panel cover.



15. Fasten the screws back into place and re-insert all covers/plastic fascias.

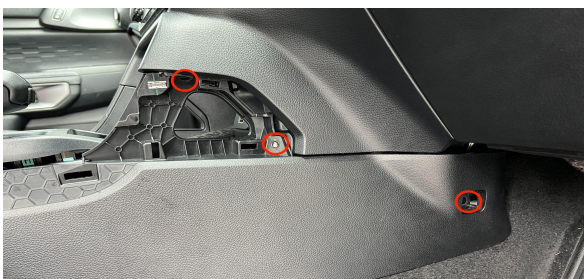

16. Push the center console into place.



17. Congratulations, you have now disabled your stop/start feature on every start-up. Every time the car starts it will automatically switch off. The button is still usable and you can still enable the start/stop function if required.

Please note: that on every start-up, it will be turned off.