

apuro

Vacuum Pack Machine

Instruction manual



**Model:
CD969-A**

Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - Fire Precautions
 - Wiring Regulations
 - Building Regulations
- **This product is not intended to be used for liquids.**
- DO NOT immerse the appliance in water.
- The sealing bar becomes hot during use. DO NOT touch the sealing bar during or immediately after operation.
- Do not turn Off at the plug to halt operation; always use the Cancel button.
- Do not use the appliance for anything other than its intended use.
- Only use bags recommended by the supplier/manufacturer with the appliance.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an APURO agent or a recommended qualified technician in order to avoid a hazard.



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- APURO recommend that this appliance is PAT tested on an annual basis to ensure the product remains safe.

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your APURO product.

Pack Contents


The following is included:

- APURO Vacuum Pack Machine
- Lid gasket
- Heater wire assembly
- Instruction manual

APURO prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your APURO dealer immediately.

Location of Controls

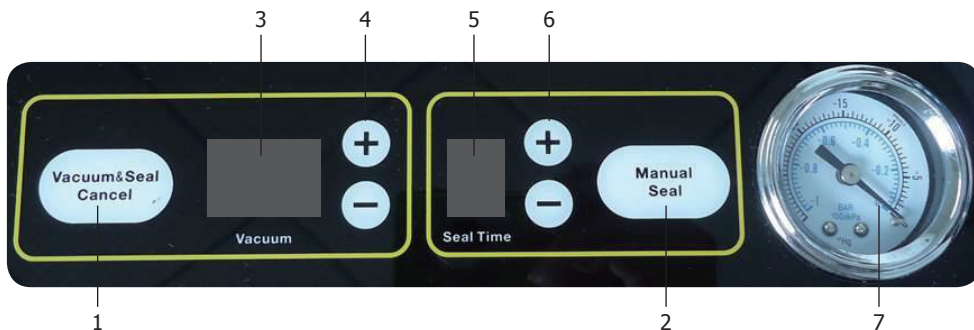

Controls

1. Vacuum & Seal Button / Cancel

- Press to start automatic operation of vacuuming the bag and then automatically seal the bag when vacuum is completed
- Press to stop the Vacuum cycle and release lid

2. Manual Seal

- Use to seal open end of a bag when making bags from roll
- During automatic 'Vacuum and Seal' function press to immediately start the bag sealing process (to avoid crushing delicate items)

3. Vacuum Time Screen

Shows the working time and progress of vacuuming

4. Vacuum Time Adjusting Button (Vac Time "+" or "-")

Simply adjust the vacuum time "up" or "down" by using "+" or "-" buttons

5. Seal Time Screen

Shows the working time and progress of sealing function

6. Seal Time Adjusting Button (Seal Time "+" or "-")

Simply adjust the seal time "up" or "down" by using "+" or "-" buttons

7. Vacuum Gauge

Shows the vacuum level inside the vacuum chamber

Operation

Plug in Vacuum Pack Machine and turn on Power Switch. The machine is now ready for use.

Vacuum Packing Food

1. Place the food inside in the bag
2. Allow minimum of 25mm-50mm of space at the top of bag to ensure a good seal.
3. Place the open end of the bag across the sealing bar. Close lid
4. Press the Vacuum/Seal button
5. The machine goes to vacuum cycle. When vacuuming, vacuum time will be shown on the Digital Display and count down from default setting to 0.
(Note: Vacuum time is adjustable from 20-99 seconds.)
6. At anytime during vacuum cycle pressing the 'Manual Seal' button will override timer and complete the vacuuming and sealing cycle.
7. After the vacuum process the machine automatically goes to sealing cycle.
8. When sealing, seal time will be shown on the Digital Display and count down from default setting to 0.
(Note: Seal time is adjustable from 3-9 seconds. If the setting time is 0, the machine will not seal.)
9. Take out the bag and check the vacuum and seal.
(Note: A good seal will look clear upon inspection. If the seal is spotty, incomplete, wrinkled, white or milky, remove sealed portion and run vacuum and seal process again.)
10. Press "Cancel" button to stop the machine at any time.



Please store the vacuumed items properly. All perishable foods must be refrigerated or frozen to prevent spoilage.

Cleaning, Care & Maintenance



Always allow to cool before cleaning.

WARNING: Do not allow any water to spill into the appliance when cleaning.

- Use warm, soapy water and a damp cloth to clean the appliance.
- Dry thoroughly after cleaning.
- A APURO dealer or qualified technician should carry out repairs if required.

Troubleshooting

| Fault | Probable Cause | Solution |
|---|---|---|
| The appliance is not working | The unit is not switched on | Check the unit is plugged in correctly and switched on |
| | Plug and lead are damaged | Call APURO agent or qualified Technician |
| | Fuse in the plug has blown | Replace the plug fuse |
| | Power supply | Check power supply |
| | Internal wiring fault | Call APURO agent or qualified technician |
| Appliance does not remove all the air from the bag | Bag not correctly positioned | Open lid and reposition bag |
| | Open end of bag is dirty | Clean bag |
| | Bag may be punctured | Replace bag |
| | Incorrect bags used | Call APURO agent or qualified Technician |
| Bags are not sealing correctly | Moisture in bag under the sealing bar | Ensure inside of the bag is dry and free from moisture where it is to be sealed |
| | Incorrect bags used | Call APURO agent or qualified Technician |
| | End of bag not placed above sealing bar | Move end of bag over sealing bar |
| | Sealing Bar requires replacement | Call APURO agent or qualified technician |
| Error message E1 in Digital Display | Lid in poor contact with chamber | Clean lid gasket and chamber |
| | Lid Gasket distorted or broken | Replace the lid gasket |
| | Internal system leak | Call APURO agent or qualified technician |
| Error message E2 in Digital Display | Safety switch / electronic fault | Call APURO agent or qualified technician |
| NOTE: Sealing bar replacement is not covered under warranty | | |

Technical Specifications

| Model | Voltage | Power | Current | Vacuum Pressure (approx.) | Dimensions h x w x d mm | Weight (kg) |
|---------|------------------|-------|---------|---------------------------|-------------------------|-------------|
| CD969-A | 220-240V 50Hz | 350W | 1.5A | -950mbar | 270 x 415 x 410 | 12.6 |

Electrical Wiring

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed.



If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

APURO parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

APURO products have been approved to carry the following symbol:



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of APURO.

Every effort is made to ensure all details are correct at the time of going to press, however, APURO reserve the right to change specifications without notice.

DECLARATION OF CONFORMITY

| | |
|-------------------------|---|
| Equipment Type | Compact Chamber Vacuum Pack Machine - 6.5Ltr |
| Model | CD969-A |
| Legislation | Electrical Safety Electromagnetic Compatibility |
| Standards | AS/NZS 60335.1:2011 +A1 +A2 AS/NZS 60335.2.45:2012 AS/ NZS CISPR 14.1:2013 |
| Producer Name | Apuro |
| Producer Address | 15 Badgally Road, Campbelltown, NSW 2560 |

I, the undersigned, hereby declare that the equipment specified above conforms to the above Legislation and Standard(s).

| | |
|------------------|---|
| Date | 29th October 2018 |
| Signature |  |
| Full Name | Ashley Hooper |
| Position | Technical & Quality Manager/ Responsible Supplier |

apuro

CD969-A_A5_v2_20181031