EFX24 Damper Actuator Technical Data Sheet On/Off, Spring Return, AC/DC 24 V

BELIMO







•	nca. Eqoji.
Technical Data	
Power Supply	24 VAC, ±20%, 50/60 Hz, 24 VDC, -10% /
	+20%
Power consumption in operation	9.5 W
Power consumption in rest	4.5 W
position	40.1/4 (-1 0
Transformer sizing	16 VA (class 2 power source)
Shaft Diameter	1/21.05" round, centers on 3/4" with insert, 1.05" without insert
Electrical Connection	18 GA appliance or plenum cables, 3 ft [1 m], 10 ft [3 m] or 16ft [5 m], with or without
	1/2" conduit connector
Overload Protection	electronic throughout 095° rotation
Electrical Protection	actuators are double insulated
Angle of rotation	Max. 95°, adjustable with mechanical end stop, 3595°
Torque motor	270 in-lb [30 Nm]
Direction of motion motor	selectable by ccw/cw mounting
Direction of motion fail-safe	reversible with cw/ccw mounting
Position indication	Mechanical
Manual override	5 mm hex crank (3/16" Allen), supplied
Running Time (Motor)	75 s
Running time fail-safe	<20 s @ -4122°F [-2050°C], <60 s @ -22°F [-30°C]
Ambient humidity	max. 95% r.H., non-condensing
Ambient temperature	-22122°F [-3050°C]
Storage temperature	-40176°F [-4080°C]
Degree of Protection	IP54, NEMA 2, UL Enclosure Type 2
Housing material	Die cast aluminium and plastic casing
Agency Listing	cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02, CE acc. to 2014/30/EU
Noise level, motor	56 dB(A)
Noise level, fail-safe	71 dB(A)
Servicing	maintenance-free
Quality Standard	ISO 9001
Weight	12 lb [5.3 kg]

†Rated Impulse Voltage 800V, Type of action 1.AA, Control Pollution Degree 3

Torque min. 270 in-lb, for control of air dampers


Application

For On/Off, fail-safe control of dampers in HVAC systems. Actuator sizing should be done in accordance with the damper manufacturer's specifications. Control is On/Off from an auxiliary contact or a manual switch. The actuator is mounted directly to a damper shaft up to 1.05" in diameter by means of its universal clamp. A crank arm and several mounting brackets are available for applications where the actuator cannot be direct coupled to the damper shaft. Maximum of two EF's can be piggybacked for torque loads of up to 540 in-lbs. Minimum 3/4" diameter shaft and parallel wiring.

Operation

The EF..24 series actuators provide true spring return operation for reliable failsafe application and positive close off on air tight dampers. The spring return system provides constant torque to the damper with, and without, power applied to the actuator. The EF..24 series provides 95° of rotation and is provided with a graduated position indicator showing 0° to 95°. The actuator may be stalled anywhere in its normal rotation without the need of mechanical end switches. The EF..24 actuator is shipped at 5° (5° from full fail-safe) to provide automatic compression against damper gaskets for tight shut-off.

Installation Note: Use flexible metal conduit. Push the UL listed conduit fitting device over the actuator's cable to butt against the enclosure. Screw in conduit connector. Jacket the actuator's input wiring with UL listed flexible conduit. Properly terminate the conduit in a suitable junction box.

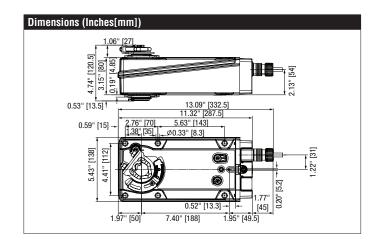



EFX24 Damper Actuator Technical Data Sheet

On/Off, Spring Return, AC/DC 24 V

24 VAC Transformer Line Volts	A 1 3 45 48 Blk (1) Common Red (2) + Hot
On/Off	

AV8-25 Shaft extension EF-P Anti-rotation bracket EFB(X)/GKB(X)/GMB(X). IND-EFB End stop indicator K9-2 Shaft clamp reversible KG10A Ball joint KH10 Damper crank arm KH-EFB Actuator arm SH10 Push rod for KG10A ball joint (36" L, 3/8" diameter). T00L-07 13 mm wrench. ZG-100 Univ. right angle bracket 17"x11-1/8"x6" (HxWxbase). ZG-120 Jackshaft mounting bracket. ZG-DC1 Damper clip for damper blade, 3.5" width. ZG-DC2 Damper clip for damper blade, 6" width. ZG-EFB Mounting kit for linkage operation ZG-JSA-3 1.05" diameter jackshaft adaptor (12" L). P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2". ZG-X40 120 to 24 VAC, 40 VA transformer.	Accessorie	es
IND-EFB End stop indicator K9-2 Shaft clamp reversible KG10A Ball joint KH10 Damper crank arm KH-EFB Actuator arm SH10 Push rod for KG10A ball joint (36" L, 3/8" diameter). TOOL-07 13 mm wrench. ZG-100 Univ. right angle bracket 17"x11-1/8"x6" (HxWxbase). ZG-120 Jackshaft mounting bracket. ZG-DC1 Damper clip for damper blade, 3.5" width. ZG-DC2 Damper clip for damper blade, 6" width. ZG-EFB Mounting kit for linkage operation ZG-JSA-3 1.05" diameter jackshaft adaptor (12" L). P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	AV8-25	Shaft extension
K9-2 Shaft clamp reversible KG10A Ball joint KH10 Damper crank arm KH-EFB Actuator arm SH10 Push rod for KG10A ball joint (36" L, 3/8" diameter). TOOL-07 13 mm wrench. ZG-100 Univ. right angle bracket 17"x11-1/8"x6" (HxWxbase). ZG-120 Jackshaft mounting bracket. ZG-DC1 Damper clip for damper blade, 3.5" width. ZG-DC2 Damper clip for damper blade, 6" width. ZG-BFB Mounting kit for linkage operation ZG-JSA-3 1.05" diameter jackshaft adaptor (12" L). P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	EF-P	Anti-rotation bracket EFB(X)/GKB(X)/GMB(X).
KG10A Ball joint KH10 Damper crank arm KH-EFB Actuator arm SH10 Push rod for KG10A ball joint (36" L, 3/8" diameter). TOOL-07 13 mm wrench. ZG-100 Univ. right angle bracket 17"x11-1/8"x6" (HxWxbase). ZG-120 Jackshaft mounting bracket. ZG-DC1 Damper clip for damper blade, 3.5" width. ZG-DC2 Damper clip for damper blade, 6" width. ZG-EFB Mounting kit for linkage operation ZG-JSA-3 1.05" diameter jackshaft adaptor (12" L). P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. P475-1 Shaft mount, non-Mercury aux. switch for 1" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	IND-EFB	End stop indicator
KH10 Damper crank arm KH-EFB Actuator arm SH10 Push rod for KG10A ball joint (36" L, 3/8" diameter). TOOL-07 13 mm wrench. ZG-100 Univ. right angle bracket 17"x11-1/8"x6" (HxWxbase). ZG-120 Jackshaft mounting bracket. ZG-DC1 Damper clip for damper blade, 3.5" width. ZG-DC2 Damper clip for damper blade, 6" width. ZG-EFB Mounting kit for linkage operation ZG-JSA-3 1.05" diameter jackshaft adaptor (12" L). P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. P475-1 Shaft mount, non-Mercury aux. switch for 1" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	K9-2	Shaft clamp reversible
KH-EFB Actuator arm SH10 Push rod for KG10A ball joint (36" L, 3/8" diameter). TOOL-07 13 mm wrench. ZG-100 Univ. right angle bracket 17"x11-1/8"x6" (HxWxbase). ZG-120 Jackshaft mounting bracket. ZG-DC1 Damper clip for damper blade, 3.5" width. ZG-DC2 Damper clip for damper blade, 6" width. ZG-FFB Mounting kit for linkage operation ZG-JSA-3 1.05" diameter jackshaft adaptor (12" L). P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. P475-1 Shaft mount, non-Mercury aux. switch for 1" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	KG10A	Ball joint
SH10 Push rod for KG10A ball joint (36" L, 3/8" diameter). T00L-07 13 mm wrench. ZG-100 Univ. right angle bracket 17"x11-1/8"x6" (HxWxbase). ZG-120 Jackshaft mounting bracket. ZG-DC1 Damper clip for damper blade, 3.5" width. ZG-DC2 Damper clip for damper blade, 6" width. ZG-FFB Mounting kit for linkage operation ZG-JSA-3 1.05" diameter jackshaft adaptor (12" L). P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. P475-1 Shaft mount, non-Mercury aux. switch for 1" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	KH10	Damper crank arm
TOOL-07 13 mm wrench. ZG-100 Univ. right angle bracket 17"x11-1/8"x6" (HxWxbase). ZG-120 Jackshaft mounting bracket. ZG-DC1 Damper clip for damper blade, 3.5" width. ZG-DC2 Damper clip for damper blade, 6" width. ZG-EFB Mounting kit for linkage operation ZG-JSA-3 1.05" diameter jackshaft adaptor (12" L). P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. P475-1 Shaft mount, non-Mercury aux. switch for 1" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	KH-EFB	Actuator arm
ZG-100 Univ. right angle bracket 17"x11-1/8"x6" (HxWxbase). ZG-120 Jackshaft mounting bracket. ZG-DC1 Damper clip for damper blade, 3.5" width. ZG-DC2 Damper clip for damper blade, 6" width. ZG-EFB Mounting kit for linkage operation ZG-JSA-3 1.05" diameter jackshaft adaptor (12" L). P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. P475-1 Shaft mount, non-Mercury aux. switch for 1" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	SH10	Push rod for KG10A ball joint (36" L, 3/8" diameter).
ZG-120 Jackshaft mounting bracket. ZG-DC1 Damper clip for damper blade, 3.5" width. ZG-DC2 Damper clip for damper blade, 6" width. ZG-BFB Mounting kit for linkage operation ZG-JSA-3 1.05" diameter jackshaft adaptor (12" L). P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. P475-1 Shaft mount, non-Mercury aux. switch for 1" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	T00L-07	13 mm wrench.
ZG-DC1 Damper clip for damper blade, 3.5" width. ZG-DC2 Damper clip for damper blade, 6" width. ZG-EFB Mounting kit for linkage operation ZG-JSA-3 1.05" diameter jackshaft adaptor (12" L). P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. P475-1 Shaft mount, non-Mercury aux. switch for 1" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	ZG-100	Univ. right angle bracket 17"x11-1/8"x6" (HxWxbase).
ZG-DC2 Damper clip for damper blade, 6" width. ZG-EFB Mounting kit for linkage operation ZG-JSA-3 1.05" diameter jackshaft adaptor (12" L). P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. P475-1 Shaft mount, non-Mercury aux. switch for 1" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	ZG-120	Jackshaft mounting bracket.
ZG-EFB Mounting kit for linkage operation ZG-JSA-3 1.05" diameter jackshaft adaptor (12" L). P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. P475-1 Shaft mount, non-Mercury aux. switch for 1" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	ZG-DC1	Damper clip for damper blade, 3.5" width.
ZG-JSA-3 1.05" diameter jackshaft adaptor (12" L). P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. P475-1 Shaft mount, non-Mercury aux. switch for 1" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	ZG-DC2	Damper clip for damper blade, 6" width.
P475 Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts. P475-1 Shaft mount, non-Mercury aux. switch for 1" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	ZG-EFB	Mounting kit for linkage operation
P475-1 Shaft mount, non-Mercury aux. switch for 1" dia. shafts. PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	ZG-JSA-3	1.05" diameter jackshaft adaptor (12" L).
PS-100 Low voltage and control signal simulator. TF-CC US Cable conduit connector, 1/2".	P475	Shaft mount, non-Mercury aux. switch for 1/2" dia. shafts.
TF-CC US Cable conduit connector, 1/2".	P475-1	Shaft mount, non-Mercury aux. switch for 1" dia. shafts.
	PS-100	Low voltage and control signal simulator.
ZG-X40 120 to 24 VAC, 40 VA transformer.	TF-CC US	Cable conduit connector, 1/2".
	ZG-X40	120 to 24 VAC, 40 VA transformer.

Typical Specification

On/Off spring return damper actuators shall be direct coupled type which require no crank arm and linkage and be capable of direct mounting to a jackshaft up to a 1.05" diameter. The actuators must be designed so that they may be used for either clockwise or counter clockwise fail-safe operation. Actuators shall be protected from overload at all angles of rotation. If required, two SPDT auxiliary switch shall be provided having the capability of one being adjustable. Actuators with auxiliary switches must be constructed to meet the requirements for Double Insulation so an electrical ground is not required to meet agency listings. Actuators shall be cULus listed and have a 5 year warranty, and be manufactured under ISO 9001 International Quality Control Standards. Actuators shall be as manufactured by Belimo.

Wiring Diagrams



WARNING! LIVE ELECTRICAL COMPONENTS!

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.



Meets cULus requirements without the need of an electrical ground connection.



Actuators with appliance cables are numbered.

Provide overload protection and disconnect as required.



Actuators may also be powered by 24 VDC.



Actuators may be powered in parallel. Power consumption must be observed.



Parallel wiring required for piggy-back applications.