

# FEMPLES OF SELIKO FEMPLES OF SE





Technical Data	FSNF24(-S)(-FC) US, FSNF230(-S) US
Power supply	
FSNF24(-S)(-FC) US	24 VAC ± 20%, 50/60 Hz
FSNF230(-S) US	230 VAC ± 10%, 50/60 Hz
	ng 17 W, 24 VA
24 VAC hold	-
	ng 20 W, 23 VA, 0.1 A
hold	
Fusing*	
FSNF24	2.5 amp slow blow
FSNF230	0.25 amp slow blow
Transformer sizing	40 VA per 24 VAC actuator
Electrical connection	
FSNF24 US	3 ft, 18 ga, 2 color coded leads
FSNF230 US	3 ft, 18 ga, 3 color coded leads
FSNFS US	3 ft, 18 ga, appliance cable
Overload protection	electronic throughout 0 to 95° rotation grounded
•	enclosure, 230V
Control	microprocessor
Angle of rotation	95°
Torque	70 in-lb [7.9 Nm] minimum
	from 32°F to 350°F [0°C to 177°C]
Direction of rotation spr	ng can be selected by CCW/CW mounting
Position indication	visual indicator, 0° to 95°
Running time	between 32°F and 350°F [0°C to 177°C]
	<15 seconds at rated voltage and torque
Humidity	5 to 95% RH non-condensing
Ambient temperature	32°F to 122°F [0°C to 50°C]
Storage temperature	-40°F to 176°F [-40°C to 80°C]
Housing	NEMA type 1
Housing material	zinc coated steel
Gears	steel, permanently lubricated
Agency listings	cULus listed to UL873 and
	CAN/CSA C22.2 No. 24
	NYC Department of Buildings Materials and
	Equipment Acceptance Division MEA 197-07-M
	California State Fire Marshal Listing
	3210-1593:101
Servicing	maintenance free
Quality standard	ISO 9001
Weight FONEO4( C) US	C O lbo [0.75 km] / . O 5 lbo [ . 00 km]
FSNF24(-S) US	6.0 lbs [2.75 kg], (+ 0.5 lbs [+.23 kg])
FSNF230(-S) US	6.7 lbs [3.0 kg], (+ 0.5 lbs [+.23 kg])

#### FSNF24(-S)(-FC) US, FSNF230(-S) US

Auxiliary switch 2xSPST 7A resistive, 2.5A inductive at 120V or 250V, UL Approved, double-insulated, one switch at 10°, one at 85°

FSNF24(-S)(-FC) US, FSNF230(-S) US

# On/Off, Spring Return, 350°F for Half Hour, 15 Seconds Cycle Time

#### **Application**

The type FSNF spring-return actuator is intended for the operation of smoke and combination fire and smoke dampers in ventilation and air-conditioning systems. The actuator will meet requirements of UL555 and UL555S when tested as an assembly with the damper and will open and close in 15 seconds at 350°F. Square footage of damper operated will depend on make and model of damper and the temperature 250°F or 350°F.

#### **Operation**

Mounting of the actuator to the damper axle shaft or jackshaft (3/8" to 1.05") is via a cold-weld clamp. Teeth in the clamp and V-bolt dig into the metal of both solid and hollow shafts maintaining a perfect connection. The specially designed clamp will not crush hollow shafts. The bottom end of the actuator is held by an anti-rotation strap or by a stud provided by the damper manufacturer.

The actuator is mounted in its fail safe position with the damper blade(s) closed. Upon applying power, the actuator drives the damper to the open position. The internal spring is tensioned at the same time. If the power supply is interrupted, the spring moves the damper back to its fail-safe position.


**-FC Models** have the same electrical and mechanical characteristics except instead of a 1/2" conduit connector a 3/8" screw flex connector is supplied.

#### **SAFETY NOTES**

The actuator contains no components which the user can replace or repair.

1/2" Threaded Connector – Screw a conduit fitting into the actuator's metal bushing. Jacket the actuator's input wiring with suitable flexible conduit. Properly terminate the conduit in a suitable junction box.

**3/8" Flexible Connector Models (-FC Screw Connector)** – Mount the flexible conduit into the actuator's metal bushing by means of the provided screw with a torque of 0.9 ft-lb. Jacket the actuator's input wiring with suitable flexible conduit. Properly terminate the conduit in a suitable junction box.

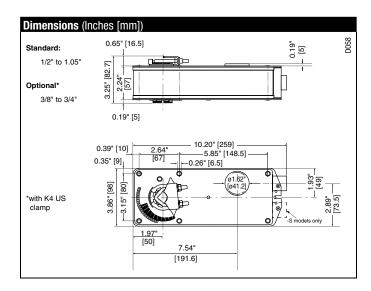

#### Accessorie

All AF/NF linkages and parts except ZG-102 may be employed.

# \* Individual Fusing or Breakers are not required by Belimo.

The FSNF24 draws higher peak current when driving against any type of stop. Given the technology of fuses & breakers, this requires the value of fuse or breaker to be increased to avoid nuisance opening or tripping. A 2.5 amp slow blow should be used for 24VAC. A 0.25 amp slow blow should be used for 230VAC.

#### **Transformers**

Note that while a 100VA transformer would handle 2 actuators, a 4A breaker is insufficient.




# **Typical Applications**

#### **Multi-section Damper Assemblies**

The typical fire and smoke damper requires from 5-15 in-lb of torque per square foot at 250°F – 350°F under dynamic load (2400 fpm velocity). The FSNF will operate multi-section dampers using multiple actuators for multiple sections. Some of the methods used are shown below.

This is a direct coupled actuator. If linkages are needed use those for the FSAF series. Do not use the ZG-102 as close coupled actuators have a shortened life due to the high speed of the FSNF. Mounting at opposite ends of a jackshaft is OK.

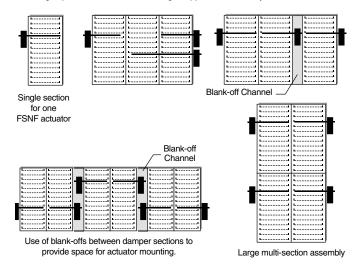

# **Typical Specification**

#### **Smoke Control and Combination Fire and Smoke Control Damper Actuators**

All smoke and combination fire and smoke dampers shall be provided with Belimo FSTF, FSLF, FSNF, or FSAF actuators. No substitutions allowed.

Damper and actuator shall have UL555S Listing for 250°F (350°F) and shall comply with UBC if required by local codes.

Where proof of closure switches are required, blade switches, actuator auxiliary switches, or proximity switches are allowed if permitted by local codes.

## **Replacement Applications**

The number one "equal or better" requirement for use as a replacement for obsolete defective motors is the UL555S listing of the Belimo actuator with the damper for the application. The local authority having jurisdiction sets the requirements. In some cases a permit and inspection may be required.

Go to www.belimo.us/firesmoke for a Cross Reference from old damper actuators to Belimo. Extensive retrofit installation instructions are available, along with technical training information.

#### CAUTION

Caution must be used when replacing failed motors with new Belimo actuators. Many old motors did not have internal springs and depended on external springs on the side of the damper or wrapped around the damper shaft to close the damper. Old motor springs must be removed or disabled. Do not remove fusible link springs if they had only fire and no smoke functions

In some cases, a BAE 165 or equal thermal sensor must be installed.

### **Wiring Diagrams**

# 💢 INSTALLATION NOTES



Provide overload protection and disconnect as required.




# **CAUTION** Equipment Damage!

Actuators may be connected in parallel. Power consumption and input impedance must be observed.

For end position indication, interlock control, fan startup, etc., FSNF24-S US and FSNF230-S US incorporate two built-in auxiliary switches: 2 x SPDT, 7A (2.5A inductive)@125/250 VAC, UL Approved, 10° and 85°. Switch rating is for 250°F 1/2 hour only.

# **WARNING** Live Electrical Components!

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

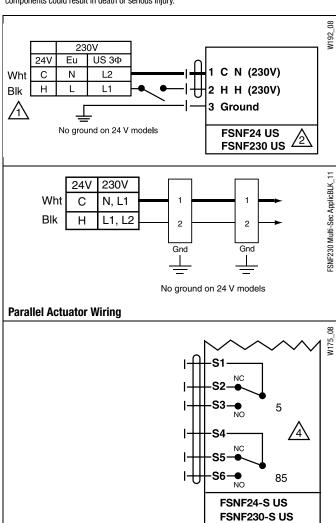

Auxiliary switch wiring for FSNF24-S US, FSNF230-S US