



Bosisto's

SIMPLY OIL WATERLESS DIFFUSER




OPERATING MANUAL - MODEL 89

FEATURES

- Cool to touch
- Portable and rechargeable
- Auto switch off after 3 hours operation
- Use with any Bosisto's diffuser oils or essential oil blends up to 15mL
- 3 settings and light display
- Operating times:
 - 10s on/60s off
 - 10s on/120s off
 - 5s on/150s off

Read the Operating Manual carefully and retain for reference.

How the Bosisto's Simply Oil Waterless Diffuser works:
Using atomisation, essential oils are converted into a fine mist and dispersed into the air

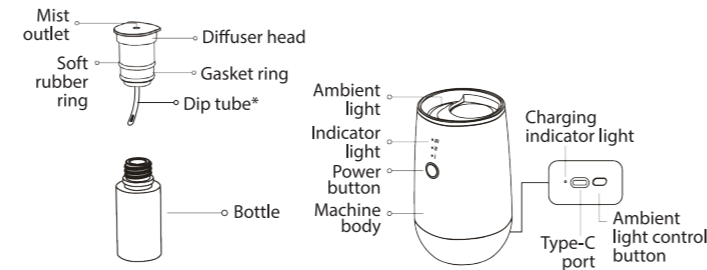


*NOTE: To ensure optimal operation, the dip tube contains a small mesh filter.

OPERATING INSTRUCTIONS

1. Holding upright, carefully remove the diffuser head. Ensure dip tube is securely attached to the diffuser head.
2. Holding upright, remove the dripper from your Bosisto's diffuser oil or essential oil bottle using a cloth or tissue. Insert dip tube directly into oil bottle and securely tighten.
3. Vertically place bottle and diffuser head back into unit. Press down to secure. DO NOT tilt the unit.
4. Hold down 'POWER' button to switch on. Press to cycle through settings. Top 10s on/60s off, middle 10s on/120s off, bottom 5s on/150s off. Hold down 'POWER' button to switch off.
5. Press ambient light control button to cycle through light colours.
6. Charge the device via USB-C (avoid quick charger). The indicator light will remain red during charging. The light will turn green once the device is fully charged. This will allow up to 160+ hours operation.

NOTE: Avoid direct skin contact and wash hands immediately after handling. Store cap and dripper out of reach of children.

NOTE: Glass bottles are included for decanting oils or for cleaning purposes. (see Maintenance instructions).

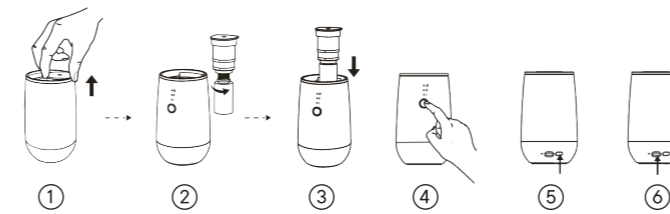

THINGS TO NOTE

- Keep the device vertical after installation. Tilting or lying flat may cause oil overflow. The machine efficiency may be affected if the circuit board is contaminated.
- The amount and intensity of mist produced will vary, but this is not unusual and should not be considered as a fault. Factors that affect this include humidity, temperature and air currents.
- The unit will not work without being sufficiently charged.
- Can be used whilst charging.
- Only diffuser oils, essential oils and rubbing alcohol can be used in the unit. Those containing chemical fragrance or impurities will cause malfunction and void the warranty.
- Clean the unit as per the Maintenance instructions before changing to a new diffuser oil or essential oil blend, or when not using for a long time.

ACCIDENTAL LEAKAGE

In the event of the unit being knocked over or tipped during use, please follow Maintenance instructions to avoid malfunction. In addition to Maintenance instructions, soak diffuser head in rubbing alcohol and then allow to dry for at least 24 hours.

MAINTENANCE

To ensure you enjoy the best results and long-term satisfaction, follow the Operating and Maintenance instructions carefully. Follow the steps below before changing to a new diffuser oil or essential oil blend, or when not using for a long time.

STEP 1: Switch off device.

STEP 2: Remove diffuser head and bottle from machine body. Replace dripper and cap on bottle.

STEP 3: Use a clean, dry cloth with rubbing alcohol to gently wipe excess oil from the dip tube, diffuser head and cavity in machine body.

STEP 4: Fill the clean glass bottle provided with rubbing alcohol. Always follow manufacturer's safety instructions. DO NOT exceed half the fill volume of the bottle (approximately 5mL). Insert dip tube into bottle and replace diffuser head in machine body.

STEP 5: Switch on device at the first setting (10s on/60s off) and allow to operate for 15 minutes. Keep area well ventilated.

STEP 6: Switch off device. Remove the diffuser head from the machine body and bottle.

STEP 7: Use a clean, dry cloth to gently wipe excess rubbing alcohol from the dip tube. Discard any remaining rubbing alcohol from the bottle, following safety instructions.

STEP 8: Insert dip tube into your desired diffuser oil or essential oil blend as per Operating Instructions.

PRECAUTIONS AND SAFETY WARNINGS

To ensure safety in operating this unit, please follow the instructions below.

- Do not switch on without bottle attached to diffuser head or if bottle is empty.
- Only use rubbing alcohol for cleaning.
- Do not tip the unit as this may cause oils to enter the mechanism and cause malfunction.
- Diffuser oils and essential oils can stain. In the event of spillage or contact to surfaces, wipe away with a soft cloth.
- Do not cover the unit or block the mist outlet or let mist blow directly onto furniture, clothing, walls, etc.
- Do not touch any part of the unit with wet hands.
- Do not use a quick charger to recharge device.
- Always keep on stable flat surfaces. Do not place on carpet.
- Clean regularly as per Maintenance instructions to avoid malfunction.
- Always unplug from power supply and switch device off before following Maintenance instructions.
- Do not use the unit if the USB cable has been damaged or the socket is loose.
- Do not attempt to modify, dismantle or repair the machine. See Warranty information.
- Keep away from direct sunshine and heat sources. Do not place the device in a hot or humid place. Do not use or store the device above 70°C
- Keep away from electronic equipment such as computer, TV and audio equipment.
- Keep out of reach of children and pets. This appliance is not to be used by persons with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless they have been given supervision or instruction.
- This product contains a fully enclosed lithium battery. Do not remove battery from unit, it could damage the battery which could cause overheating, fire and injury. Keep out of reach of children and away from heat sources.
- Due to the battery, the unit must be disposed of separately from household waste. Do not incinerate. To dispose of, drop off to an e-waste service or contact your local council.



TROUBLESHOOTING

Please refer to the table below in the event of the unit operating abnormally:

ISSUE	POSSIBLE CAUSE	SOLUTION
Will not switch on - switch off easily	<ul style="list-style-type: none"> • Is the device lacking power? • Is the USB cable connected properly? • Is the location hot and/or humid? 	<ul style="list-style-type: none"> • Recharge device. • Disconnect, check cables and re-connect carefully. • Avoid using the device in a hot and/or humid location.
No mist or abnormal mist	<ul style="list-style-type: none"> • Not enough oil? • Too much oil? • Diffuser head not securely attached? • Is the dip tube securely attached to the diffuser head? • Is the opening of the dip tube sitting flush against the bottle? • Is dip tube blocked? • Has the device been tipped over? 	<ul style="list-style-type: none"> • Add suitable amount of oil to the bottle or replace bottle. • Remove oil. Do not allow oil level to exceed neck of bottle. • Press diffuser head down firmly into machine body to ensure it is securely attached. • Remove diffuser head from bottle and ensure dip tube is securely attached. • Remove diffuser head from bottle and reposition diffuser head or dip tube. • Refer to Maintenance instructions. • Follow Accidental Leakage instructions.

SPECIFICATIONS - MODEL 89

Dimensions	75.4mm (d) x 121.6mm (h)	Material	PP
Weight	Approx. 320g	Noise	<40dB
Power (USB-C Cable)	Input: DC 5V 600mA Power: 3W Length of USB Cable: 1.5m	LED Light	9 Colours
Lithium Battery	2000mAh	Oil Capacity	10/15mL
Timer	3 settings: 1. 10s on/60s off 2. 10s on/120s off 3. 5s on/150s off	Mist Capacity	0.03-0.1mL/h
Applicable Area	10m ² / 30m ³	Accessories	1 USB-C Cable 1 Operating Manual 2 Glass Bottles

1 YEAR WARRANTY

This product has been produced with the greatest care for normal, household use. Following directions carefully will ensure dependable operation. If you experience unsatisfactory operation or are dissatisfied with your Bosisto's Simply Oil Waterless Diffuser (Model 89) please contact our friendly Customer Service team at FGB Natural Products.

Modification to the product by the consumer or failure to follow the manufacturer's operating instructions will void the warranty.

If repair is required under the warranty period, the product should be returned with proof of purchase.

The purchaser assumes responsibility for the proper care and use of the product in accordance with the online Operating Manual. The purchaser or user must make his or her judgement as to when to use the product and the length of use. The online operating manual is your guide to safe, efficient operation.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law 2011. You are entitled to a replacement of the faulty unit refund for a major failure.

For warranty claims please call 1800 655 841 or contact us at bosistos.com.au

FGB Natural Products Felton Grimwade & Bosisto's Pty. Ltd.
61-81 Clarinda Road (PO Box 74), Oakleigh South, VIC 3167, Australia
Website www.bosistos.com.au Free Call 1800 655 841