



Foundations®

580608 Wall Seat Installation Instructions

Thank you for purchasing a quality Foundations® product. Our goal is 100% consumer satisfaction! If you are not satisfied for any reason or if you have questions regarding your Wall Seat or installation, please contact our customer service team at 1-877-716-2757. Please DO NOT contact your distributor or reseller as we are better prepared to assist you.

Americans with Disabilities Act (ADA) Compliance



- 4.2.5 Forward Reach
- 4.2.6 Parallel Approach
- 4.4.1 Maximum Protruding Objects
- 4.27.4 Operation
When properly installed

The Foundations® Wall Seat is a child seat for use in commercial applications under the following conditions:

- For use with children up to 50 lbs. (23 kg).
- The seat is properly mounted to a wall and properly maintained.







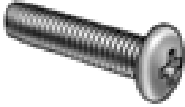

WARNING

- **The Failure to follow these warnings and the installation instructions could result in serious injury or death.**
- **The enclosed hardware is only for through-wall mounting on a 1 in. (25 mm) thick partition.**
- **The Wall Seat is no stronger than the anchors or walls to which it is attached.**
- **Contact an architect or building contractor for mounting on other wall construction.**
 - **Mount so bottom of Wall Seat is approximately 20-1/2 in. (520 mm) and top hole is 33 in. (840 mm) Above Finished Floor (AFF).**
 - **Each anchor must be capable of supporting a load of more than 75 lbs. (35 kg).**
- **All 4 screw locations MUST be used for safe installation.**
- **Check mounting hardware at least once a month to ensure screws are tightly fastened.**
- **DO NOT discard these instructions.**

Message to Installer:

- Adult installation required.
- Read all instructions before installing Wall Seat and placing into service.
- Unpack and identify all parts included before starting installation.
- Inspect Wall Seat for any freight damage after unpacking and before installation.
- Make sure there is adequate clearance in front of and to the side of the Wall Seat for safe operation and use.
- Never mount to a door.

PARTITION WALL INSTALLATION

| Tools Required | | Supplied Installation Hardware | |
|---|---|---|---|
|  |  | Part Description | Quantity |
| Level | Tape Measure | A - 1/4 -20 x 9/16 in. T-Nuts | 4 |
|  |  | B - 1/4 in. Flat Washers | 4 |
| Power Drill | 3/8 in. (9.5 mm) Drill Bit | C - 1/4 -20 x 1-1/4 in. Machine Screws | 4 |
| | | D - 1-1/4 in. Caps | 4 |
| | |  |  |
| | |  |  |

1. Select the desired installation location.
2. Confirm partition wall is structurally sound and can support the wall seat with a child weighing 50 lb. (23 kg).
3. Measure 33 in. (840 mm) Above Finished Floor (AFF) and mark the partition for the top left attachment hole. (See **Fig. 1**)
4. Using a level and measuring tape, mark the partition wall for the remaining three (3) holes as seen in **Fig. 1**.
5. Align Top Left hole of Wall Seat with mark on Partition Wall and double check alignment of all marks.
6. After setting the Wall Seat down, use a power drill and 3/8 in. (9.5 mm) bit to drill 4 holes through partition at marked mounting points.
7. From opposite side of Partition Wall, insert the 4 T-Nuts into mounting holes and press until they are flush to the surface of the partition.
8. Align holes in Wall Seat with drilled holes and secure top left corner of wall seat to partition using a machine screw and flat washer into the T-nuts. (**See Fig. 2**) Do not tighten at this point.
9. Continue to secure the 3 remaining corners using the machine screws and flat washers into the T-nuts. (See **Fig. 2**)
10. After all screws are in place, tighten all screws.
11. Snap the 4 caps into the mounting holes the in Wall Seat. Check that all caps are fully seated into the Wall Seat.
12. Operate seat 3 or 4 times to ensure proper function and installation.

Fig. 1

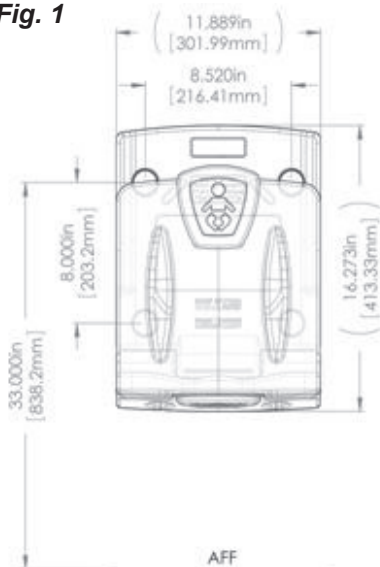


Fig. 2
(Seat belt hidden for clarity)

