

- Once you have activated the Bluetooth on your device, search for and select the name "MT Sounds" from the list of available pairing options. (To avoid signal interference, please turn off other Bluetooth devices.)
- Once the speaker is paired with the desired device, it will remember the device and pair automatically during future use.

#### HOW TO USE NIGHT LIGHT FUNCTION:

- There is no need to first turn on the device. Simply press the Night Light Button to start using it.
- A single press will initiate the Night Light mode.
- Press the button a second time to switch to Breath Light mode.
- Press the button a third time to turn off the light.

#### CHARGING THE SPEAKER:

- The speaker comes with a built-in rechargeable battery. Before use, fully charge the battery with the supplied cable.
- Connect the USB cable to a computer USB port and the Micro USB plug to the charging port of the speaker. The red LED light (behind the micro USB port) will illuminate to indicate that the speaker is charging.
- It takes approximately 4-5 hours to fully charge the battery. Once fully charged, the red LED light will turn off.

#### LIMITED LIFETIME WARRANTY

Your Medic Therapeutics White Noise Sound Machine is backed by a limited lifetime manufacturer's warranty. Medic Therapeutics will repair or replace your device at any time should it fail due to a defect in material or workmanship, subject to the certain limitations.

This limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, impact, negligence, or normal wear and tear. Should you discover your Medic Therapeutics White Noise Sound Machine is not functioning properly, please send your device to our repair center for evaluation. If your product cannot be repaired or serviced, we will reserve the right to change it for a similar or newer model.

Please note that a flat rate of \$35.00 will be charged to cover a service evaluation fee and return shipping of your device. All warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your device, proof of purchase, and a check or money order in the amount of \$35.00 made out to Medic Therapeutics to:


**Address:**  
Medic Therapeutics Service Center  
3069 Taft Street  
Hollywood, FL 33021

**Contact:**  
warranty@medictherapeutics.com




## WHITE NOISE SOUND MACHINE WITH BLUETOOTH SPEAKER

### OPERATING MANUAL

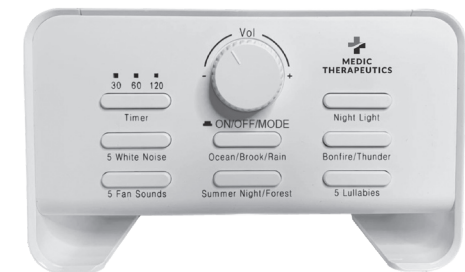

Please read all instructions carefully prior to use and retain this manual for future use and reference.

#### FUNCTION BUTTONS:

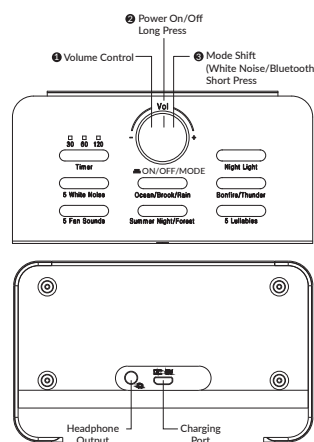

#### SPECIFICATIONS:

Product Size:	135*58*82mm	Night light:	Steady Light / Breathing Light
Main Functions:	White Noise Sleep Aid, Bluetooth Speaker	Bluetooth Version:	5.0
Number of Audio Sources:	22	Bluetooth Operating Distance:	Up to 33 feet
Timer Modes:	30 minutes, 60 minutes, 120 minutes	Battery:	Built-in rechargeable 1200mah Lithium

\*Charging cable is included.

#### ABOUT:

White noise- any noise that has a flat spectral density -is a combination of all audible frequencies. This makes white noise suitable as a way to help mask distracting sounds, promoting better concentration, rest and sleep.

This device features a variety of white noise sounds, including:

- White Noise (standard)
- Ocean/Brook/Rain
- Bonfire/Thunder
- Fan Sounds
- Summer Night/Forest
- Lullabies

This device also functions as a Bluetooth speaker, allowing you to play any song or audio track of your choice.

#### SAFETY INSTRUCTIONS:

- Keep the unit away from source of heat, direct sunlight and corrosive liquids, dust, lint,... etc..
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to the electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not puncture or harm the exterior surface of the product in any way.
- This product is not a toy. Keep out of reach of children.
- Do not use the unit excessively or at excessive volume levels; doing so may damage hearing.

#### HOW TO USE THE WHITE NOISE SOUND FUNCTION:

- Press and hold the On/Off/Mode knob to turn on the device. It will enter into a default mode- "White Noise Mode". If the machine is on Bluetooth Mode, quickly press the On/Off/Mode knob to shift modes and return to White Noise Mode.
- There are a total of 22 different audio sources among the 6 different sound option buttons- White Noise, Ocean/Brook/Rain, Bonfire/Thunder, Fan Sounds, Summer Night/Forest and Lullabies. For each sound option button, click the button once to play the following audio track.
- The device will remember the last audio track you played. If the device is turned off and then back on, the device (when set to White Noise Mode) will resume playing the last audio track that was played prior to being shut off.

#### HOW TO USE THE BLUETOOTH SPEAKER FUNCTION:

- Please ensure that the device is turned on. If the device is set to White Noise Sound Mode, quickly press the On/Off/Mode knob to switch to Bluetooth Mode.
- This will prompt the machine to say: "Bluetooth Mode".
- Place your music device and the machine within the operating distance- no more than 33 feet apart.
- Ensure that the Bluetooth function is enabled on your phone or other Bluetooth device.