



TOMAHAWK


TRT46V
RIDE-ONPOWER TROWEL

Parts Manual

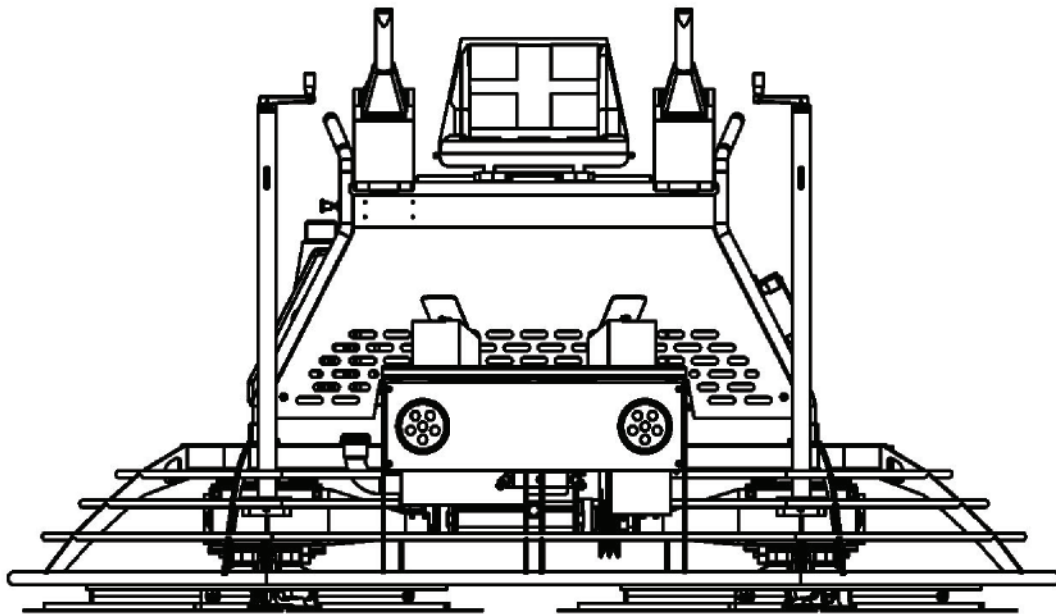

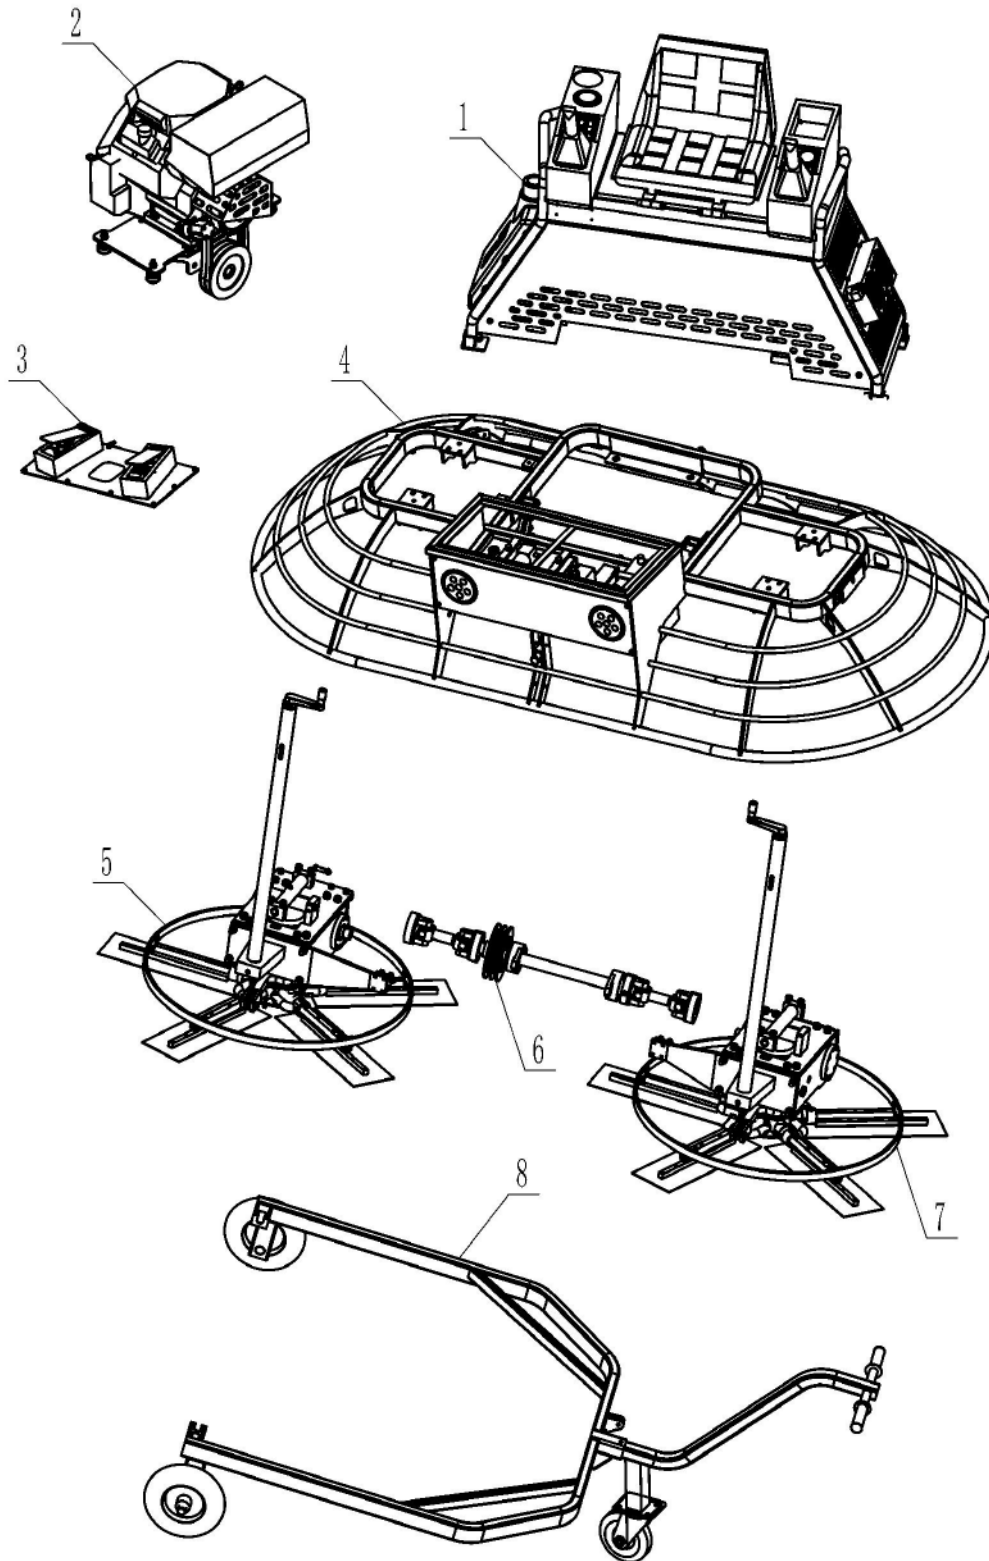


ITEM NO.	PART NO.	QTY	DESCRIPTION
1	B070	1	Frame Assy.
2	B071	1	Engine Assy.
3	B072	1	Control Pedal Assy.
4	B073	1	Guard Ring Assy.
5	B074	1	Right Working System Assy.
6	B075	1	Driving System Assy.
7	B076	1	Left Working System Assy.
8	B077	1	Trolley Wheel Assy.

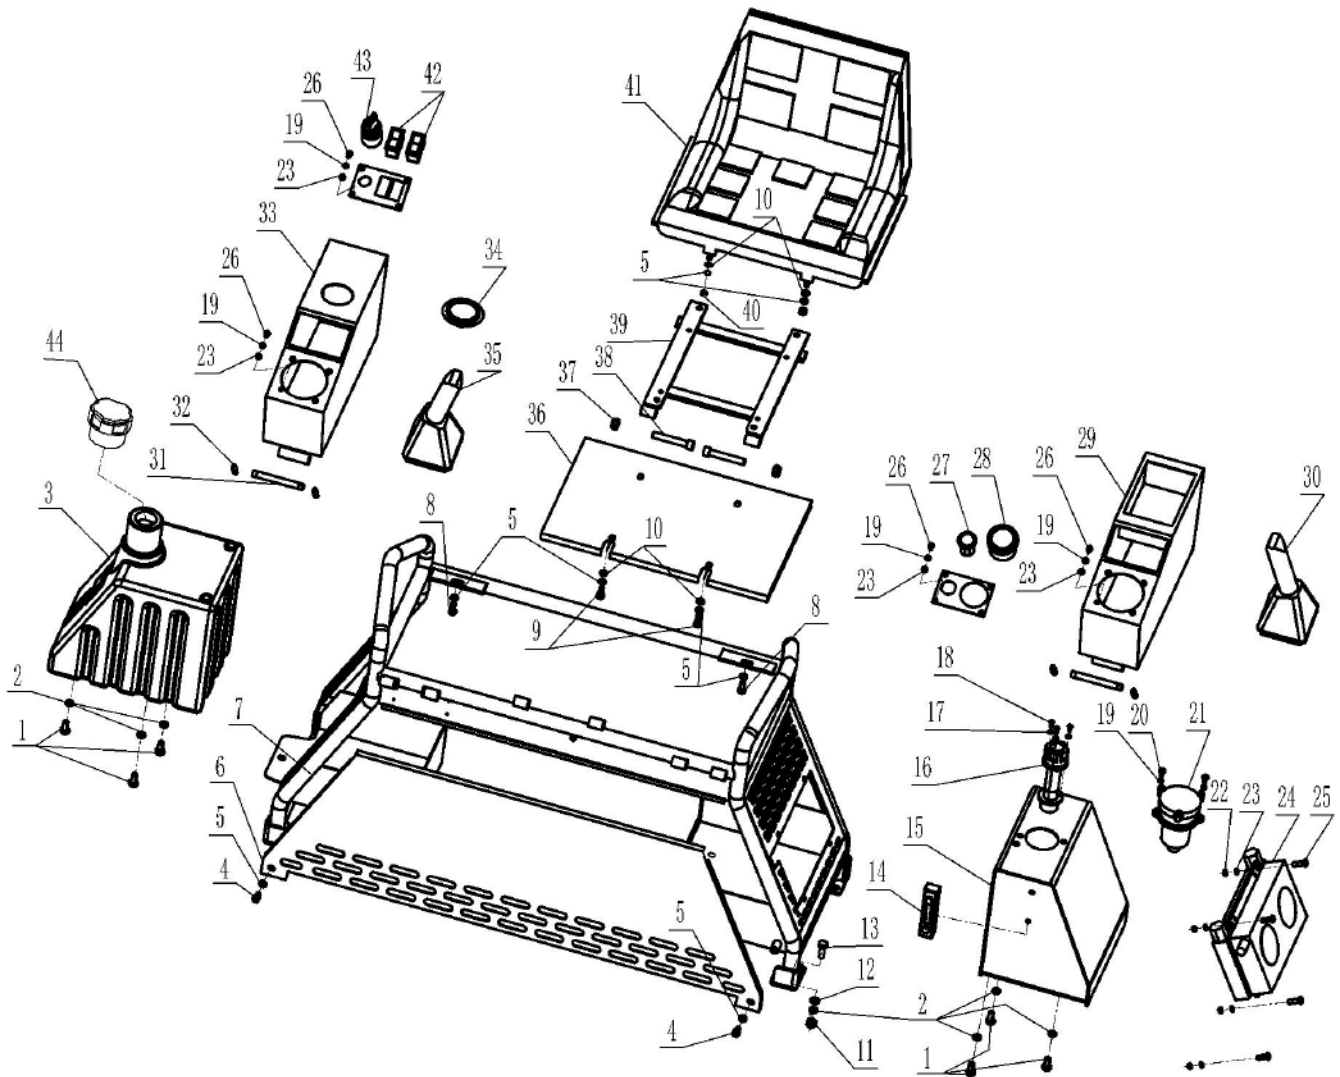


Ride-on Power Trowel Parts List**Frame Assy.**

ITEM NO.	PART NO.	QTY	DESCRIPTION
1	GB011020	6	Hex Head Screw, M10x20
2	GB1310	10	Spring Washer
3	WY673	1	Oil Tank
4	GB020820	2	Socket Head Screw, M8x20
5	GB1308	12	Spring Washer
6	L0221	1	Cover
7	L0220	1	Frame
8	GB010820	2	Hex Head Screw, M8x20
9	GB010816	4	Hex Head Screw, M8x16
10	GB1208	8	Washer
11	GB1010	4	Lock Nut, M10
12	GB1210	4	Washer
13	GB011030	4	Hex Head Screw, M10x30
14	WB141	1	Level Gauge
15	L0222	1	Welding Cover
16	WB142	1	Hydraulic Air Filter
17	GB1205	3	Washer
18	GB150510	3	Screw
19	GB1306	18	Spring Washer
20	GB010620	2	Hex Head Screw, M6x20
21	WB154	1	Return Oil Filter
22	GB1006	4	Lock Nut, M6
23	GB1206	20	Washer
24	WB121	1	Cooler
25	GB380625	4	Socket Head Screw, M6x25
26	GB380616	4	Socket Head Screw, M6x16
27	WB093	1	USB Connector
28	WB078	1	Timing & Volt Meter
29	L0223	1	Handle Holder, Left
30	WB174	1	Handle, Left
31	L0240	2	Pin Shaft
32	GB2612	4	Retaining Ring
33	L0224	1	Handle Holder, Right
34	WB170	1	Pressure Gage
35	WB175	1	Handle, Right
36	L0225	1	Heat Shield
37	GB1012	2	Lock Nut, M12
38	GB021275	2	Socket Head Screw, M12x75
39	I0226	1	Hinger Frame
40	GB0808	4	Hex Nut, M8
41	WY664	1	Seat
42	WY077	2	Light Switch
43	WB125	1	Key Switch
44	WB151	1	Oil Tank Cap With Lock

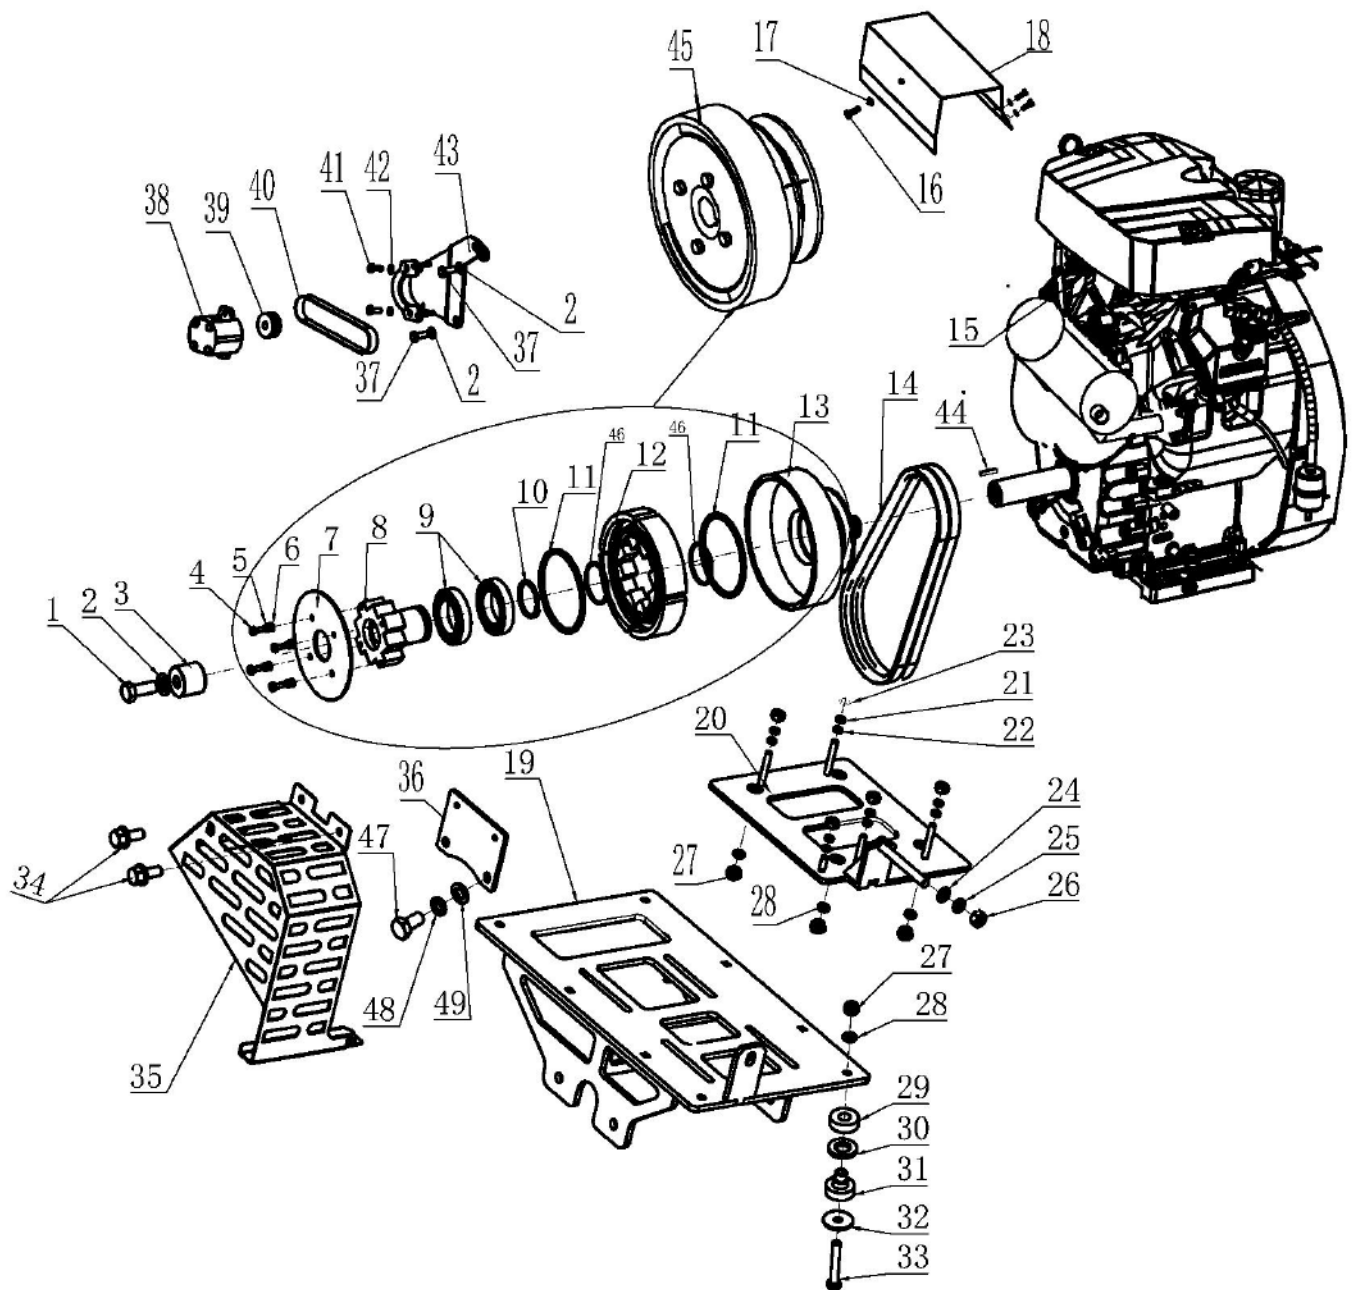


Ride-on Power Trowel Parts List**Engine Assy.**

ITEM NO.	PART NO.	QTY	DESCRIPTION
1	GB01112038-Q2	1	Hex. Screw
2	GB1312	4	Spring Washer
3	L0227	1	Retaining Ring
4	GB010616	4	Hex Screw, M6x16
5	GB1306	6	Spring Washer
6	GB1206	6	Washer
7	L0228	1	Cover
8	L0241	1	Bearing Sleeve
9	ZC6010	2	Bearing
10	GB2650	1	Retaining Ring
11	WB029	2	Tension Spring
12	L0242	4	Counter Weight Block
13	L0229	1	Outer Shell
14	WB037	2	Belt
15	DB613477	1	Engine
16	GB010620	3	Hex Screw, M6x20
17	GB1306	3	Spring Washer
18	L0230	1	Protection Cover
19	L0231	1	Bracket
20	L0232	1	Engine Mounting Plate
21	GB1208	5	Washer
22	GB1308	5	Spring Washer
23	GB0808	5	Hex Nut, M12
24	GB1212	1	Washer
25	GB1312	1	Spring Washer
26	GB0812	1	Hex Nut, M12
27	GB1010	8	Lock Nut, M10
28	GB1210	8	Washer
29	WB140	4	Rubber Shock
30	L0244	4	Washer
31	WB140	4	Rubber Shock
32	WB140	4	Washer
33	GB011065	4	Hex Screw, M10x55
34	GB200820	2	Hex Screw, M8x20
35	L0233	1	Belt Guard
36	L0234	1	Inner Plate
37	GB01111420-Q2	3	Hex Screw
38	WB157	1	Gear Pump
39	L0243	1	Pulley
40	WB155	1	Belt
41	GB010825	2	Hex Screw, M8x25
42	GB1308	4	Spring Washer
43	L0235	1	Oil Pump Bracket
44	L0295	1	Key
45	B048	1	Clutch
46	WB030	2	Tension Spring
47	GB01111420-Q2	2	Hex Screw
48	GB1312	2	Spring Washer
49	GB1212	2	Washer

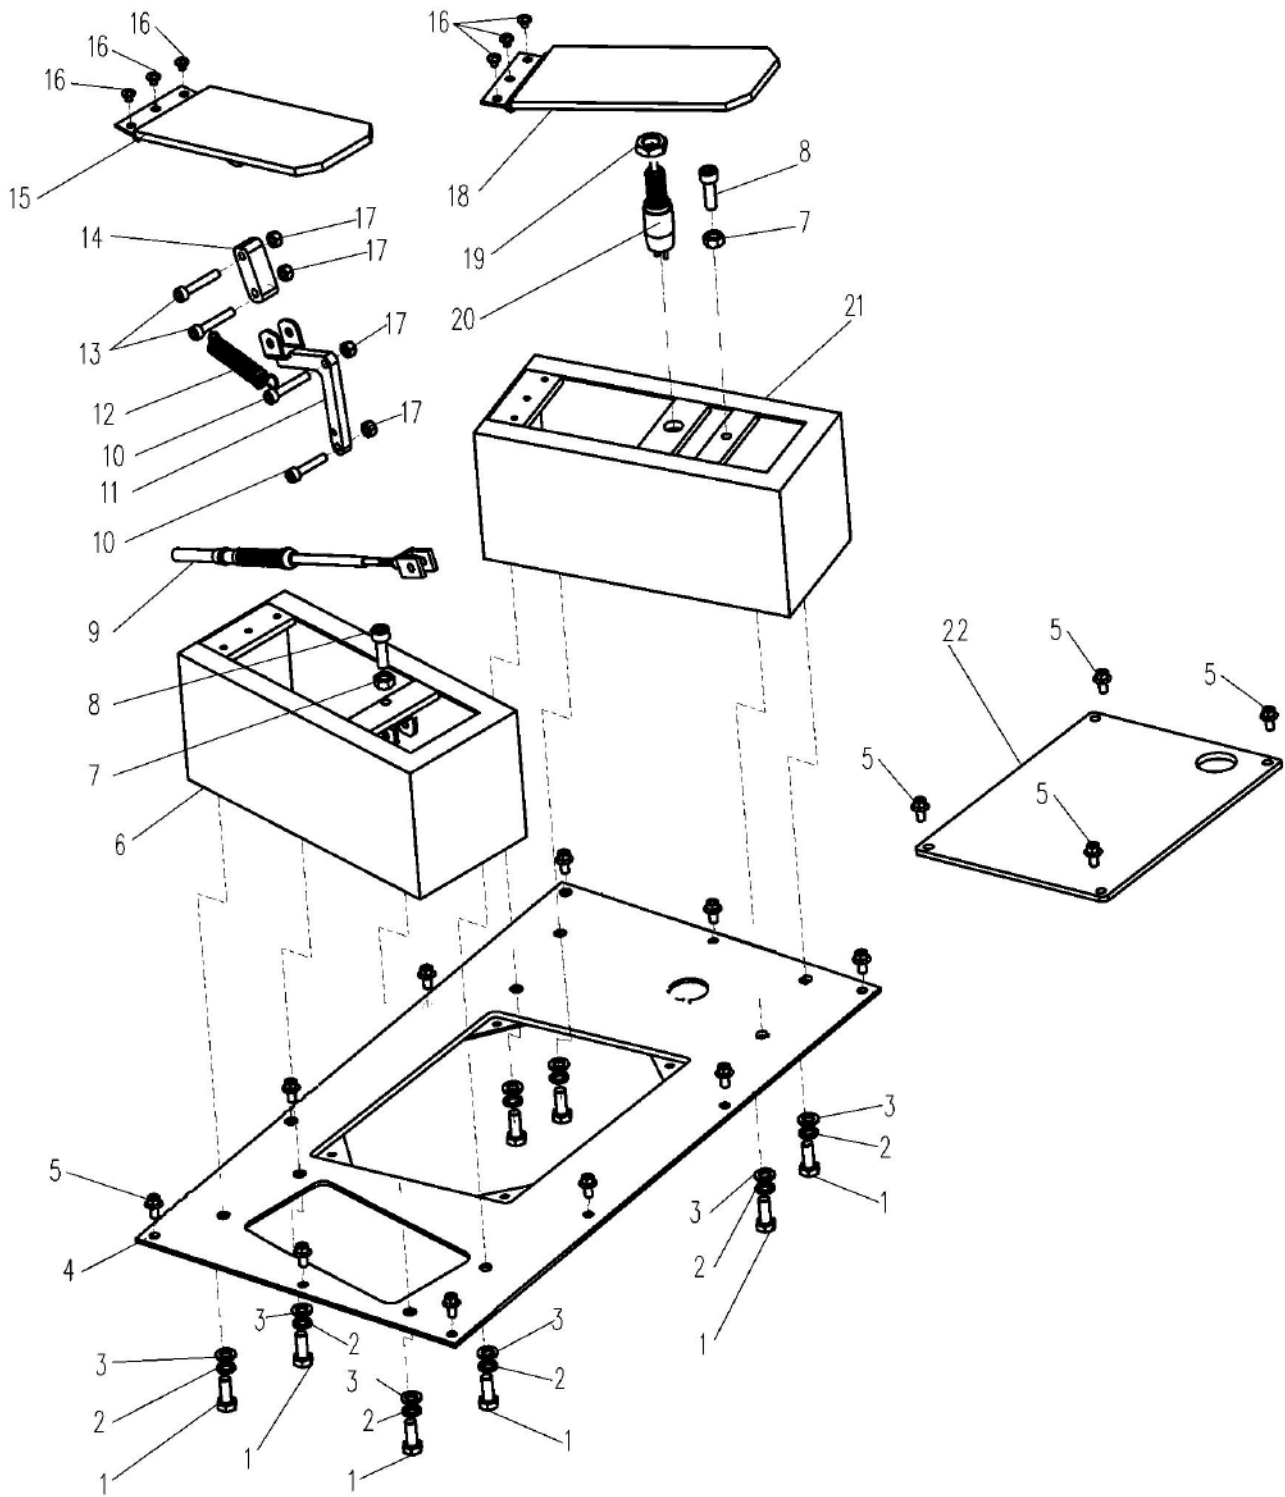


Ride-on Power Trowel Parts List**Control Pedal Assy.**

ITEM NO.	PART NO.	QTY	DESCRIPTION
1	GB010820	4	Hex Screw, M8x20
2	GB1308	4	Spring Washer
3	GB1208	4	Washer
4	L0236	1	Cover, Front
5	GB200612	14	Screw, M6x12
6	L0237	1	Pedal, Right
7	GB0808	1	Hex Nut, M8
8	GB020825-Q1	1	Socket Head Screw, M8x25
9	WB117	1	Throttle Cable
10	GB020635	2	Socket Head Screw, M6x35
11	L0023	1	Hook
12	WB055	1	Tension Spring
13	GB020635	2	Socket Head Screw, M6x35
14	L0022	1	Spacer Block
15	L0021	1	Pedal, Throttle
16	GB150525	6	Screw, M5x25
17	GB1006	4	Lock Nut, M6
18	L0024	1	Pedal, Flameout
19	GB0812	1	Hex Nut, M8
20	WB098	1	Engine Stop Switch
21	L0238	1	Pedal, Left
22	L0239	1	Access Hole Cover

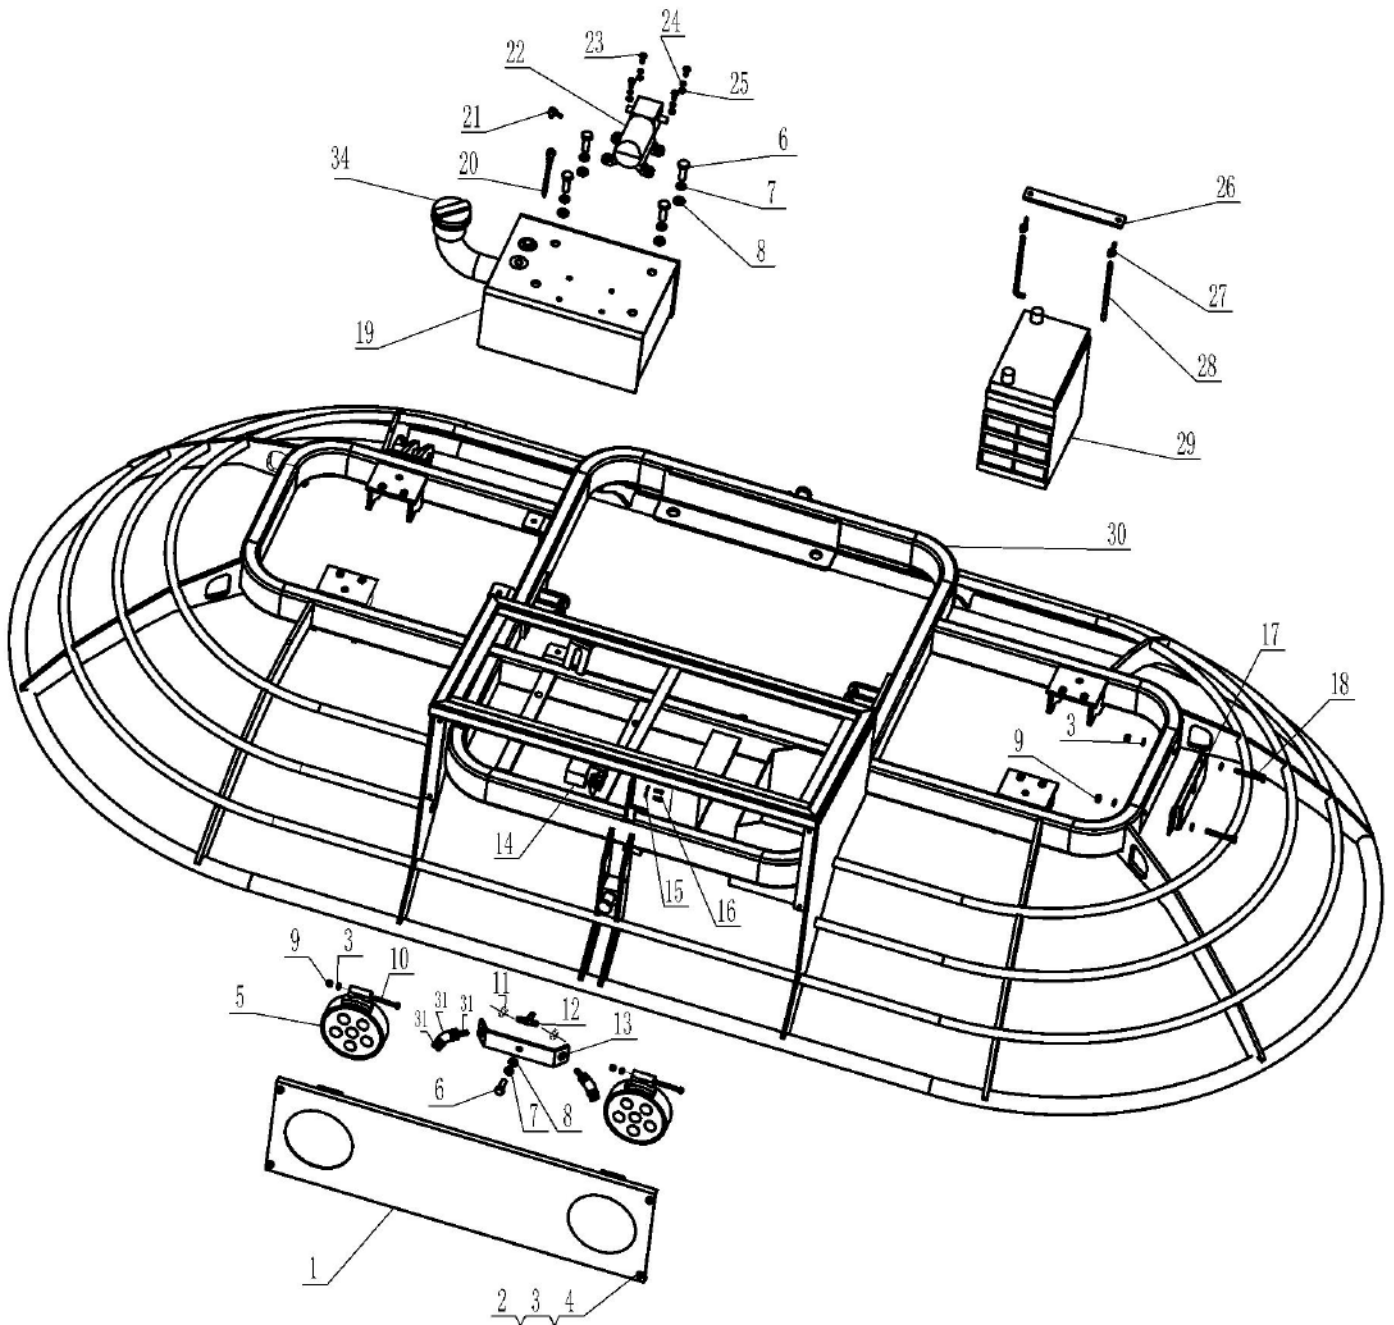


Ride-on Power Trowel Parts List**Guard Ring Assy.**

ITEM NO.	PART NO.	QTY	DESCRIPTION
1	L0245	1	Label Plate
2	GB380616	4	Socket Head Screw, M6x16
3	GB1306	6	Spring Washer
4	GB1206	10	Washer
5	WB226	2	LED Light
6	GB010825	5	Hex Screw, M8x25
7	GB1308	5	Spring Washer
8	GB1208	5	Washer
9	GB1006	4	Lock Nut, M6
10	GB010640	2	Hex Screw, M6x40
11	GB291016	6	Hose Clamp
12	WB064	1	Tee Joint
13	L0246	1	Connecting Plate
14	WB115	1	Copper Valve
15	GB1304	2	Spring Washer
16	GB150410	2	Screw, M4x16
17	L0247	1	Plastering Trowel Holder
18	GB010650	2	Hex Screw, M6x50
19	L0248	1	Water Tank
20	WB106	1	Screw, M10x210
21	WB087	1	Elbow Joint
22	WB069	1	Water Pump
23	GB150510	4	Screw
24	GB1305	4	Spring Washer
25	GB1205	4	Washer
26	L0249	1	Battery Pressing Plate
27	GB0816-Q7	2	Wing Nut, M6
28	L0250	2	Battery Lifting Screw
29	WY678	1	Battery
30	L0251	1	Guard Ring
31	WB043	2	Customized Joint
32	WB044	2	Connector
33	WB042	2	Atomizing Nozzle
34	WB152	1	Water Tank Cap

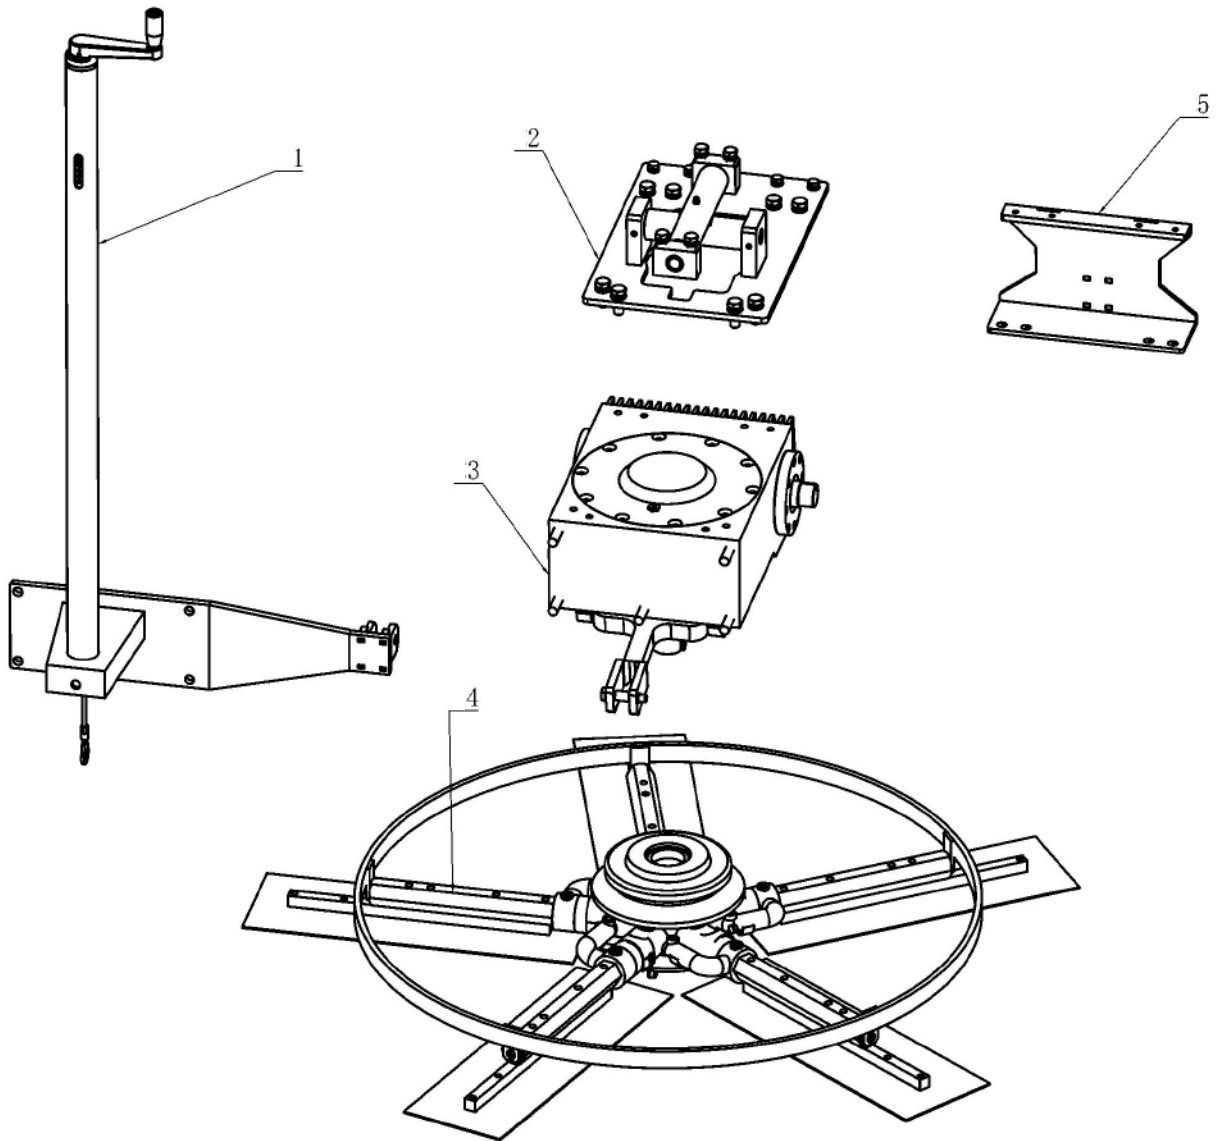


Ride-on Power Trowel Parts List**Right Working System Assy.**

ITEM NO.	PART NO.	QTY	DESCRIPTION
1	B079	1	Pitch Control Lever Assy., Right
2	B080	1	Connecting Frame Assy., Right
3	B081	1	Gearbox Assy., Right
4	B082	1	Spider Assy. with Bearing, Right
5	B083	1	ANGLE GP-CYLINDER

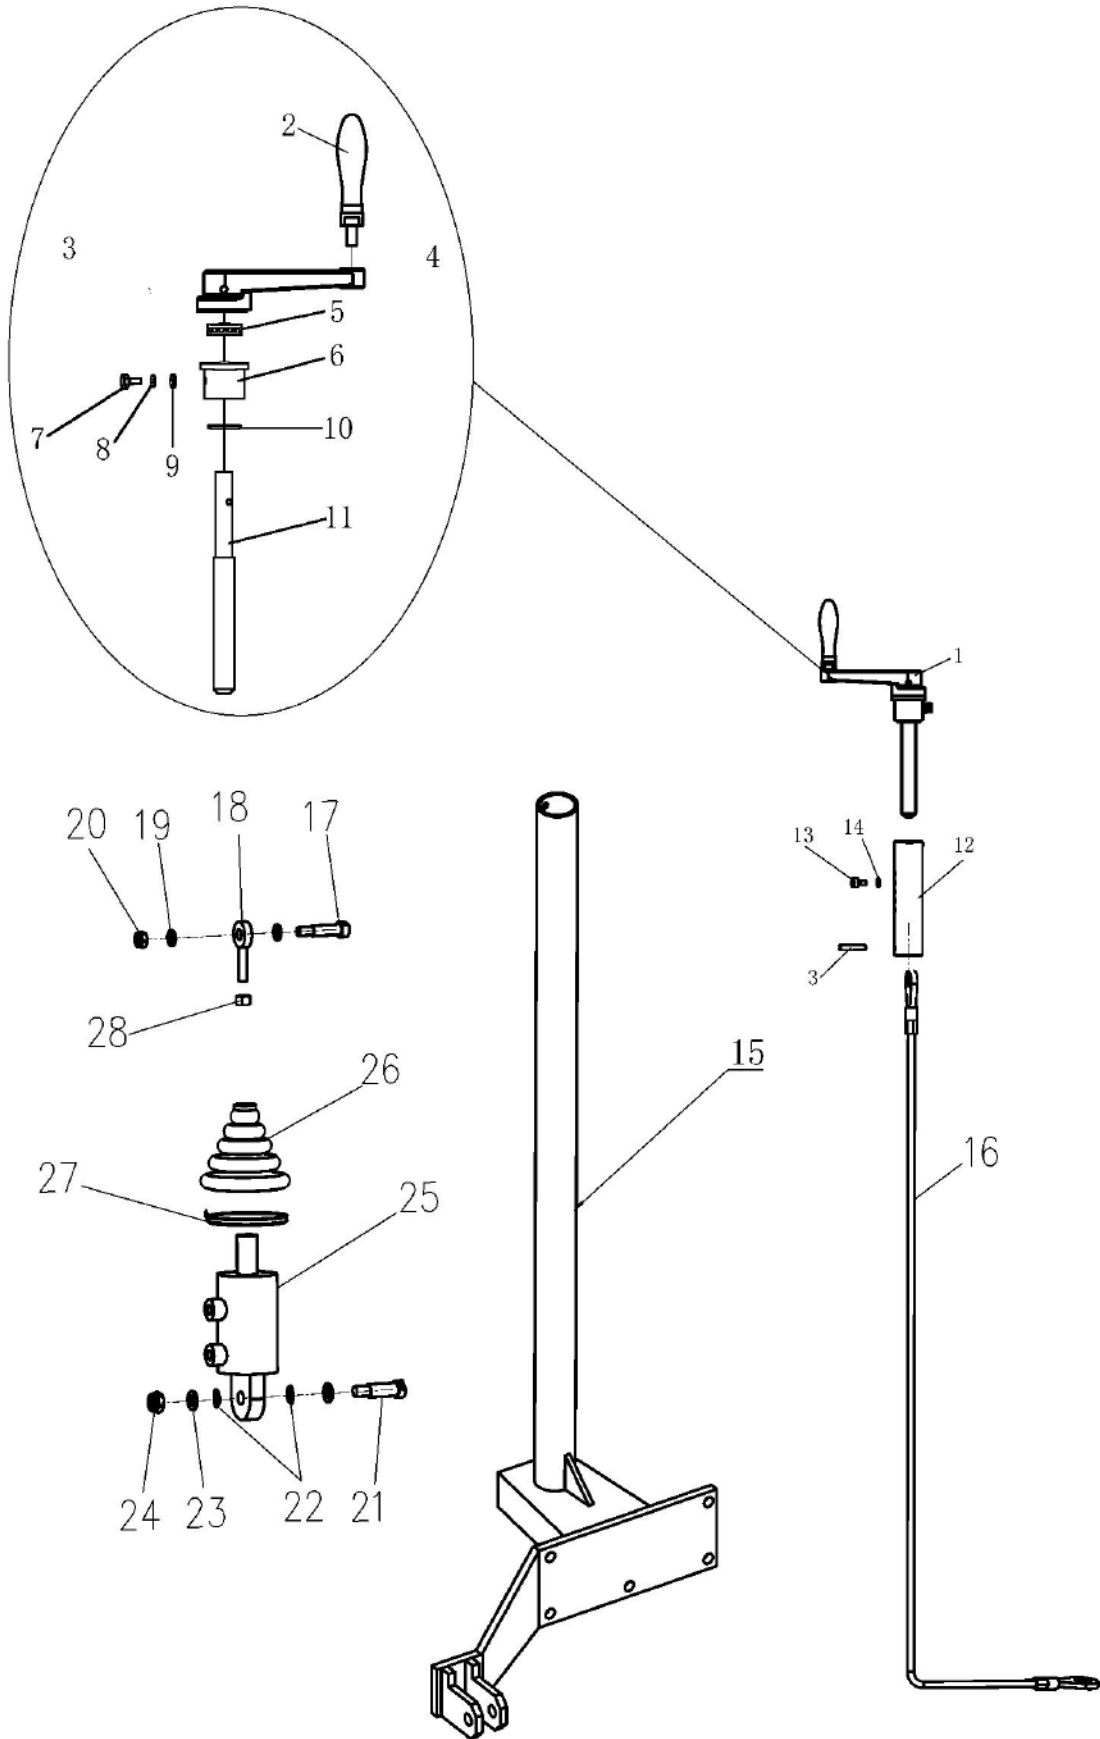


Ride-on Power Trowel Parts List**Pitch Control Lever Assy., Right**

ITEM NO.	PART NO.	QTY	DESCRIPTION
1	B006	1	Handle Assy.
2	WB039	1	Handle
3	GB240530	2	Pin
4	L0030	1	Handle
5	ZC51103	1	Bearing
6	L0031	1	Bearing Holder
7	GB010612	1	Hex Screw, M6x12
8	GB1306	1	Spring Washer
9	GB1206	1	Washer
10	GB1215	1	Washer
11	L0032	1	Lead Screw
12	L0294	1	Regulation Sleeve
13	GB020608	1	Socket Head Screw, M6x8
14	GB1306	1	Spring Washer
15	L0253	1	Bending Plate, Right
16	WB092	1	Cable
17	WB132	1	Screw, M8x58
18	ZI10A	1	Bearing
19	GB1208	2	Washer
20	GB1008	1	Lock Nut, M8
21	WB133	1	Screw, M10x61
22	L0293	2	Cylinder Liner
23	GB1210	2	Washer
24	GB1010	1	Lock Nut, M10
25	WB166	1	Cylinder
26	WB150	1	Dust Cap
27		1	Hose Clamp
28	GB0810	1	Hex Nut, M10

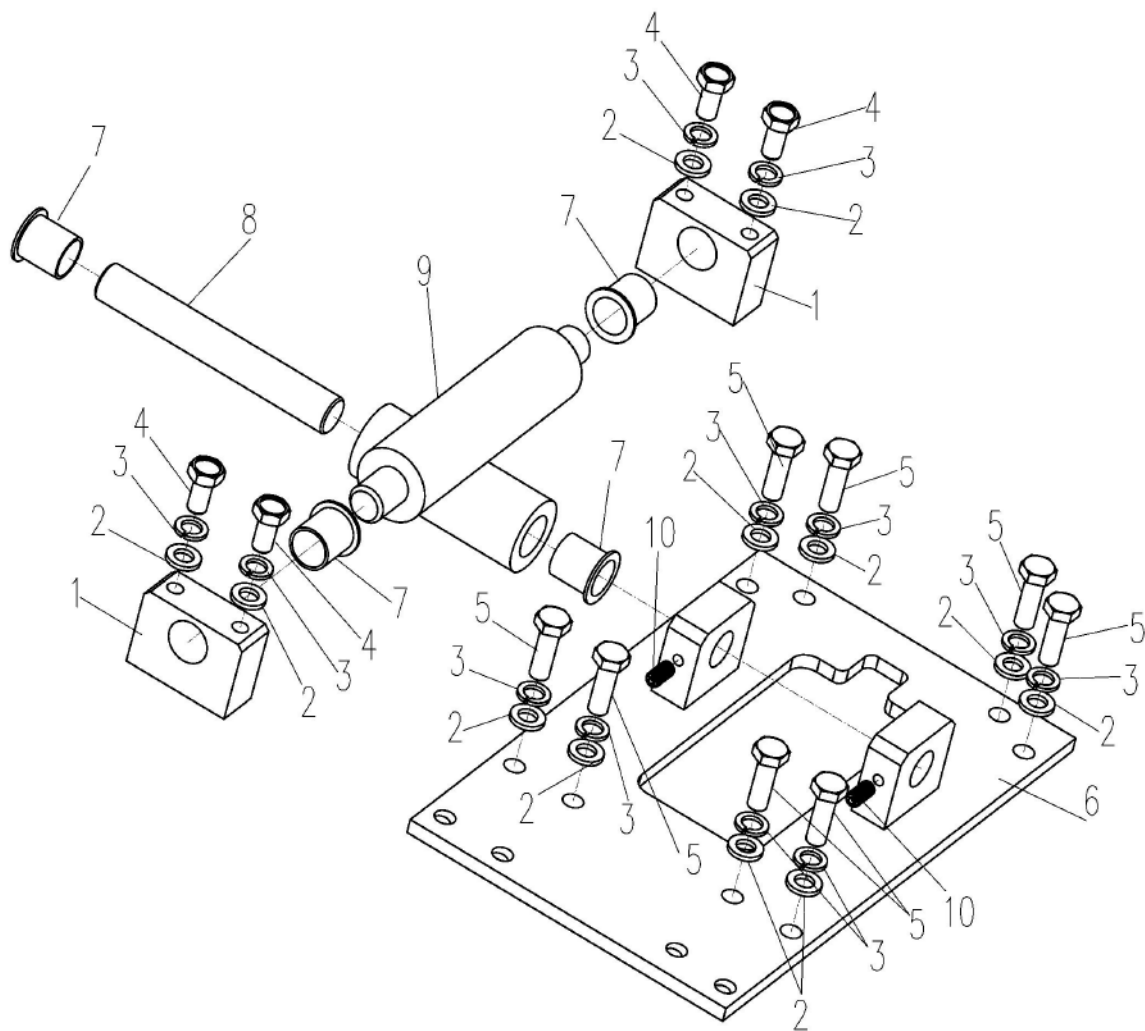


ITEM NO.	PART NO.	QTY	DESCRIPTION
1	I0276	2	Aluminum Fixing Block
2	GB1210	12	Washer
3	GB1310	12	Spring Washer
4	GB011035	4	Hex Screw, M10x35
5	GB011030	8	Hex Screw, M10x30
6	L0254	1	Connecting Frame, Right
7	WB094	4	Copper Sleeve
8	L0275	1	Shaft
9	L0255	1	Shaft
10	GB050816	2	Socket Head Screw, M8x16

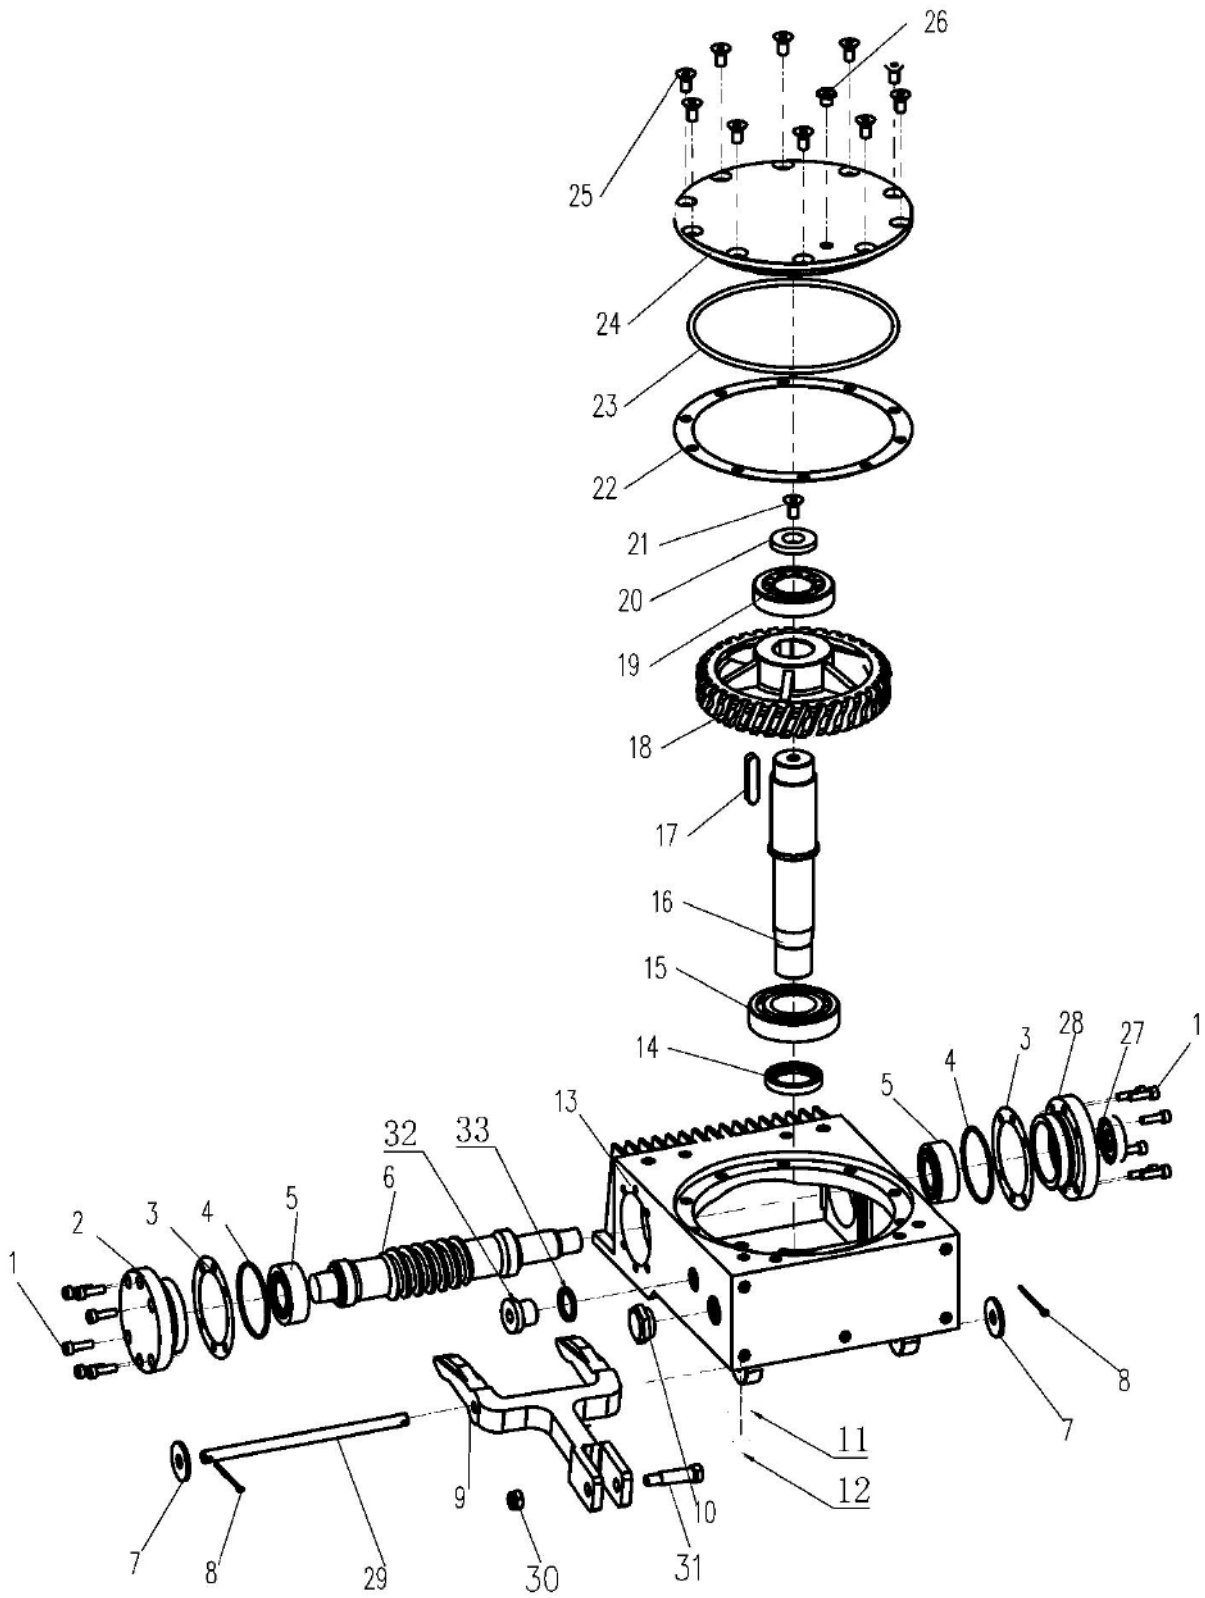


Ride-on Power Trowel Parts List**Gearbox Assy., Right**

ITEM NO.	PART NO.	QTY	DESCRIPTION
1	GB020620	12	Socket Head Screw, M8x20
2	L0256	1	Bearing Cover
3	WB629	2	Washer
4	GB258031	2	Rubber Seal
5	ZN32207	2	Bearing
6	WB313	1	Worm, Right
7	GB12103025	2	Washer
8	GB282525	2	Pin
9	L0258	1	Yoke
10	GB312715	1	Oil Gauge
11	GB121802-Q8	1	Copper Washer
12	GB011210-TQ	1	Oil Plug
13	L0259	1	Gearbox Case, Right
14	GB30456509	1	Oil Seal
15	ZN6210	1	Bearing
16	WB314	1	Worm Shaft
17	GB221045	1	Key
18	WB311	1	Worm Gear, Right
19	ZN30209	1	Bearing
20	L0262	1	Washer
21	GB030820	1	Socket Head Screw, M8x20
22	WB630	1	Washer
23	GB25212355	1	Rubber Seal
24	L0263	1	Cap
25	GB030820	10	Socket Head Screw, M8x20
26	GB3210-Q2Q11	1	Air Valve
27	GB30355007	1	Oil Seal
28	L0281	1	Bearing Cover
29	L0277	1	Pin
30	GB1010	1	Lock Nut, M10
31	WB133	1	Screw, M10x61
32	WB626	1	Oil Plug
33	GB182402-Q8	1	Copper Washer
34	L0292	1	

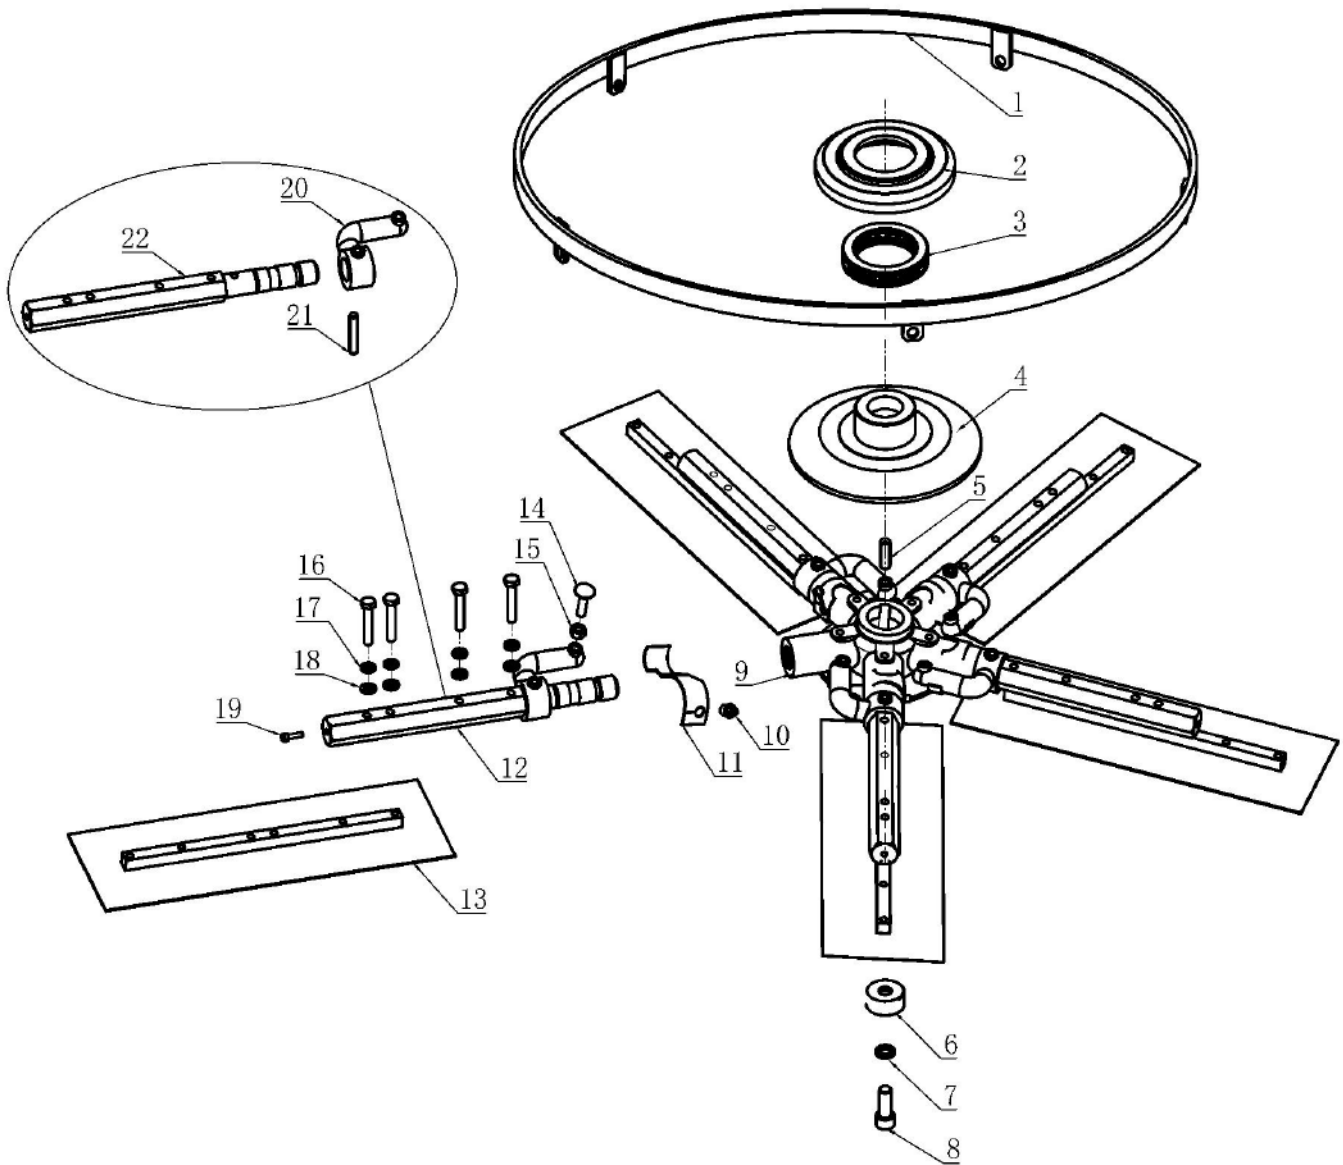


Ride-on Power Trowel Parts List**Spider Assy. with Bearing, Right**


ITEM NO.	PART NO.	QTY	DESCRIPTION
1	L0264	1	Stabilizer Ring
2	L0265	1	Bearing Holder
3	WB279	1	Customized Bearing
4	L0266	1	Blade Lifting Ring
5	GB221035	1	Key
6	L0267	1	Washer
7	GB1312	1	Spring Washer
8	GB021230	1	Socket Head Screw, M12x30
9	L0268	1	Spider Assy., Right
10	GB331001-Q8	5	Grease Fitting
11	L0067	5	Spring, Right
12	L0270	5	Trowel Arm Assy.
13	L0271	5	Finishing Blade
14	GB350830	5	Screw, M8x30
15	GB0808	5	Hex Nut, M8
16	GB010845	20	Hex Screw, M8x45
17	GB1308	20	Spring Washer
18	GB1208	20	Washer
19	GB010850	5	Hex Screw, M8x50
20	L0272	5	Mount, Right
21	GB240840	5	Pin
22	L0273	5	Trowel Arm Extended

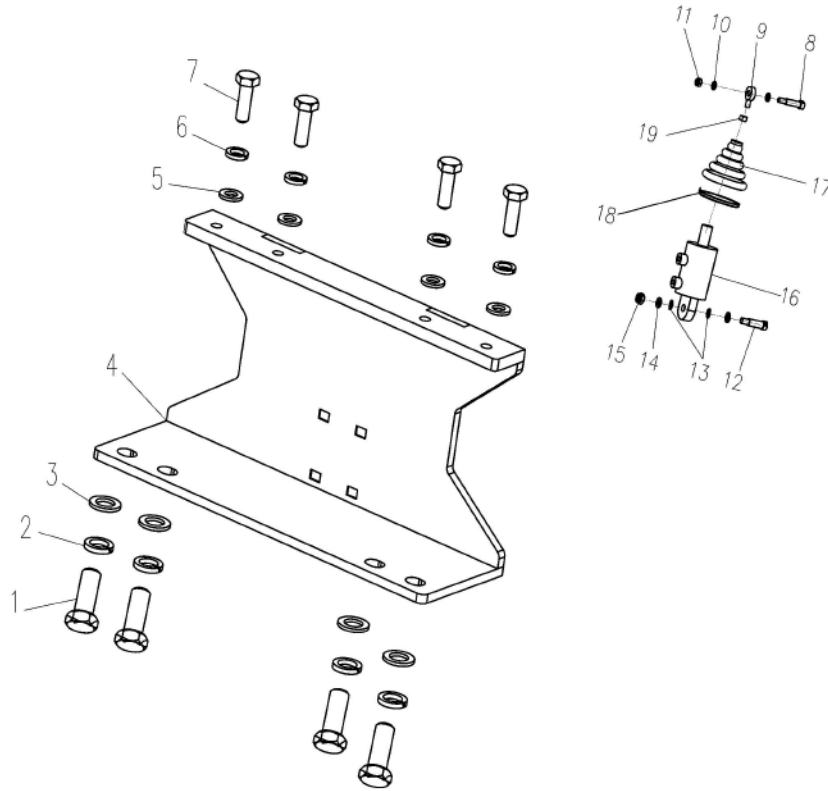

ITEM NO.	PART NO.	QTY	DESCRIPTION
1	GB011030	4	Hex Screw, M10x30
2	GB1310	4	Spring Washer
3	GB1210	4	Washer
4	L0274	1	Oil Cylinder Hanging Angle
5	GB1208	4	Washer
6	GB1308	4	Spring Washer
7	GB010830	4	Hex Screw, M10x30
8	WB132	1	Screw, M8x58
9	ZI10A	1	Bearing
10	GB1208	2	Washer
11	GB1008	1	Lock Nut, M8
12	WB133	1	Screw, M10x61
13	L0293	2	Cylinder Liner
14	GB1210	2	Washer
15	GB1010	1	Lock Nut, M10
16	WB167	1	Cylinder
17	WB150	1	Dust Cap
18		1	Hose Clamp
19	GB0810	1	Hex Nut, M10

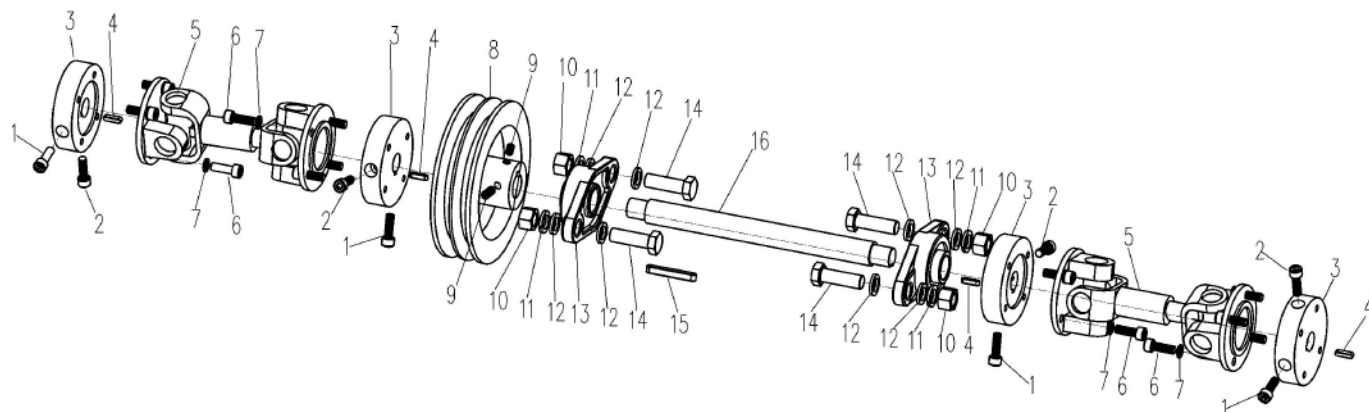


ITEM NO.	PART NO.	QTY	DESCRIPTION
1	GB020820	4	Socket Head Screw, M8x20
2	GB020825	4	Socket Head Screw, M8x25
3	L0278	4	Connecting Flange
4	GB220520	4	Key
5	WB306	2	U-joint
6	GB020825	16	Socket Head Screw, M8x25
7	GB1308	16	Spring Washer
8	L0279	1	Pulley
9	GB050816	2	Socket Head Screw, M8x16
10	GB0814	4	Hex Nut, M14
11	GB1314	4	Spring Washer
12	GB1214	8	Washer
13	ZF207UCFL	2	Bearing Holder
14	GB011440	4	Hex Screw, M14x40
15	GB220860	1	Key
16	WB315	1	Driving Shaft

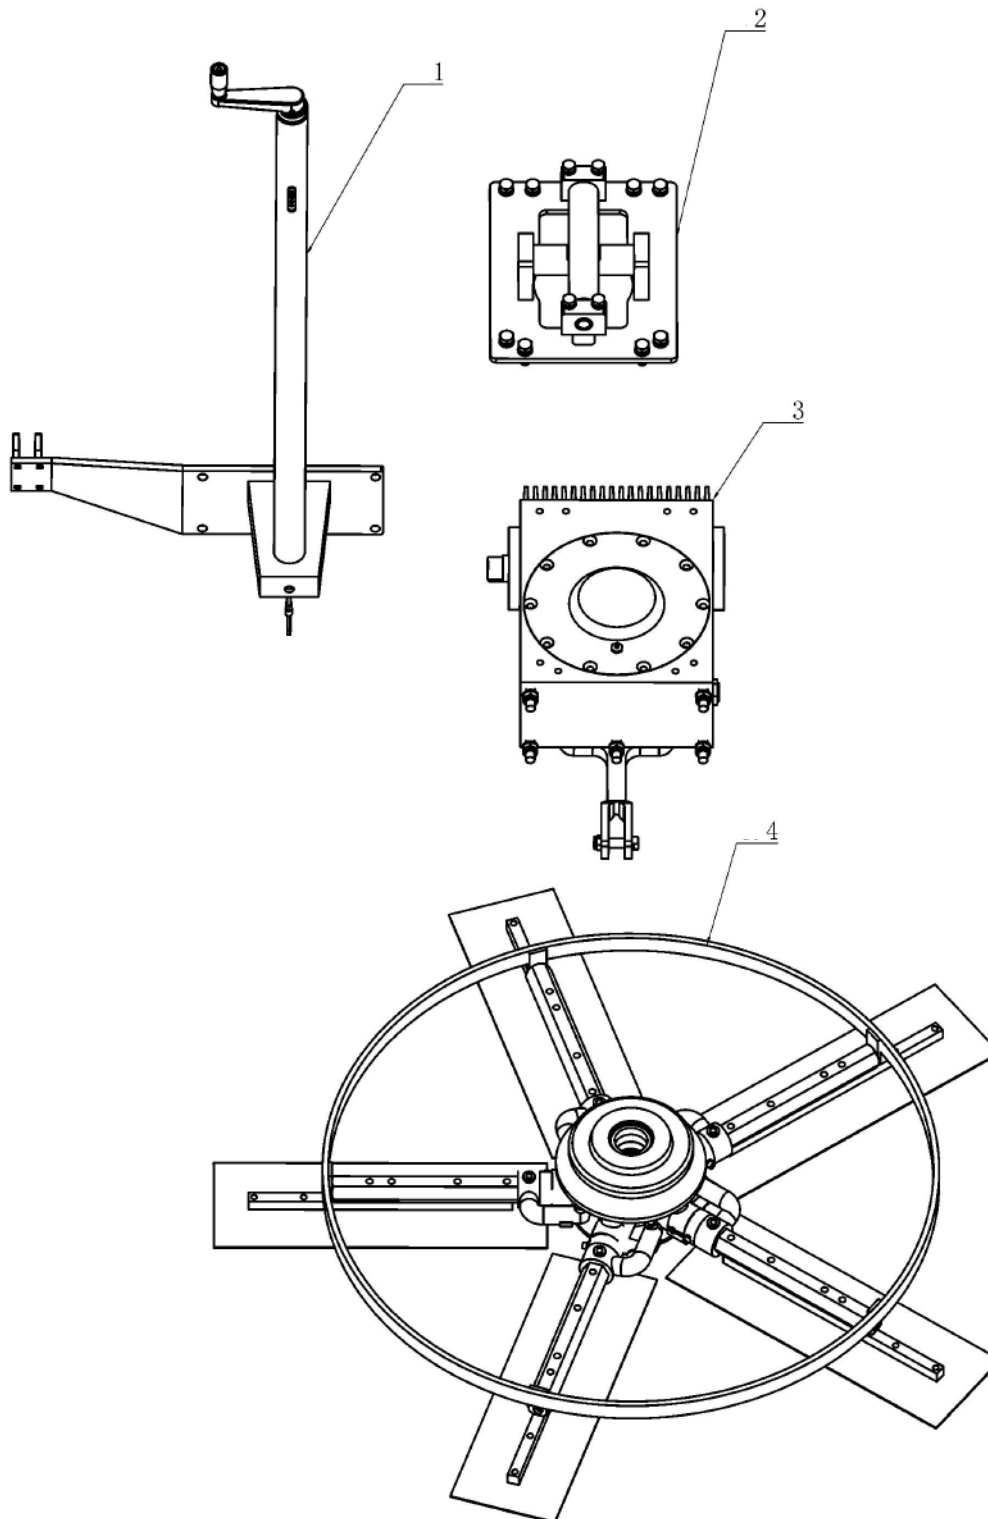


Ride-on Power Trowel Parts List**Left Working System Assy.**

ITEM NO.	PART NO.	QTY	DESCRIPTION
1	B084	1	Pitch Control Lever Assy., Left
2	B085	1	Connecting Frame Assy., Left
3	B086	1	Gearbox Assy., Left
4	B087	1	Spider Assy. with Bearing, Left

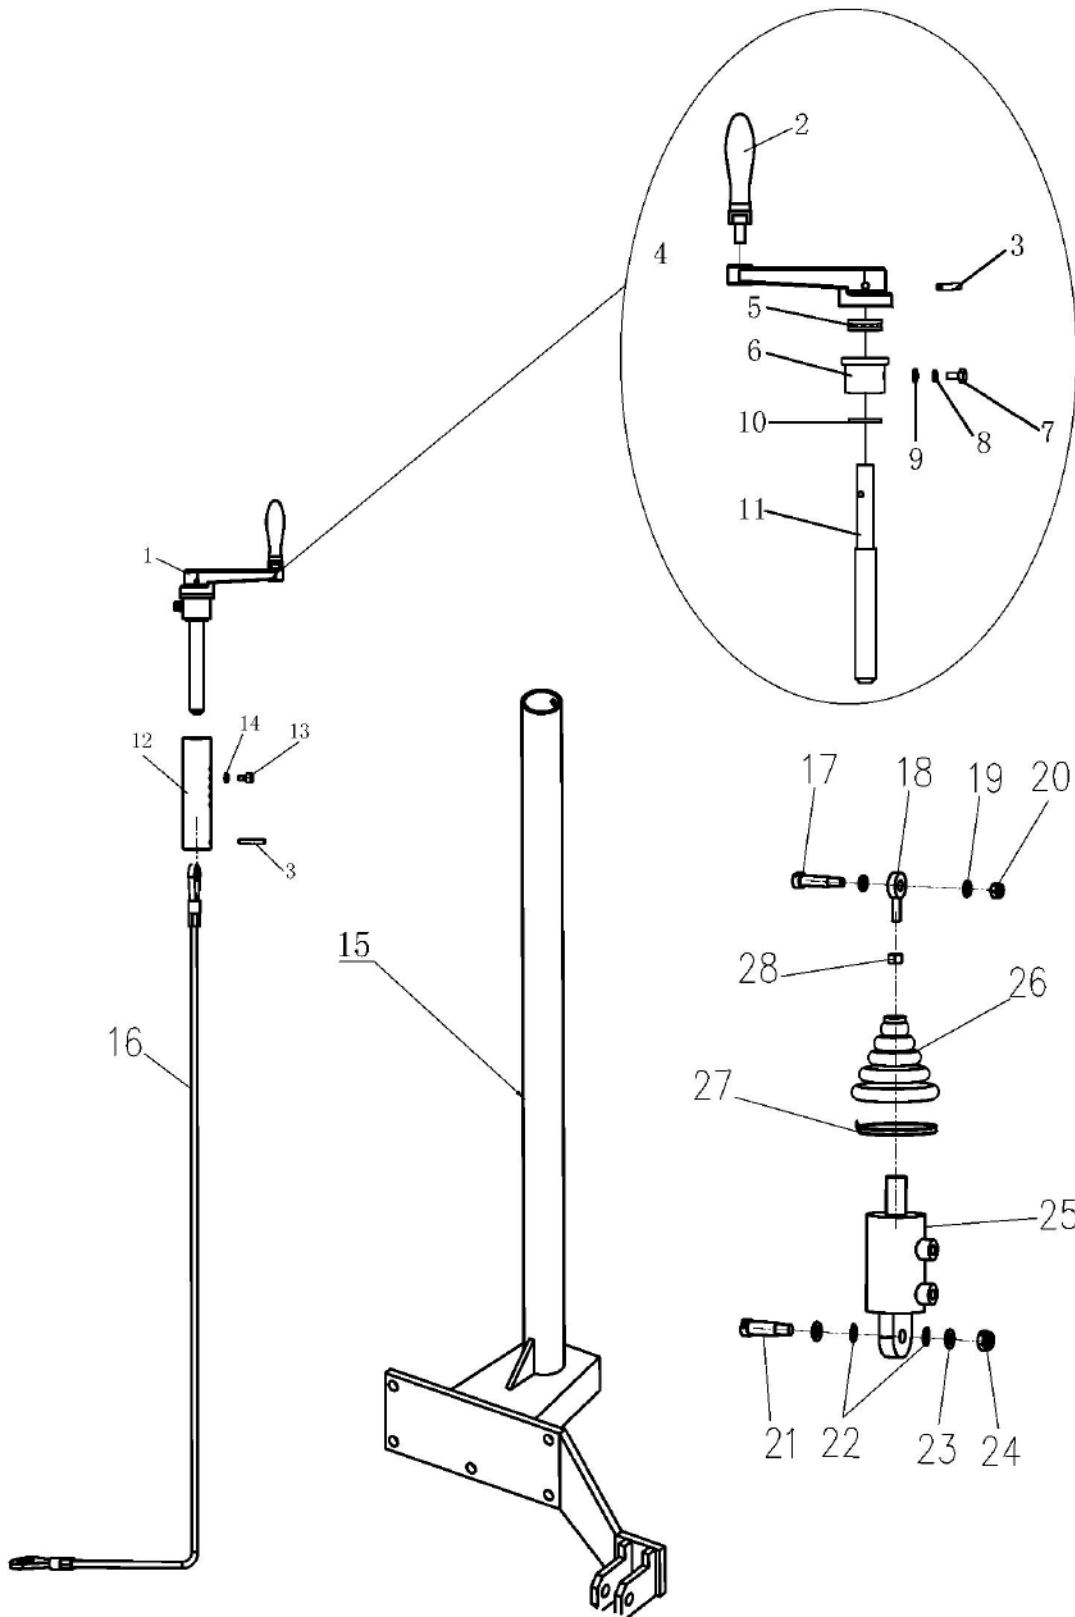


Ride-on Power Trowel Parts List**Pitch Control Lever Assy., Left**

ITEM NO.	PART NO.	QTY	DESCRIPTION
1	B006	1	Handle Assy.
2	WB039	1	Handle
3	GB240530	2	Pin
4	L0030	1	Handle
5	ZC51103	1	Bearing
6	L0031	1	Bearing Holder
7	GB010612	1	Hex Screw, M6x12
8	GB1306	1	Spring Washer
9	GB1206	1	Washer
10	GB1215	1	Washer
11	L0032	1	Lead Screw
12	L0294	1	Regulation Sleeve
13	GB020608	1	Socket Head Screw, M6x8
14	GB1306	1	Spring Washer
15	L0282	1	Bending Plate, Left
16	WB092	1	Cable
17	WB132	1	Screw, M8x58
18	ZI10A	1	Bearing
19	GB1208	2	Washer
20	GB1008	1	Lock Nut, M8
21	WB133	1	Screw, M10x61
22	L0293	2	Cylinder Liner
23	GB1210	2	Washer
24	GB1010	1	Lock Nut, M10
25	WB166	1	Cylinder
26	WB150	1	Dust Cap
27	GB294064	1	Hose Clamp
28	GB0810	1	Hex Nut, M10

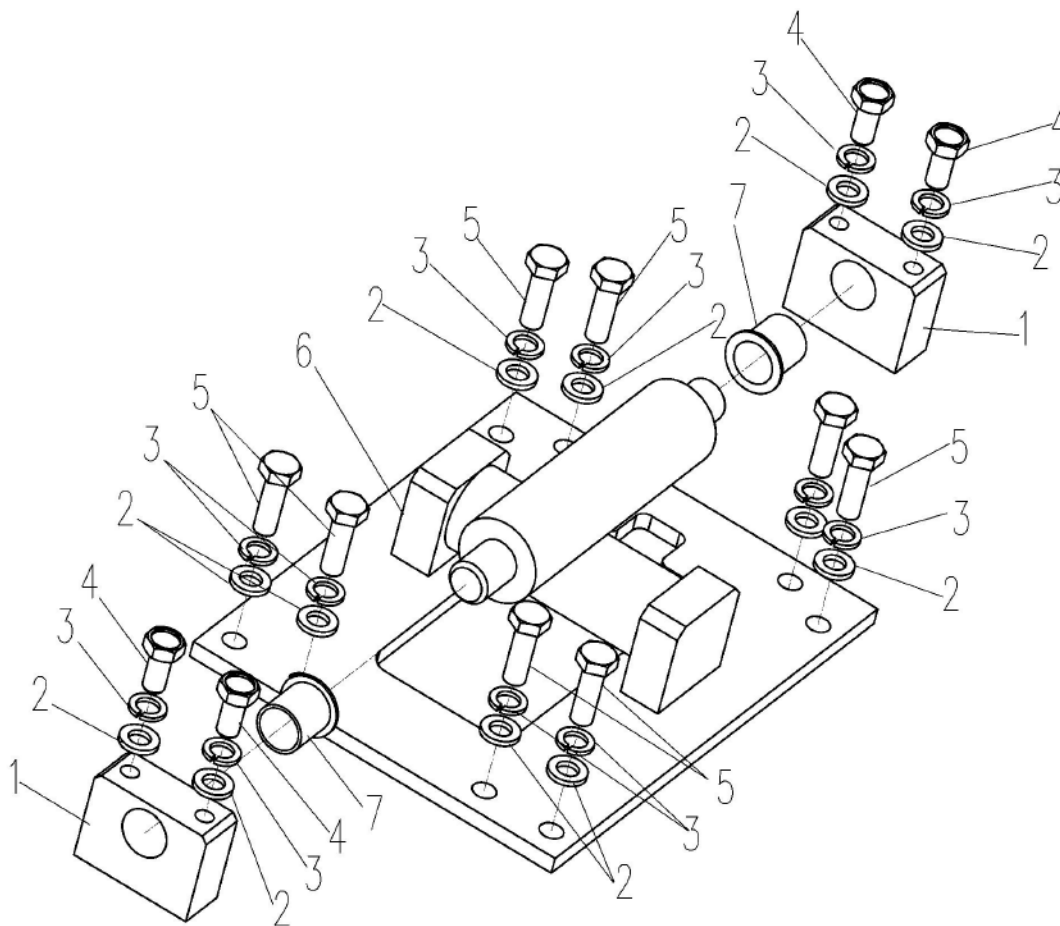


ITEM NO.	PART NO.	QTY	DESCRIPTION
1	I0276	2	Aluminum Fixing Block
2	GB1210	12	Washer
3	GB1310	12	Spring Washer
4	GB011035	4	Hex Screw, M10x35
5	GB011030	8	Hex Screw, M10x30
6	L0283	1	Connecting Frame, Left
7	WB094	4	Copper Sleeve

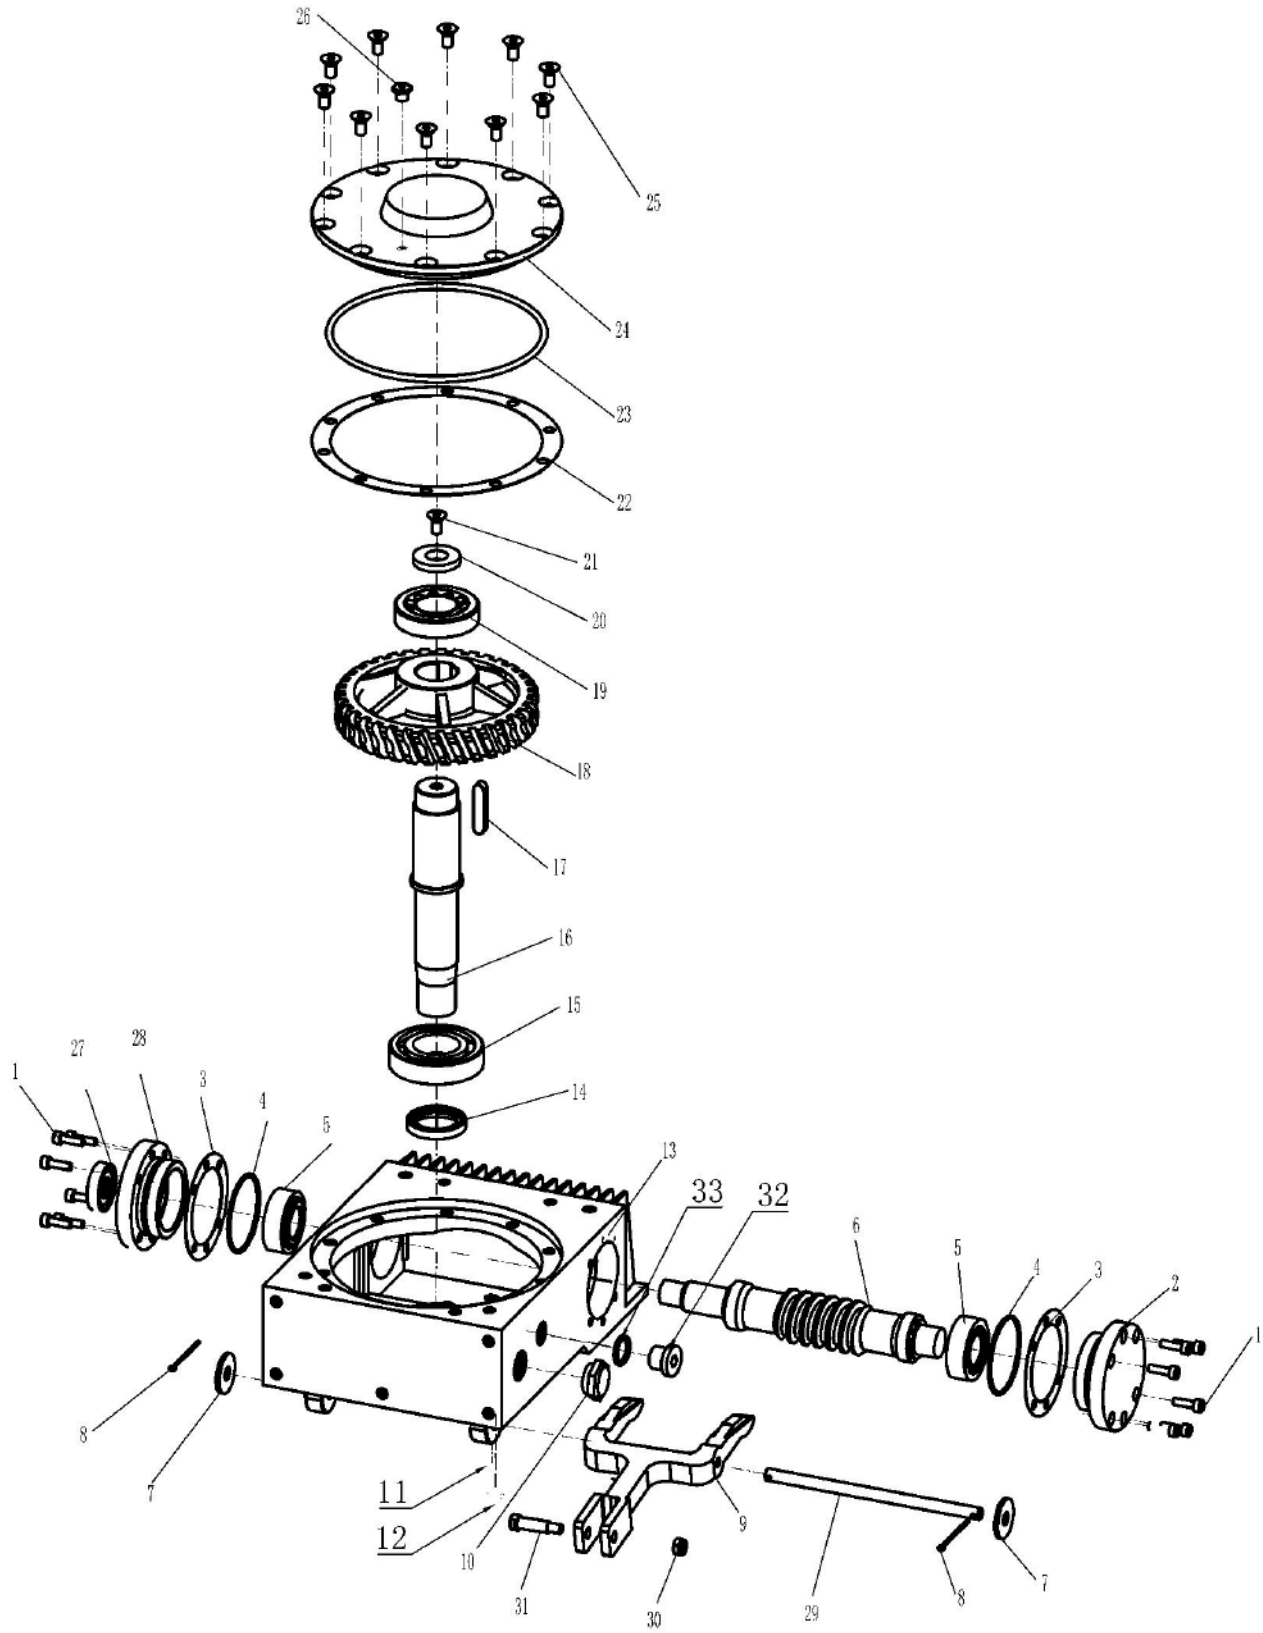


Ride-on Power Trowel Parts List**Gearbox Assy., Left**

ITEM NO.	PART NO.	QTY	DESCRIPTION
1	GB020620		Socket Head Screw, M8x20
2	L0256		Bearing Cover
3	WB629		Washer
4	GB258031		Rubber Seal
5	ZC32205		Bearing
6	WB312		Worm, Left
7	GB12103025		Washer
8	GB282525		Pin
9	L0258		Yoke
10	GB312715		Oil Gauge
11	GB121802-Q8		Copper Washer
12	GB011210-TQ		Oil Plug
13	L0296		Gearbox Case, Left
14	GB30456509		Oil Seal
15	ZN6208		Bearing
16	WB314		Worm Shaft
17	GB221045		Key
18	WB310		Worm Gear, Left
19	ZC30207		Bearing
20	L0262		Washer
21	GB030820		Socket Head Screw, M8x20
22	WB630		Washer
23	GB25212355		Rubber Seal
24	L0263		Cap
25	GB030820		Socket Head Screw, M8x20
26	GB3210-Q2Q11		Air Valve
27	GB30355007		Oil Seal
28	L0281		Bearing Cover
29	L0277		Pin
30	GB1010		Lock Nut, M10
31	WB133		Screw, M10x61
32	WB626		Oil Plug
33	GB182402-Q8		Copper Washer
34	L0292		

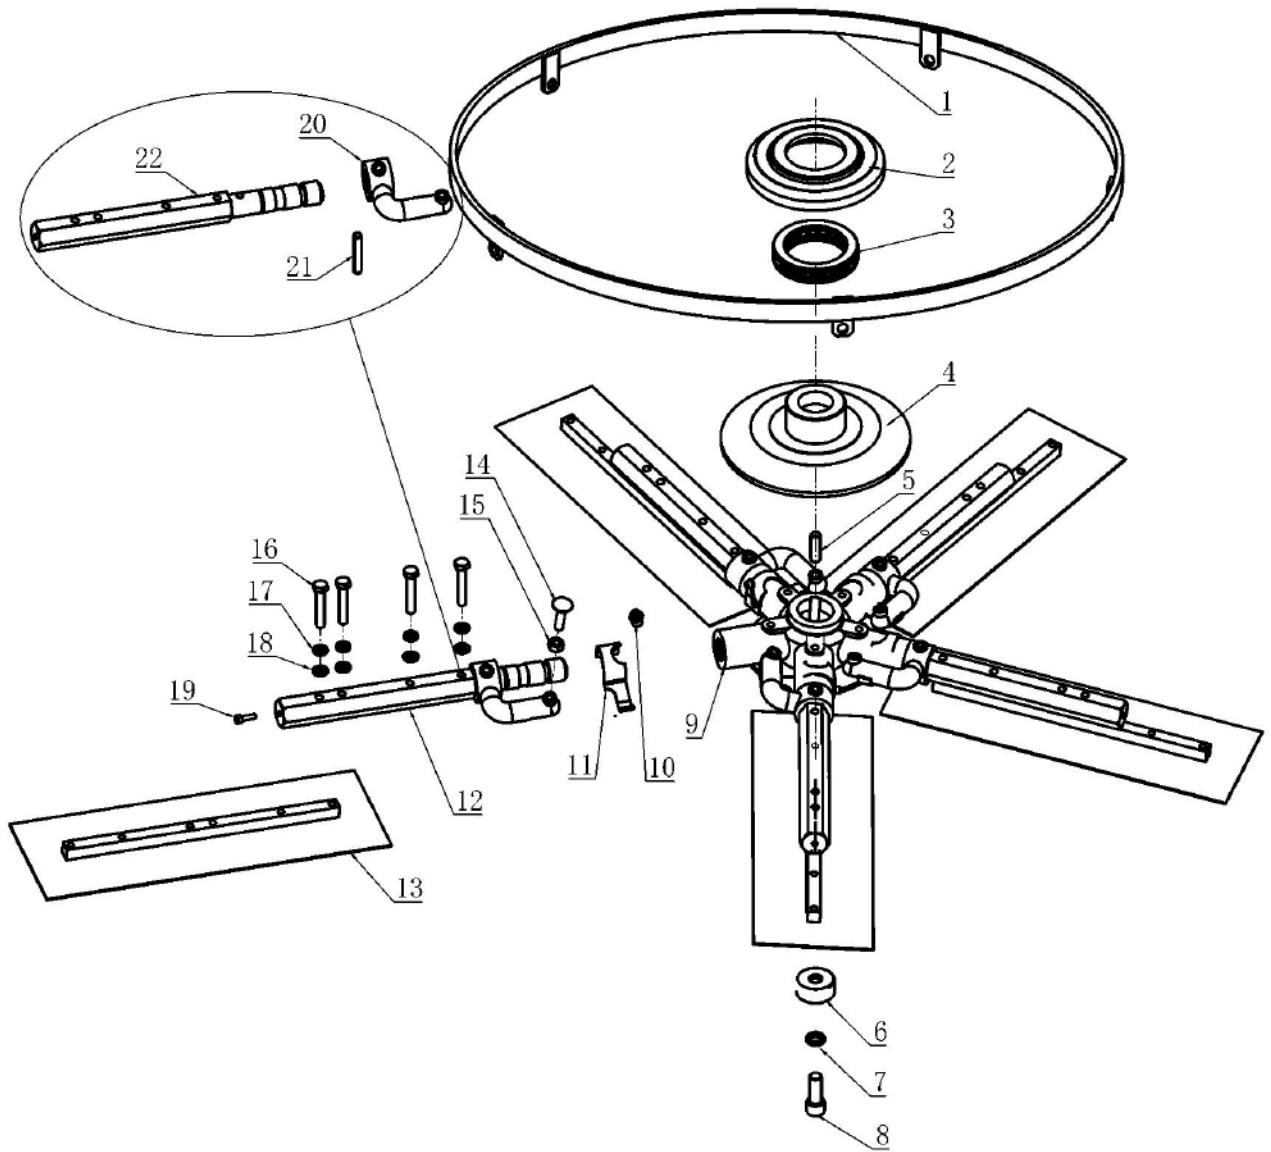

Ride-on Power Trowel Parts List**Spider Assy. with Bearing, Left**

ITEM NO.	PART NO.	QTY	DESCRIPTION
1	L0264		Stabilizer Ring
2	L0265		Bearing Holder
3	WB279		Customized Bearing
4	L0266		Blade Lifting Ring
5	GB221035		Key
6	L0267		Washer
7	GB1312		Spring Washer
8	GB021230		Socket Head Screw, M12x30
9	L0287		Spider Assy., Left
10	GB331001-Q8		Grease Fitting
11	L0075		Spring, Left
12	L0288		Trowel Arm Assy., Left
13	L0271		Finishing Blade
14	GB350830		Screw, M8x30
15	GB0808		Hex Nut, M8
16	GB010845		Hex Screw, M8x45
17	GB1308		Spring Washer
18	GB1208		Washer
19	GB010820		Hex Screw, M8x50
20	L0289		Mount, Left
21	GB240840		Pin
22	L0273		Trowel Arm Extended

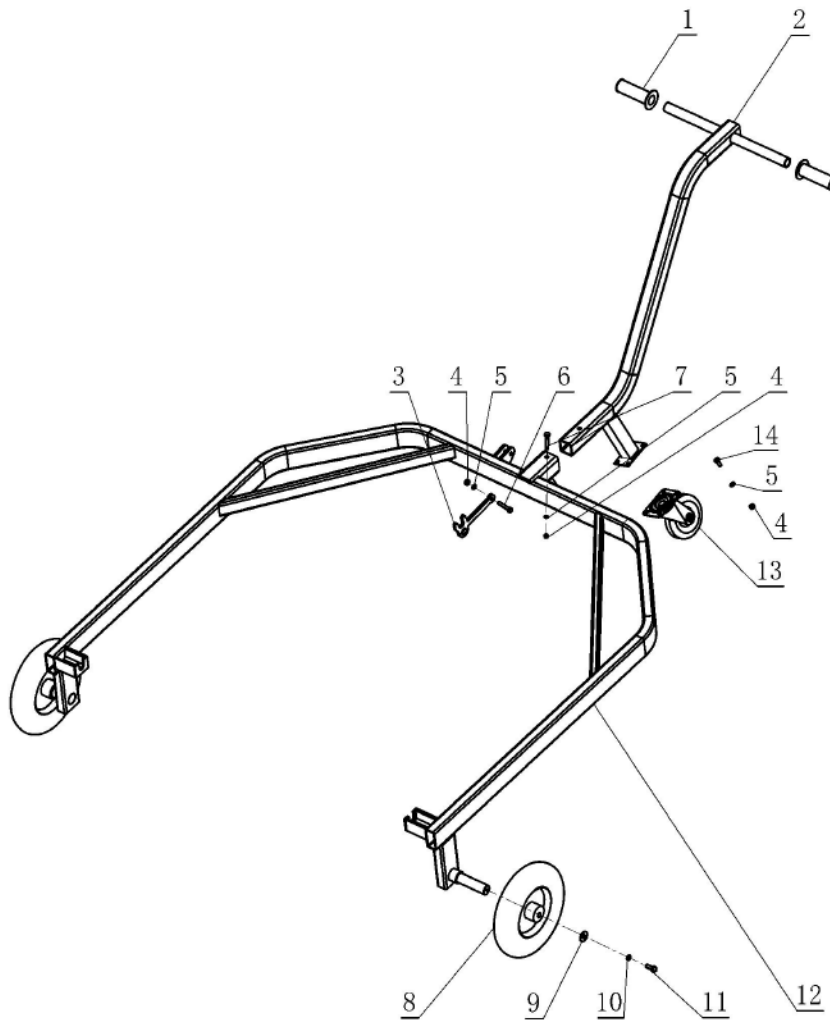

ITEM NO.	PART NO.	QTY	DESCRIPTION
1	WY312	2	Handle Grip
2	L0290	1	Handle
3	WB054	1	F-shaped Hook
4	GB1008	6	Lock Nut, M8
5	GB1208	6	Washer
6	GB010840	1	Hex Screw, M8x40
7	GB010865	1	Hex Screw, M8x65
8	WB366	2	Wheel
9	GB12102802	2	Washer
10	GB1210	2	Washer
11	GB011025	2	Hex Screw, M10x25
12	L0291	1	Frame
13	WB280	1	Universal Caster
14	GB010820	4	Hex Screw, M8x20



Power Your World

Tomahawk understands to keep a job-site running smoothly the proper equipment and spare parts are needed at the drop of a hat. With same day shipping and faster delivery times, count on Tomahawk to keep you powered throughout the day! With long lasting parts and engines, Tomahawk equipment will be the star of your fleet for years to come. Visit www.tomahawk-power.com to get started today!

TOMAHAWK

Tomahawk Power, LLC
San Diego, CA

Sales Support
(866) 577-4476
sales@tomahawk-power.com

Equipment Support
(866) 577-4476
support@tomahawk-power.com

www.tomahawk-power.com



FACEBOOK
facebook.com/TomahawkPowerUSA

YOUTUBE
youtube.com/TomahawkPower

INSTAGRAM
[@tomahawkpower](https://instagram.com/tomahawkpower)