

LAFEME

WONDERFUL BUILDING MATERIALS PTY LTD

Intelligent Toilet Seat **OPERATION INSTRUCTIONS** 

Note: Mains water only, do not use rain water. Installation is made by a LICENSED plumber,

Introduction Of Basic Structure And Control Board The Brief Introduction Of Control Board The Brief Introduction Of Control Board And Maintainence Installation Instruction Instruction And Confirmation Before Using Troubleshooting Check And Accept Specification Packing List **Function List** Safety Precaution — Warning — — 

Do not use loose and unstable power outlet. • Risk of fire, electric shock or other accidents.

1.Do not damage, process, heat 2.Do not force bent, volume binding, pull 3.Do not place heavy objects on the power

(1)Do not splashed on the product or put it in excessive moisture place. When bathing in the wash room, please keep

If ignore the damage, and continue to make it work, may cause fire, electric shock, short circuit and other accidents.

(3)Make sure power plug connect only to a dedicated power outlet (220V~240V,10A,50Hz-60Hz). (Risk of fire or

(4)If the power line is damaged, please don't remove by yourself. It must be finished by manufacturer, or the

(5) The new hose-sets supplied with appliance are to be used and that old hose-sets should not be reused. If sit on the seat for a long time, please keep the seat under low temperature, so that not cause ambustion

Please use the specific(220V~240V,10A,50Hz-60Hz)power outlet.

When you use a power exceeding outlet provides, may cause heat even fire.

fresh by ventilation fans or ventilation ports. (Risk of fire or electric shock)

Do not use other power except AC 220V~240V.

line or connecting line.

electric shock)

professionals.

Do not destroy power supply line and connecting line.

(2) This product must be grounded. (Risk of electric shock)

Please keep the temperature in low for the following persons:

Prohibition

Compulsion

Safety Precaution

Application Notice

05

**Function Description** 

Directory

Safety Precaution — Warning – Please read the manual carefully before using the product properly. Please keep the instruction manual after reading.

When a person who has a physical or mental disability or a lack of experience and common sense, including children, must be used under the guidance of a normal person. Children can not play with the machine. The following notices are very important to comply with. Signs explaination Warning Do not fail to comply with the regulations. Risk of the personal injured or death. Caution Do not fail to comply with the regulations. Risk of the personal injured or property damage. Prohibition Danger tips, please strictly comply with, otherwise cause casualties. Must comply with the tips. Compulsion Prohibition disassemblage Absolute prohibition of removal, repair, alteration of this product. • Risk of fire, electric shock or other accidents. Prohibition watering Do not pour water or detergent to the product or on the power plug. • Risk of fire, electric shock or other accident. Do not use the product if fault. Please contact service provider to repair. • If there are faults as follow, please switch off power and close valve. 1. leak from pipe or interior 2.temperature abnormally high. 3.unusual noise and smell. 4.fuming. Compulsion • Do not use the product if it doesn't work. if fail to comply with it, may cause fire, electric shock, and watering in the room. Please contact the service provider. Do not use other water except tap water. • Risk of dermatitis and other issues. -01-Safety Precaution — Warning — Safety Precaution Do not approach to product with open fire. • Risk offire.

Do not place heavy objects or stand on the cover of the toilet, also not impact product.

Risk of plastic parts damaged, even personal injury if broken. • Risk of leakage if hose damaged.

Do not flush other stuff except shit , pee and toilet paper. ● Risk of toilet-clogging, sewage spills.

Do not put or block the wind outlet with fingers or other items. • Risk of burn, electric shock or accessories damaged.

If the product is broken, may cause personal injury or watering in the room.

Cleaning with kitchen abluent (neutral). Do not use following items:

Toilet detergent, housing detergent, propellant, banana oil etc.

Do not remove filter if the valve is open. ● Risk of spraying water.

Do not make hose bend,damaged. ● Risk of leakage.

4. Integrated Control Board Operating functions directly on the control board, more convenient. 5. Self-cleaning nozzle Nozzle will clean itself before or after using to guarantee the nozzle is clean

Installation Instruction —— Intelligent toilet seat

3. Hold down the side mounting bar, Align the toilet seat with the mounting plate, Push the toilet seat into the mounting plate

4.Connect the PE pipe to three-way quick connector, one end to the toilet inlet, and one end to the three-way quick connector 5. Ensure that the water supply angle valve is opened after the error is correct, and there shall be no water leakage or water seepage

Note: Installation is made by a LICENSED plumber, after installation, please check whether all parts are installed correctly carefully.

-09-

2.Look at the picture 1. at page 10, install the installation. accessories in the toilet.

2. Connect the tee to the water supply angle valve and tighten the nut 3. Connect the ceramic water braided tube to the tee and tighten the nut

A certified Backflow Prevention Valve (AVB) is supplied.

Installation

1.Remove the seat and cover of the toilet in your home.

• Installation instructions for waterways

in the pipeline connection

1. Close the water supply angle valve

Power cord length

Rated power

Cleaning unit

Water for rear soft

Water for female cleaning Water pressure

Water temperature

Heating power


Install toilet seat

6. UV sterilization Adopt advanced equipment UV lamp to sterilize the inside of the toilet cover(including seat ring)


-05-


The Brief Introduction Of Control Board — Function Details —

Prohibition

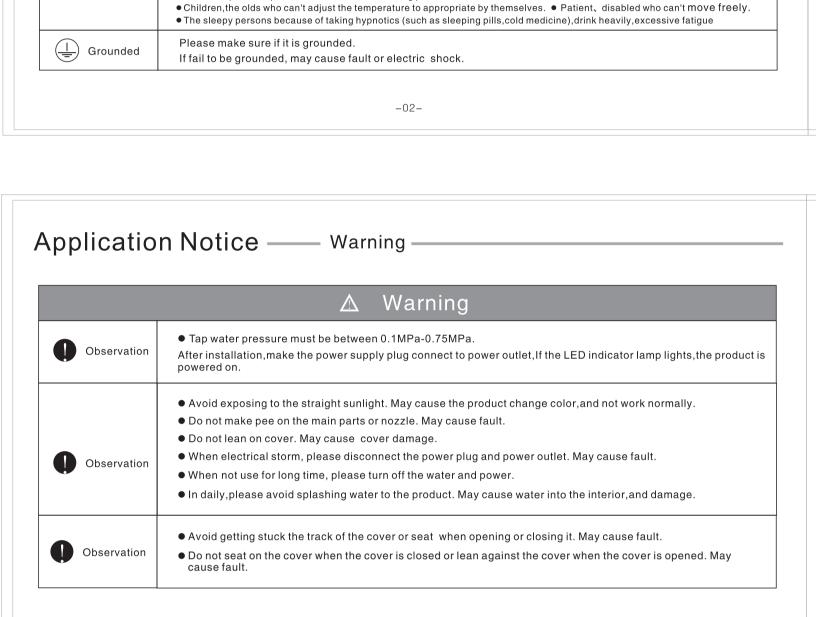

-04-

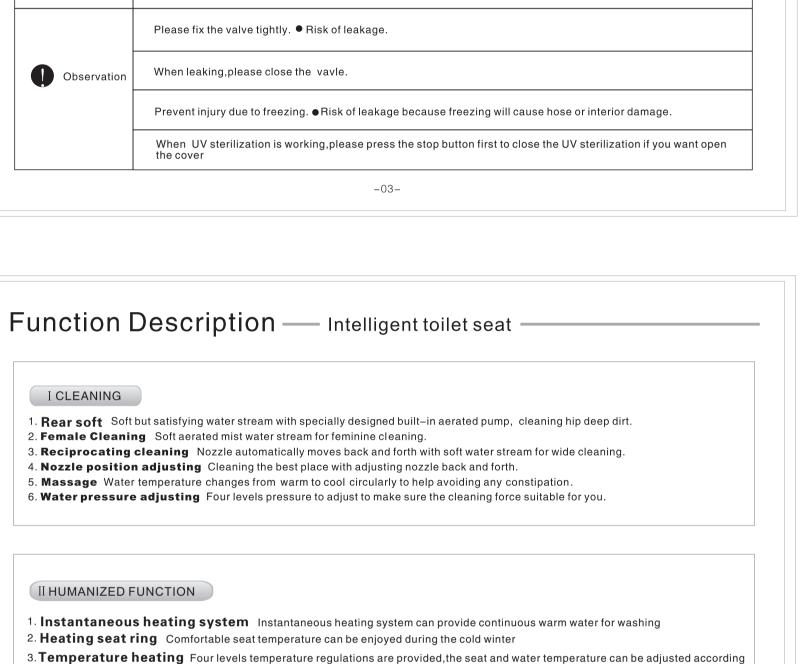

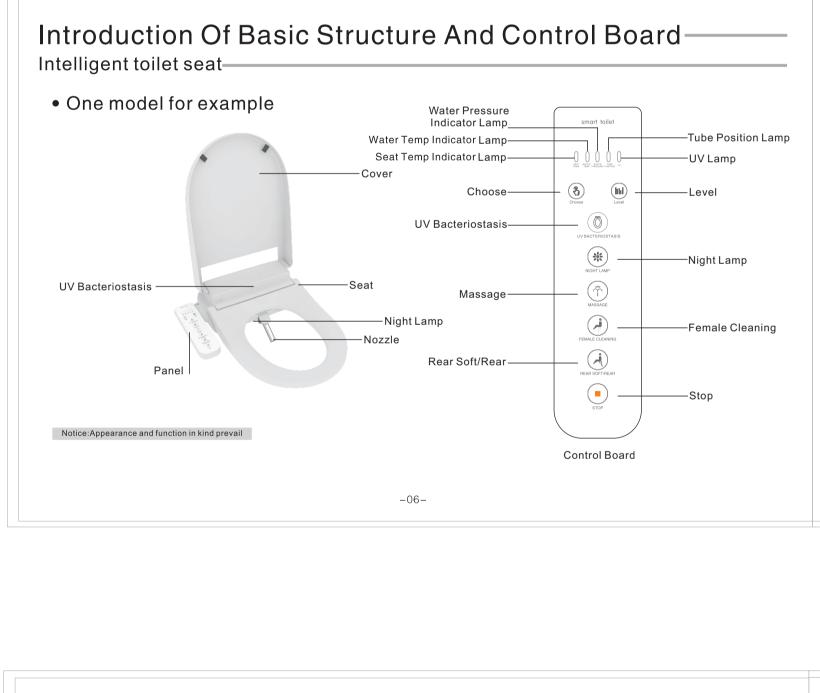

The Brief Introduction Of Control Board And Maintainence

Press CHOOSE button, the indicator light will be lighten, choose the function you want to adjust, then press LEVEL button to change the levels. There are four levels to choose. The red light represents the highest level and green means the lowest. You can press button continually and the

Automatic mode, seating more than 10 seconds, close the cover, the UV sterilization turns on automatically, it will be turn off after five minutes Manual mode, close the cover , press the UV sterilization button, the UV sterilization will start working, it will be turn off after five minutes

Automatic mode, open the cover, night light will turn on, close the cover, night light will turn off. Manual mode, press the night light button for 3 seconds, to control the night light turn on/off.

Function Details

V Night Light

VI Adjustment

light will lighten in turns.

I The UV sterilization

• Clean with soft wet cloth.

Please clean and maintain product as follows

• If necessary, clean with neutral detergent, then with water.

After installation, must test before the first use. And make record.

All function can work normally.

lights works well.

Checking

Connect power well, not loosen

Water supply is opened

Each connections is tightened, reliable (such as valve, filter)

Power indicator light lit


Nozzle is no leakage


Check and make sure all functions, Rear soft, Female cleaning (massage, reciprocating, water pressure, tube position), water temperature, seat temperature, and indicator

The power outlet is must be 220V ~240V

Results

• After clean ceramic, please dry the detergent residue on the plastic with soft cloth. • To avoid water, please dry with soft cloth after cleaning because it is electric product

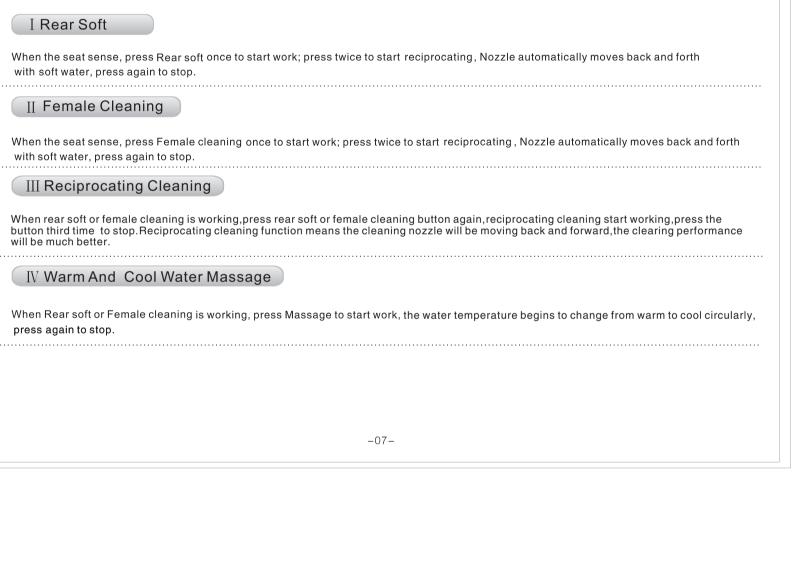

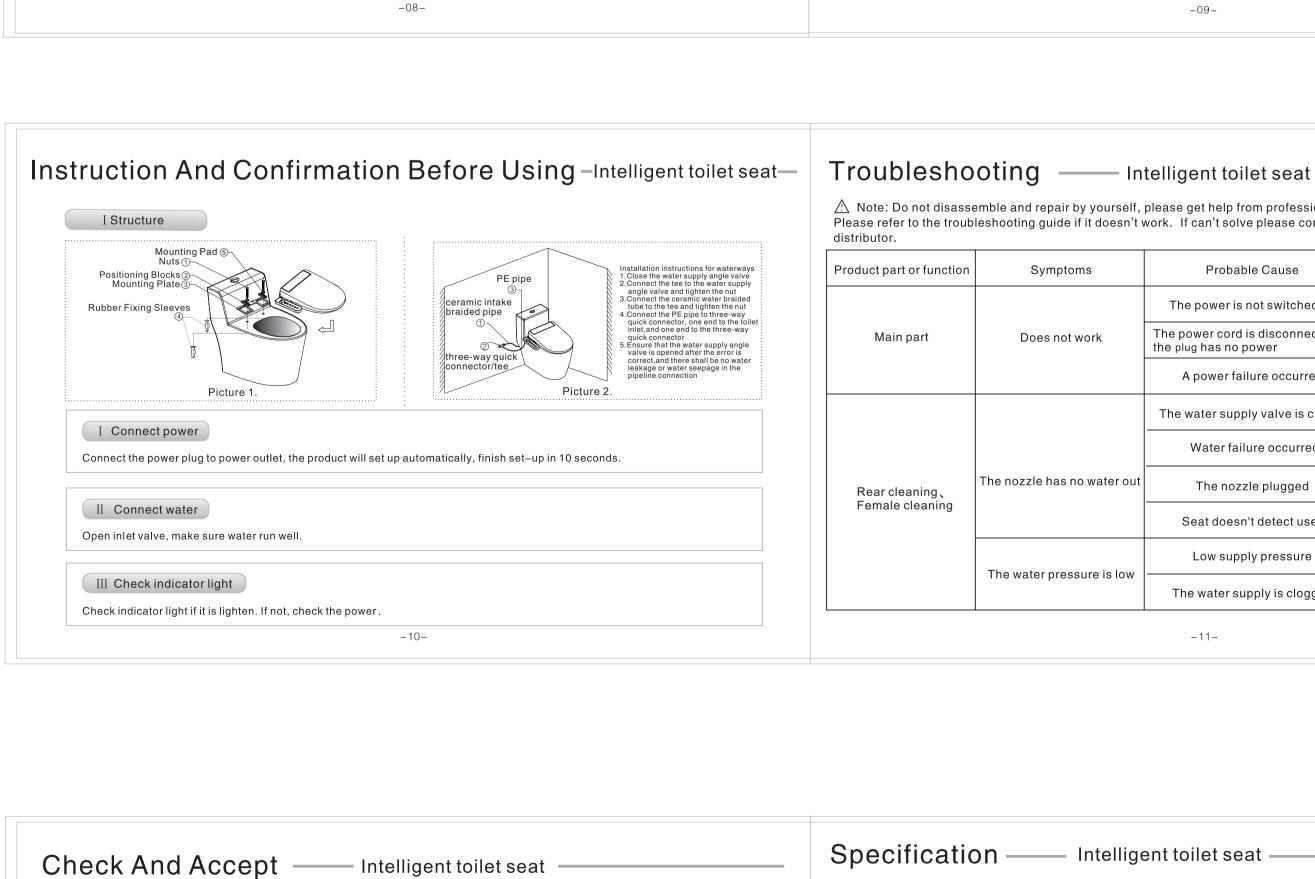

Product part or function	Symptoms	Probable Cause	Recorrective action
		The power is not switched on	Open power
Main part	Does not work	The power cord is disconnected or the plug has no power	Insert the power cord into an election outlet or check the power plug
		A power failure occurred	Wait until the power is restore
		The water supply valve is closed	Turn on water valve
		Water failure occurred	Wait until water is restored
Rear cleaning 、	The nozzle has no water out	The nozzle plugged	Clean the nozzle according to installation guide
Female cleaning		Seat doesn't detect user	Adjust the sitting position
	The second	Low supply pressure	Increase the pressure
	The water pressure is low	The water supply is clogged	Clean the filter
		-11-	
Specification	on ——— Intellige	ent toilet seat ————	
opoomoan			
Ite	m	Descript	tion

1.5M

4 level adjusted

1600W

1450W(when income water temperature at  $15^{\circ}$ C, cleaning water temperature

the highest, cleaning flow the largest, seat temperature the highest)

Water pressure is 0.2MPa(flow)about0.5-0.9L/min(5 levels)

4 level adjusted (rear soft and female cleaning)

	Installation Da	te	Plumber's L	icense Number		Name of Plu	mber	
					-12-			
F	acking	List —	- Intellige	ent toilet s	eat ——			
	Number	1	2	3	4	5	6	7
	Name	Integrated toilet seat	Operating manual	Warranty card	Certificate card	PE pipe	Three-way quick connector/tee	Installation accessories
	Quantity	One	One	One	One	One	One	One
	Remark							

Our company reserves the right of final interpretation. We reserve the right to make changes in product characteristics,

-14-

packaging or availability at any time without notice.

UV sterilization			Temperature sensor temperature fuse wire
Seat leating power  Soft close Seat temperature Safety protection devices  Temperature control switch, temperature fuse.  Operation environment  O-40°C  Intelligent toilet seat  UV sterilization Rear soft Female Cleaning Warm seat Warm water washing Warm seat Warm water washing Nozzle position adjusting Massage Cleaning pressure adjusting Massage Cleaning pressure adjusting  Massage Cleaning pressure adjusting  Valevel adjusted Temperature control switch, temperature fuse.  O-40°C  -13-  -13-  -13-	Safety protec	ction devices	water temperature sensor, flow controller
Seat temperature 4 level adjusted Safety protection devices Temperature control switch, temperature fuse.  Operation environment 0-40°C   Intelligent toilet seat  UV sterilization	Seat heati	ng power	-
Seat temperature Safety protection devices  Operation environment  O40°C   -13-  Intelligent toilet seat  UV sterilization Rear soft Female Cleaning Warm water washing Reciprocating cleaning Wozzle position adjusting Massage VCleaning pressure adjusting  V temperature control switch, temperature fuse.  0-40°C  -13-	Soft c	lose	Slow down when open and close
Safety protection devices  Operation environment  -13-  UV sterilization Rear soft Female Cleaning Warm water washing Warm water washing Reciprocating cleaning Nozzle position adjusting Massage Cleaning pressure adjusting  Massage Cleaning pressure adjusting  Verale Cleaning Verale Cle	Seat		
Operation environment  -13-  UN sterilization Rear soft Female Cleaning Warm seat Warm water washing Reiprocating cleaning Nozzle position adjusting Massage Cleaning pressure adjusting  Varable Cleaning Varable			
Inction List — Intelligent toilet seat  UV sterilization			
Inction List — Intelligent toilet seat  UV sterilization	· · · · · · · · · · · · · · · · · · ·		
UV sterilization Rear soft Female Cleaning Warm seat Warm water washing Reciprocating cleaning Nozzle position adjusting Massage Cleaning pressure adjusting			-13-
UV sterilization    Rear soft    Female Cleaning    Warm seat    Warm water washing    Reciprocating cleaning    Nozzle position adjusting    Massage    Cleaning pressure adjusting    ✓			
UV sterilization    Rear soft    Female Cleaning    Warm seat    Warm water washing    Reciprocating cleaning    Nozzle position adjusting    Massage    Cleaning pressure adjusting			
UV sterilization    Rear soft    Female Cleaning    Warm seat    Warm water washing    Reciprocating cleaning    Nozzle position adjusting    Massage    Cleaning pressure adjusting     V			
UV sterilization    Rear soft    Female Cleaning    Warm seat    Warm water washing    Reciprocating cleaning    Nozzle position adjusting    Massage    Cleaning pressure adjusting     V			
UV sterilization    Rear soft    Female Cleaning    Warm seat    Warm water washing    Reciprocating cleaning    Nozzle position adjusting    Massage    Cleaning pressure adjusting     V			
UV sterilization    Rear soft    Female Cleaning    Warm seat    Warm water washing    Reciprocating cleaning    Nozzle position adjusting    Massage    Cleaning pressure adjusting    ✓			
UV sterilization    Rear soft    Female Cleaning    Warm seat    Warm water washing    Reciprocating cleaning    Nozzle position adjusting    Massage    Cleaning pressure adjusting     V			
UV sterilization    Rear soft    Female Cleaning    Warm seat    Warm water washing    Reciprocating cleaning    Nozzle position adjusting    Massage    Cleaning pressure adjusting     V			
UV sterilization    Rear soft    Female Cleaning    Warm seat    Warm water washing    Reciprocating cleaning    Nozzle position adjusting    Massage    Cleaning pressure adjusting     V			
UV sterilization    Rear soft    Female Cleaning    Warm seat    Warm water washing    Reciprocating cleaning    Nozzle position adjusting    Massage    Cleaning pressure adjusting     V			
UV sterilization    Rear soft    Female Cleaning    Warm seat    Warm water washing    Reciprocating cleaning    Nozzle position adjusting    Massage    Cleaning pressure adjusting    ✓			
UV sterilization    Rear soft    Female Cleaning    Warm seat    Warm water washing    Reciprocating cleaning    Nozzle position adjusting    Massage    Cleaning pressure adjusting     V			
Rear soft   Female Cleaning   Warm seat   Warm water washing   Reciprocating cleaning   Nozzle position adjusting   Massage   Cleaning pressure adjusting   ✓	notion List —	Intollia	rent toilet seet
Rear soft   Female Cleaning   Warm seat   Warm water washing   Reciprocating cleaning   Nozzle position adjusting   Massage   Cleaning pressure adjusting   ✓	nction List —	— Intelliç	gent toilet seat————————————————————————————————————
Female Cleaning  Warm seat  Warm water washing  Reciprocating cleaning  Nozzle position adjusting  Massage  ✓  Cleaning pressure adjusting  ✓			gent toilet seat————————————————————————————————————
Warm seat  Warm water washing  Reciprocating cleaning  Nozzle position adjusting  Massage  ✓  Cleaning pressure adjusting  √	UV sterilization	√	gent toilet seat————————————————————————————————————
Warm water washing   Reciprocating cleaning   Nozzle position adjusting   Massage   ✓  Cleaning pressure adjusting   ✓	UV sterilization Rear soft	√ √	gent toilet seat
Reciprocating cleaning   Nozzle position adjusting   Massage   Cleaning pressure adjusting   ✓	UV sterilization Rear soft Female Cleaning	\frac{1}{}	gent toilet seat————————————————————————————————————
Nozzle position adjusting   Massage   Cleaning pressure adjusting   √	UV sterilization Rear soft Female Cleaning Warm seat	\frac{1}{\sqrt{1}}	gent toilet seat
Massage   Cleaning pressure adjusting   √	UV sterilization Rear soft Female Cleaning Warm seat Warm water washing	\frac{1}{\sqrt{1}}	gent toilet seat
Cleaning pressure adjusting √	UV sterilization Rear soft Female Cleaning Warm seat Warm water washing Reciprocating cleaning	\frac{1}{\sqrt{1}} \frac{1}{\sqr	gent toilet seat————————————————————————————————————
	UV sterilization Rear soft Female Cleaning Warm seat Warm water washing Reciprocating cleaning Nozzle position adjusting	\frac{1}{\sqrt{1}} \frac{1}{\sqr	gent toilet seat
Water Temp adjusting	UV sterilization  Rear soft Female Cleaning  Warm seat  Warm water washing  Reciprocating cleaning  Nozzle position adjusting  Massage	\frac{1}{\sqrt{1}}	gent toilet seat
	UV sterilization Rear soft Female Cleaning Warm seat Warm water washing Reciprocating cleaning Nozzle position adjusting Massage Cleaning pressure adjusting	\frac{1}{\sqrt{1}}	gent toilet seat
Seat Temp adjusting √	UV sterilization Rear soft Female Cleaning Warm seat Warm water washing Reciprocating cleaning Nozzle position adjusting Massage Cleaning pressure adjusting Water Temp adjusting	\frac{1}{\sqrt{1}} \frac{1}{\sqr	gent toilet seat
	UV sterilization Rear soft Female Cleaning Warm seat Warm water washing Reciprocating cleaning Nozzle position adjusting Massage Cleaning pressure adjusting Water Temp adjusting	\frac{1}{\sqrt{1}} \frac{1}{\sqr	gent toilet seat
Self-cleaning nozzle √	UV sterilization Rear soft Female Cleaning Warm seat Warm water washing Reciprocating cleaning Nozzle position adjusting Massage Cleaning pressure adjusting Water Temp adjusting	\frac{1}{\sqrt{1}} \frac{1}{\sqr	gent toilet seat
Self-cleaning nozzle √ Soft close √	UV sterilization Rear soft Female Cleaning Warm seat Warm water washing Reciprocating cleaning Nozzle position adjusting Massage Cleaning pressure adjusting Water Temp adjusting Seat Temp adjusting Self-cleaning nozzle	\frac{1}{\sqrt{1}} \frac{1}{\sqr	gent toilet seat
	UV sterilization Rear soft Female Cleaning Warm seat Warm water washing Reciprocating cleaning Nozzle position adjusting Massage Cleaning pressure adjusting Water Temp adjusting Seat Temp adjusting Self-cleaning nozzle	\frac{1}{\sqrt{1}} \frac{1}{\sqr	gent toilet seat
	UV sterilization Rear soft Female Cleaning Warm seat Warm water washing Reciprocating cleaning Nozzle position adjusting Massage Cleaning pressure adjusting Water Temp adjusting Seat Temp adjusting Self-cleaning nozzle Soft close	\frac{1}{\sqrt{1}} \frac{1}{\sqr	gent toilet seat

-15-