

Warning:

- ▲ 1. This is for household pets use only.
- ▲ 2. The stroller is designed for two pets only.
- ▲ 3. Ensure the stroller is completely erected and check all locks are engaged before use.
- ▲ 4. Do not leave the pet unsupervised in the stroller.
- ▲ 5. Always apply the brake whenever the stroller is stationary.
- ▲ 6. Use the tether to avoid pets running out of the stroller.
- ▲ 7. Do not allow children near to avoid any injury.
- ▲ 8. The maximum weight capacity is 50lbs.
- ▲ 9. Do not use any component not supplied by manufacturer.

Cleaning and Maintenance:

1. Remove the screws and unsnap the button on the stroller and fabric to take apart the fabric housing.
2. Wipe the fabric slightly with cold water and neutral soap, and air dry.
3. No bleach, no pressing and no dry-clean.
4. Wipe the plastic and tube with a wet cloth. Do not use acidity powder or lotion.
5. Check the stroller regularly whether any components loosen broken or damaged and change the parts if necessary.

Executive Standard:

Q/TB005-2016 pet stroller safety standard


Quality Certificate:

ISO9001:2015

Pet Stroller Instruction Manual




Assemble rear wheels

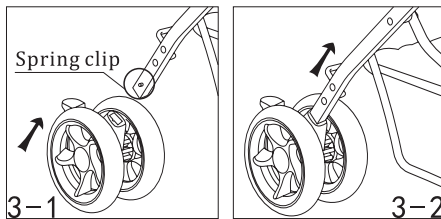

7. Assemble rear wheels: Hold the rear wheels with the red brake in back, and insert the rear wheels onto the rear leg until the spring clip fixed into the slot of the wheels connector.

8. Disassemble rear wheels: Press the spring slip with force by one hand or tools and at the same time pull the wheels off by the other hand.


Unfold and fold canopy

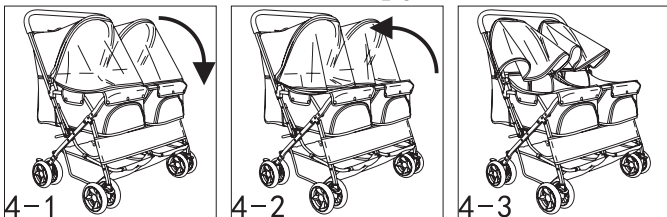

9. Draw the canopy as picture 4-1.

10. Unzip the window and fold the canopy as picture 4-3.

Unfold the stroller

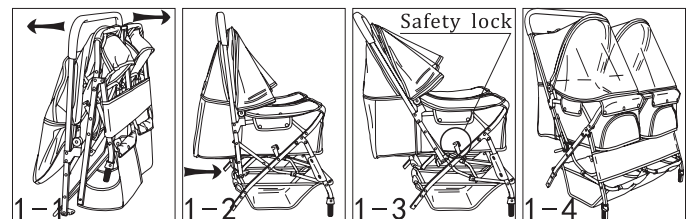


1. Take out the stroller and all components from carton.

2. Release the folding hook, unfold the stroller on two opposite direction as picture 1-1 shown until a sound "click".

3. Fix the safety lock as picture 1-3.

4. Unfold the canopy.

Assemble front wheels

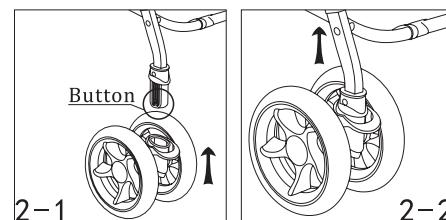


5. Assemble front wheels: Insert each wheel onto the respective leg and push upward until a sound "click".

6. Disassemble front wheels: Press the plastic button on the leg as picture shown by one hand and pull off the wheels by the other hand.


Warm Tips:

Please read this instruction carefully before using it and proper preservation of it for further reference. It may affect the safety of pet if you do not follow this instruction.

Component:

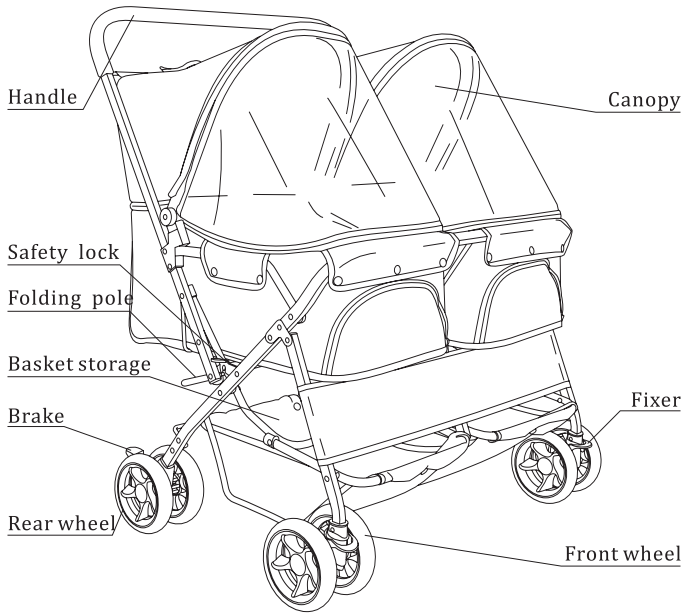


Fixer and brake

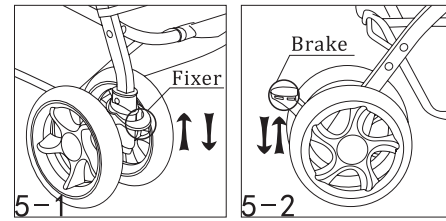

11. Fix the front wheels: Push the red directional fixer upward to fix the front wheels move on one direction and press down the fixer to release as picture 5-1.

12. Brake the rear wheels: Step the red brake to stop the stroller and push it up to unlock the brake as picture 5-2.

Fold the stroller

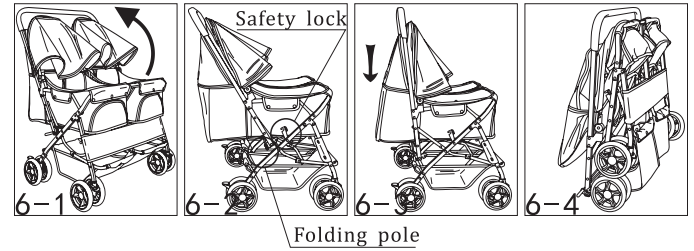

13. Firstly unzip the window and fold the canopy as picture 6-1.

14. Release the safety lock and step the red folding pole as picture 6-2.

15. Fold the stroller and fix the folding hook as picture 6-4.