

DC210D2

10-INCH SUBWOOFER DUAL 2 OHM VOICE COILS

DC210D4


10-INCH SUBWOOFER DUAL 4 OHM VOICE COILS

Specifications

MODEL	DC210D2	DC210D4
Nominal Impedance (Z)	1.8 ohms	3.2 ohms
DC Resistance (Re)	3.6 ohms	6.4 ohms
Resonance Frequency (Fs)	29.4605 Hz	27.6341 Hz
Piston Area (Sd)	0.0314 m2	0.0314 m2
Force Factor (BL)	22.8048 T.m	30.1647 T.m
Mechanical Q Factor (Qms)	7.8504	5.6696
Electrical Q Factor (Qes)	0.3561	0.3275
Total Q Factor (Qts)	0.3407	0.3096
Sensitivity 1W/M (SPL)	82.1895	82.4295
Mechanical Compliance (Cms)	0.1050 mm/N	0.1237 mm/N
Moving Mass (Mms)	277.9171 g	268.1933 g
Linear Excursion (Xmax)	16 mm	16 mm
Volume Acoustic	14.4725 Ltr	17.0451 Ltr
Compliance (Vas)	0.511 cu ft	0.602 cu ft
Reference Efficiency (NO.)	0.10%	O.11%
Nominal Power (Pe)	1000 Watts	1000 Watts
Peak Power	1500 Watts	1500 Watts
Frequency Response	20-200 Hz	20-200 Hz
Voice Coil Diameter	3 in/76.2 mm	3 in/76.2 mm
Displacement	0.0889cu ft/ 2.517Ltr	0.0889cu ft/ 2.517Ltr

Dimensions

Overall Diameter (A)	10.67in / 271mm
Cut Out Diameter (B)	9.30in / 236mm
Mounting Depth (C)	6.07in / 154mm

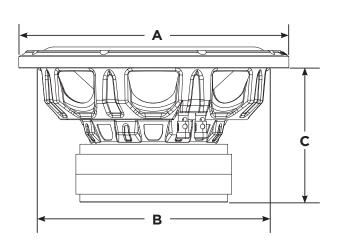



Enclosure Size (Matters)


Enclosure is the fancy name for a speaker box. You can go ready-made or build your own. Ported or Sealed. To the right are the recommended enclosure size ranges stated in internal volume. Whether buying pre-made or building, try to stay within these parameters for best performance.


Recommended Sealed Internal Volume	1.25-1.5 cu.ft.
Recommended Vented internal Volume w/o vent displacement	1.0-2.0 cu.ft.
Recommended Vented Area	17.75 cu.in.
Recommended Tuning Frequency	33-38 Hz

Enclosure Example

If you're going it on your own, here's a good starting point. We recommend using .75" MDF or plywood. Screws or air staples along with strong bonding "yellow" wood working glue for construction. Be sure that the enclosure's panels are airtight at all joining seams. Lining the inside with some poly-fill to finish it off.

External Size	25" x 13" x 10.86"	
Material Thickness	0.75"	
Net Internal Volume	1.00 ft3	
Tuning Frequency	33 Hz	
Port Area	14.35 inch2	
Port Inlet	1.25" x 11.50"	
Port Length	30.88"	

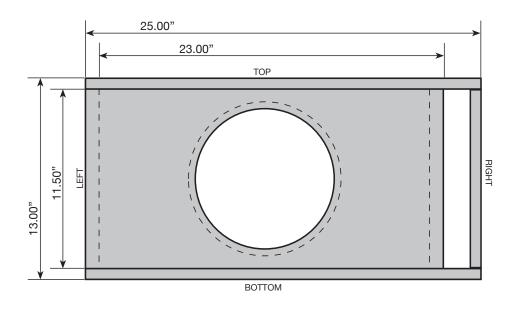

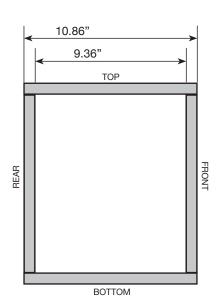

REAR 10.86 "BIGHT FRONT

Material Prep Sheet

Top / Bottom	25.00" x 10.86"	2		
Front	23.00" x 11.50"	1		
Rear	25.00" x 11.50"	1		
Left	9.36" x 11.50"	1		
Right	10.11" x 11.50"	1		
Port 1	8.11" x 11.50"	1		
Port 2	20.02" x 11.50"	1		

* Please note there are no fingers mention in the list above. Cut safe my friends.

Subwoofer Wiring Diagrams

DC2 Subwoofers are Dual Voice Coil (DVC), meaning they have two positive and negative terminals per speaker. The voice coils can be wired in parallel or series or a combination of both. The subwoofer should be wired to match the amplifiers lowest impedance as stated by the amplifier manufacturer. Going below the amplifiers minimum impedance may damage the amplifier, so wire carefully. For wiring subwoofers, we recommend using 12- to 16-gauge wire.

SINGLE SUBWOOFER SYSTEM

WIRED IN PARALLEL



DC210D2 = 1 OHM DC210D4 = 2 OHM

SINGLE SUBWOOFER SYSTEM


WIRED IN SERIES



DC210D2 = 4 OHM DC210D4 = 8 OHM

DUAL SUBWOOFER SYSTEM


WIRED IN PARALLEL

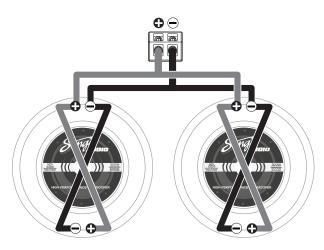

DC210D2 = 1/2 OHM DC210D4 = 1 OHM

DUAL SUBWOOFER SYSTEM

WIRED IN SERIES - PARALLEL

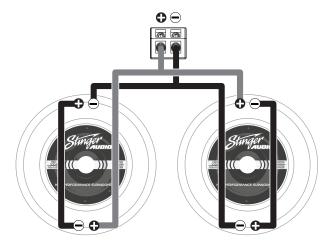

DC210D2 = 2 OHM DC210D4 = 4 OHM

WARNING:

Stinger Audio products are capable of producing sound levels that can permanently damage your hearing! Listen responsibly and avoid continuous exposure to high sound pressure levels. While driving, keep the volume at a level that allows you to hear outside warning sounds (sirens, horns, etc.)

LIMITED WARRANTY

Stinger warrants this product to be free of defects in materials and workmanship for a period of one (1) years from the original date of purchase. This warranty is not transferable and applies only to the original purchaser from an authorized Stinger dealer in the United States of America only. Should service be necessary under this warranty for any reason due to manufacturing defect or malfunction, Stinger will (at its discretion), repair or replace the defective product with new or remanufactured product at no charge. Damage caused by the following is not covered under warranty: accident, misuse, abuse, product modification or neglect, failure to follow installation instructions, unauthorized repair attempts, misrepresentations by the seller. This warranty does not cover incidental or consequential damages and does not cover the cost of removing or reinstalling the unit(s). Cosmetic damage due to accident or normal wear and tear is not covered under warranty.

INTERNATIONAL WARRANTIES:

Products purchased outside the United States of America are covered only by that country's Authorized Stinger reseller and not by Stinger. Consumers needing service or warranty information for these products must contact that country's reseller for information.



Please DO NOT return to seller

For help with installation, replacement parts, warranty or returns, please contact us directly at 727-732-3114 or support@stingerelectronics.com

