



Insert the key in the slot to lift the sprinkler. Rotate the turret clockwise using thumb and forefinger, without forcing, to reach the "stop" position; now rotate anticlockwise as far as the limit in the opposite direction. The sprinkler will begin to operate, spinning clockwise.

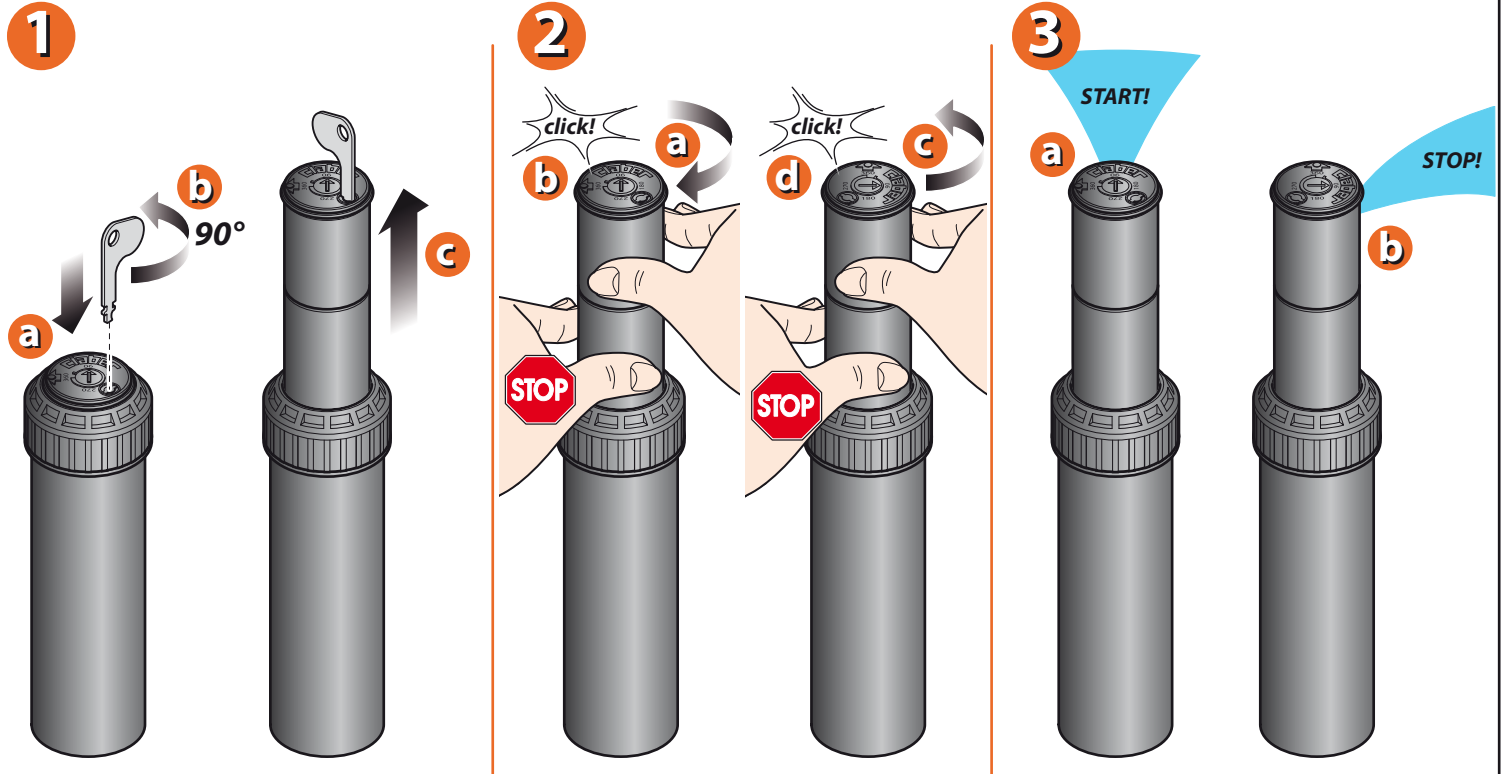


Medium range turbine sprinkler (p/n): 90474
Turbine sprinkler (p/n): 90478

To widen or narrow the sector covered by the sprinkler jet, insert the key in the slot above the arrow, hold the turret fast with one hand, and turn the key clockwise until the arrow is positioned at the required work arc.

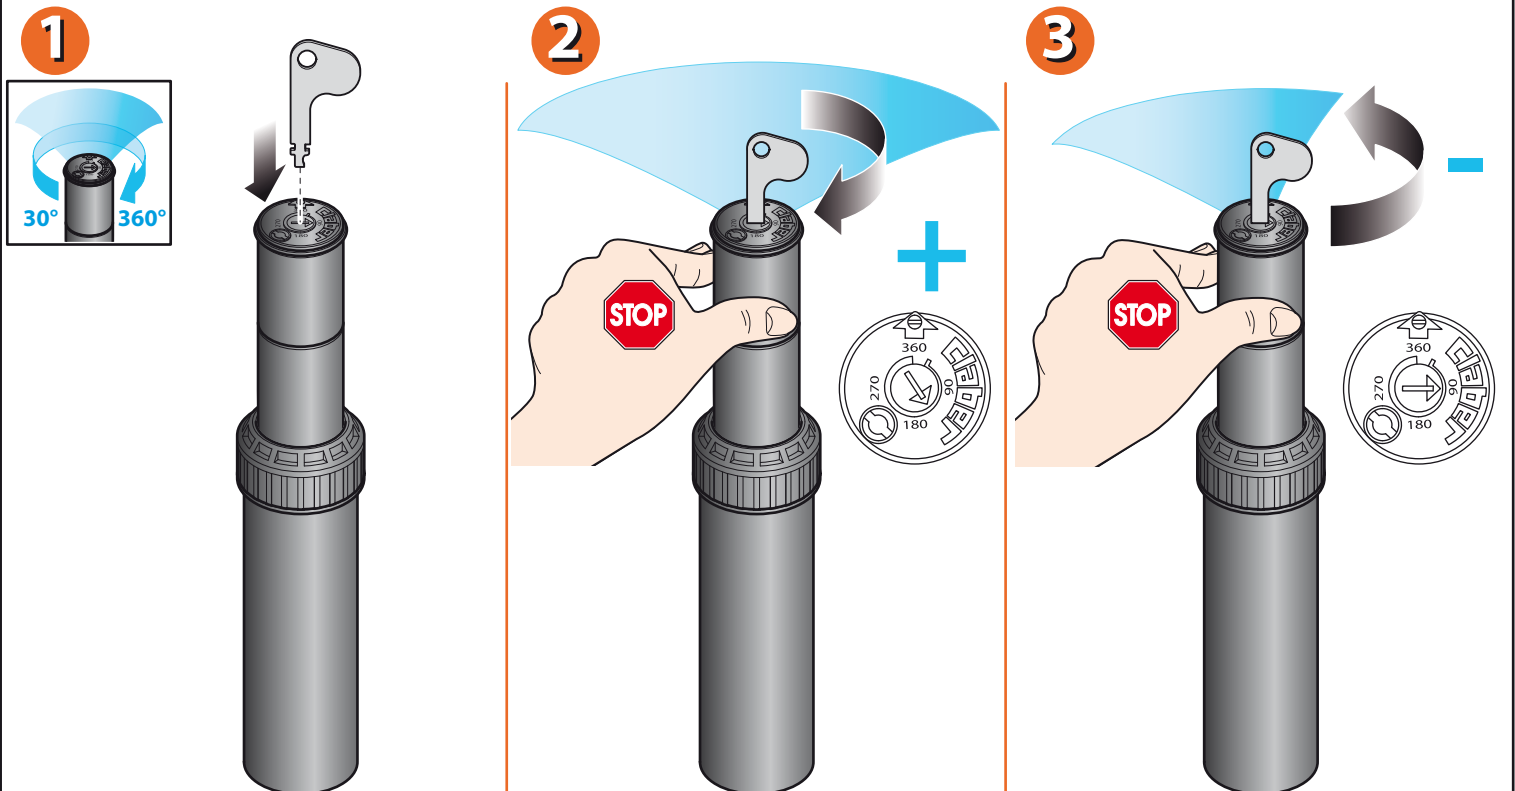


Medium range turbine sprinkler (p/n): 90474
Turbine sprinkler (p/n): 90478

To reduce the range of the jet, insert the key in the sprinkler head screw and rotate clockwise.

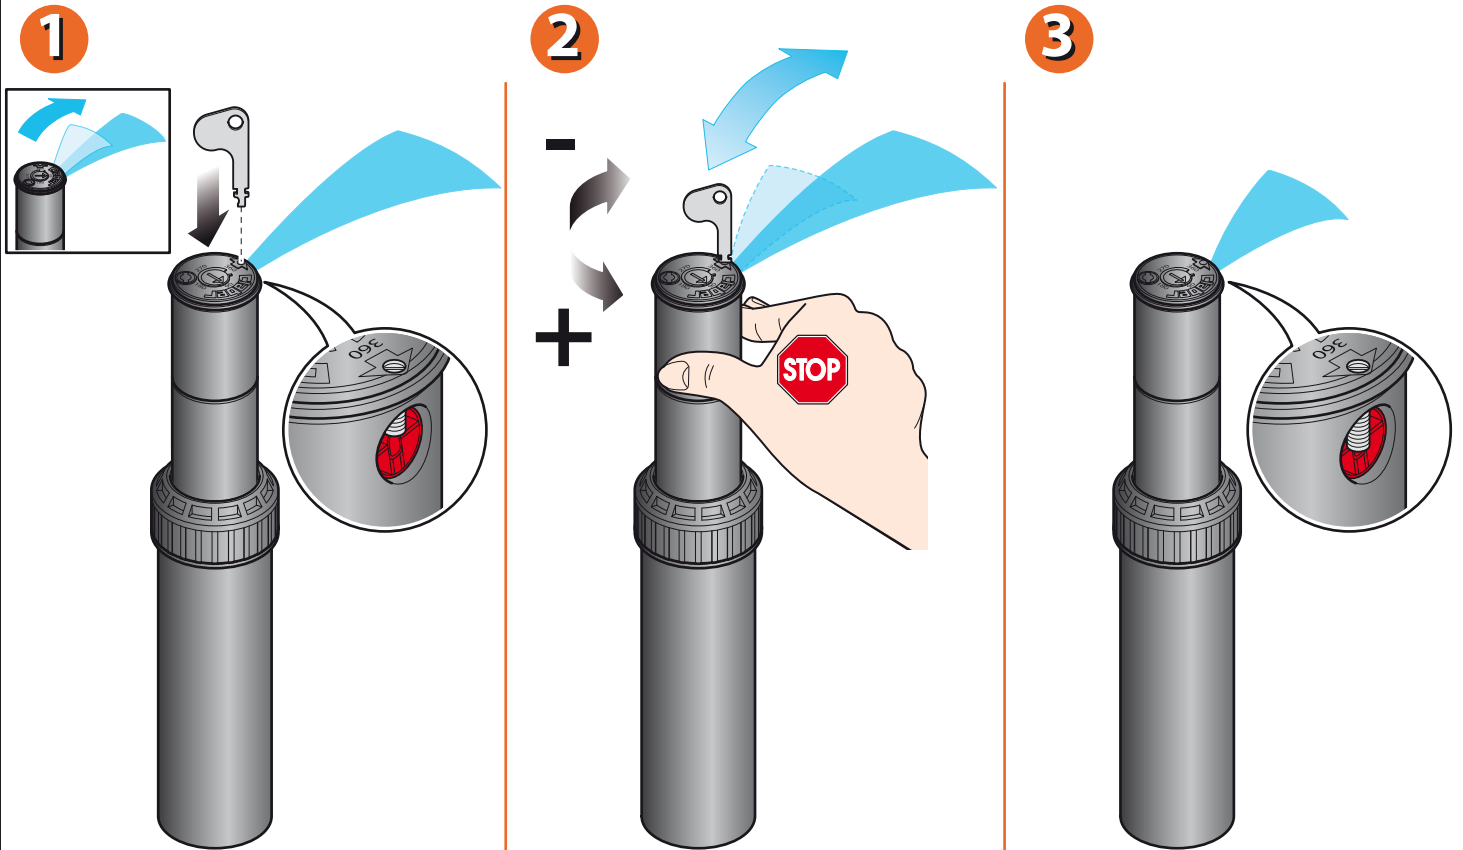



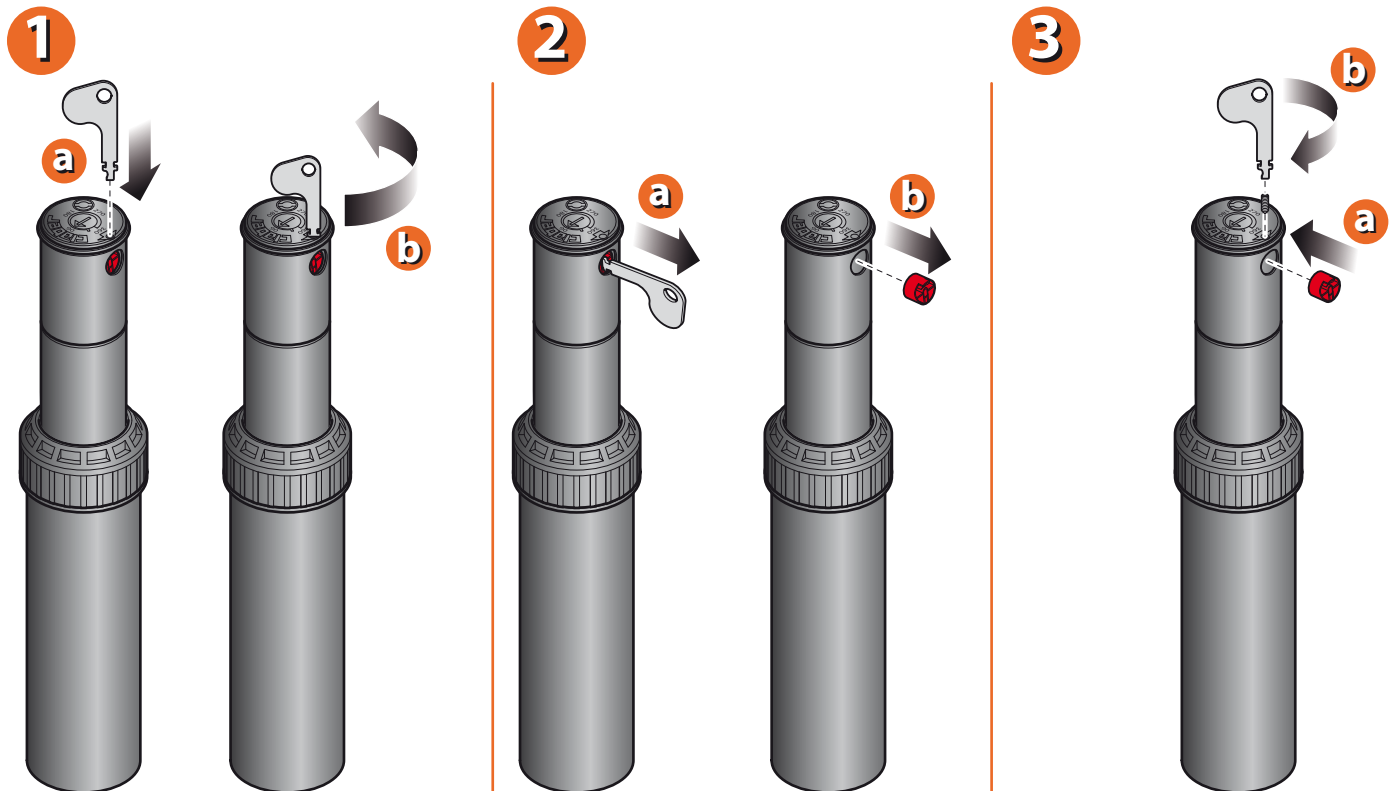

Medium range turbine sprinkler (p/n): 90474
Turbine sprinkler (p/n): 90478





To replace the nozzle, unscrew the head completely and remove the nozzle with the aid of the key.



Medium range turbine sprinkler (p/n): 90474
Turbine sprinkler (p/n): 90478

Tables indicating water usage of sprinklers.

Medium range turbine sprinkler (p/n): 90474				
Bar		l/min		
1,0	0,75	2,7	4,8 m	6,8 m
	1	4,4	5,8 m	8,2 m
	1,5	4,5	6,7 m	9,5 m
	2	6,0	7,2 m	10,2 m
	3	9,4	8,0 m	11,3 m
2,0	0,75	2,8	5,0 m	7,1 m
	1	4,8	5,9 m	8,3 m
	1,5	5,1	6,9 m	9,8 m
	2	6,6	7,5 m	10,6 m
	3	10,0	8,4 m	11,9 m
3,0	0,75	3,1	5,2 m	7,4 m
	1	5,8	6,3 m	8,9 m
	1,5	6,7	7,2 m	10,2 m
	2	8,3	8,1 m	11,5 m
	3	11,8	9,0 m	12,7 m

Turbine sprinkler (p/n): 90478				
Bar		l/min		
1,0	0,5	1,5	8,5 m	12,0 m
	0,75	2,2	9,6 m	13,6 m
	1	3,5	9,0 m	12,7 m
	2	7,9	11,4 m	16,1 m
	2,5	8,4	10,2 m	14,4 m
	3	11,4	10,4 m	14,7 m
	4	13,6	12,1 m	17,1 m
	6	19,8	13,3 m	18,8 m
2,0	0,5	1,7	9,1 m	12,9 m
	0,75	2,6	9,8 m	13,9 m
	1	4,2	9,1 m	12,9 m
	2	8,7	11,6 m	16,4 m
	2,5	9,5	10,7 m	15,1 m
	3	12,9	10,7 m	15,1 m
	4	15,5	12,8 m	18,1 m
	6	22,0	14,0 m	19,8 m
3,0	0,5	1,9	8,8 m	12,4 m
	0,75	3,0	9,8 m	13,9 m
	1	4,9	9,8 m	13,9 m
	2	9,5	11,6 m	16,4 m
	2,5	10,6	11,0 m	15,6 m
	3	14,4	11,0 m	15,6 m
	4	17,4	13,4 m	19,0 m
	6	24,2	14,6 m	20,6 m
8	31,0	13,7 m	19,4 m	