

EG18X Smokes

Pyrotechnic device for outdoor use only by persons of 18 years of age and over

GENERAL INFORMATION

- Diameter = 55 ± 5 mm
- Length = 112 ± 5 mm
- Net Explosive Quantity (NEQ) = $130 \pm 20g$
- Total Weight (GW) = $290 \pm 30g$
- Ignition Type = Wire Pull®
- Effect = Non-toxic coloured smoke
- Smoke Duration = $45s \pm 15s$
- Manufactured date is shown on packaging.
- Don't be a dick with our products.

COLOURS AND CODES

White = EG18XW; Yellow = EG18XY; Blue = EG18XB; Green = EG18XG, Red = EG18XR; Purple = EG18XP; Orange = EG18XO, Black = EG18XBk, Pink = EG18XPk.

SAFETY INFORMATION AND INSTRUCTIONS

















- Safety Distance = 3m
- Smoke produced from both ends of the device.
- For outdoor use only, do not use indoors.
- Do Not supply to persons under 18 years of age.
- Always use Gloves and Eye protection.
- Do Not carry in pockets, use EG approved pouch.

- Avoid inhalation of smoke.
- Do Not use in confined spaces or places where others cannot easily leave the smoke area.

Smoke output compared to other EG smokes

- Do Not hold while device produces smoke.
- Do Not point at other people.
- Do Not place on or near flammable materials.

INSTRUCTIONS FOR USE
















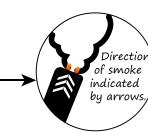

Keep hands and fingers away from fuse area.

- 1. Extend wire and metal ring.
- 2. Pull ring sideways. Do NOT pull upwards. Ignite pointing away from yourself and other people.
- 3. Hot Gas / Sparks / Ash maybe emitted on ignition and / or during effect.
- 4. Immediately throw or place the device on the ground adhearing to the safety information and warnings.

WARNINGS

- Caution, smoke may stain. Protect clothes and surfaces.
- Smoke can drift, be careful not to obscure visibility to vehicles and pedestrians.
- Device gets hot wear gloves and wait at least 10 minutes after the smoke has finished before picking it up.
- The manufacturer will not accept any liability where their pyrotechnics are misused, modified or tampered with.
- Misuse of these products may lead to prosecution.



EG18X Smokes

Hazard Information

Device

Pyrotechnic Article



WARNING FIRE OR PROJECTION HAZARD

KEEP out of reach of children Read label before use Heating may cause fire.

Emitted Smoke (blended from the following)

Chemical Name	CAS No.	EC No.	Hazard Pictogram	Signal Word	Hazard Number
2-Methylanthraquinone	84-54-8	201-539-6	rictogram	† Not Hazardous	Number
1,4-Dihydroxyanthraquinone	81-64-1	201-368-7	¥2	Warning	H410
Quinoline Yellow	8003-22-3	232-318-2	<u>(1)</u>	Warning	H315, H319, H335
Solvent Green 3	128-80-3	204-909-5	<u>(!</u>)	Warning	H315, H319, H335
1-(Methylamino)anthraquinone	82-38-2	201-417-2	<u>(1)</u>	Warning	H315, H319, H335
Solvent Violet 13	81-48-1	201-353-5		† Not Hazardous	
Disperse Blue 14	2475-44-7	219-602-1	<u>(!</u>)	Warning	H315, H319, H335

[†] This substance is not classified as a hazardous substance or mixture according to Regulation (EC) No. 1272/2008 or as dangerous according to Directive 67/548/EEC

REGULATION AND SHIPPING

- UN Number: 0197

- Proper Shipping Name: SIGNALS, SMOKE

- Canadian Approval : EG18X XP2050-T47-160614001

- Category: S.1

- Maximum Packaging: 25 devices / inner box

50 devices / outer carton (max)







It is illegal to send these devices through the postal system or to take on airplanes. Always use an approved courier.

FIRST AID

Inhalation: Excessive inhalation of the smoke produced may cause respiratory irritation and difficulty breathing. Remove

victim to fresh air, loosen clothing around airway, keep warm and rest. Seek medical advice/attention if symptoms

persist.

Burns: Burns may occur if product is not used correctly. Always follow the instructions on the product label.

Place burnt area under clean cold running water for at least 10 minutes. Keep the affected area clean. For serious

burns seek medical attention.

STORAGE

- Hazard Type for Storage = PE4

- You may require a provincial or federal license/permit to store or transport these products.

- Keep packaging closed when not in use.

- Store in a secure cool dry place in the original transport packaging.
- Do not store these products above 50 °C and above 70% humidity.

DISPOSAL

- Once cool, used products can be disposed of in normal waste bins.
- If a product fails to ignite you can either return to the place of purchase using the original packaging. Ensure products are secure within the package and package is properly sealed marked and labelled. Or, submerge device(s) in a bucket of water allowing water to enter the product. Leave soaking for a minimum of 48 hours in a secure area. Dispose of the waste according to local or national regulations.