

Ultra Quiet Air Purifier

Bio
GS

Hello!

Rabbit Air

Owner's manual
Model SPA-625J

For Questions: Call 0120-152-952
Visit us at www.rabbitair.co.jp

Copyright © Rabbit Air 2015. All rights reserved

BioGSMP1504

Rabbit Air

Bio
GS

超静音空気清浄機

Hello!

ユーザーマニュアル
モデル: SPA-625J

お客様相談センター

お問い合わせは0120-152-952まで
www.rabbitair.co.jpをご覧ください

Copyright © Rabbit Air 2015. All rights reserved

BioGSMP1504

Hello!

BioGS空気清浄機を安全にご利用いただくための注意事項

電気製品をご利用の際、火事・感電・ケガの危険を低減するために、
下記の注意事項を厳守してください。

新しいBioGS 2.0をお届けいたします！
このスタイリッシュな箱の中には、お客様にご満足いただきたいという思いと、Rabbit Airの空気を綺麗にするという強いこだわりが込められています。
BioGS 2.0の詳細は、同梱の資料のほか、Rabbit Airのウェブサイト(www.rabbitair.co.jp)からもご覧になれます。ご不明な点がございましたら、どうぞお気軽にお電話ください。ご連絡をお待ちしております！

- 取り扱い方および注意事項をよくお読みのうえ、Rabbit Air空気清浄機をご使用ください。
- 必ずユーザーマニュアルに従って操作してください。
- お子様の近くでご利用の際には、必ず細心の注意を払ってください。
- Rabbit Air空気清浄機は室内のみで使用できます。
- Rabbit Air空気清浄機は、浴室や洗濯室等、湿気の多い場所では使用しないでください。また、Rabbit Air空気清浄機に水がかからないようにしてください。
- Rabbit Air空気清浄機を暖炉または可燃物の近くで使用しないでください。
- 本機には、極性プラグ(片方のピンが幅広になっている)を使用しています。感電の危険を低減するために、極性コンセントに正しい方向でしか差し込めないようになっています。コンセントに正しくはまらない場合は、プラグを回転して差し込んでください。どうしても差し込めない場合は、専門の電気業者にご相談ください。安全上の注意事項を厳守するようお願いします。
- 本機は、身体・知覚・精神的に不自由な方や、経験または知識の少ない方(お子様を含めて)によるご使用に適した機械ではありません。上記に該当する方は、安全確保のために必ず責任者または保護者の方のご指導の下、本機を使用するようにしてください。
- 小さいお子様が本機で遊ぶことのないように、必ず保護者の方によりご指導いただくようお願い致します。

電気を安全にご利用いただくための注意事項

- 本清浄機の対応する電圧は100Vです。
- プラグをコンセントから抜く前に、Rabbit Air空気清浄機の電源を切ってください。
- Rabbit Air空気清浄機を使用しない場合やお手入れの場合は、プラグを抜いてください。
- 感電の危険を低減するために、極性コンセントに正しい方向でしか差し込めないようになっていきます。コンセントに正しくはまらない場合は、プラグを回転して差し込んでください。どうしても差し込めない場合は、専門の電気業者にご相談ください。また、電源プラグを改造しないでください。
- 感電する恐れがあるため、手が濡れたまま清浄機を触らないでください。
- 電源コードは発熱物の上に載せないでください。
- 電源コードやプラグに損傷がある場合、本体を速やかに指定のサービスセンターに送って検査・修理を受けてください。
- Rabbit Airからの書面による許可なしにRabbit Air空気清浄機を自分で修理した場合は、保証が失効となり、本体に重大な損傷をもたらしたり、大怪我を負ったりする場合があります。
- 電源コードを引っ張ってRabbit Air空気清浄機を移動したり持ち上げたり引きずったりしないでください。また、電源プラグをしっかり持って優しくコンセントから抜くようにしてください。
- Rabbit Air空気清浄機がコンセントに接続されている間は、指・体・髪・アクセサリー・衣類を空気の入出口に近づけないようにしてください。

取り付け方

- 空気の入出口が塵などで詰まってしまう可能性のある場所にRabbit Air空気清浄機を置かないでください。
- 空気洗浄機の吹出口と吸込口を壁から60cm以上離してください。

操作ガイド

- 吹出口・吸込口を塞がないでください。
- 発熱する場所の上または近くでRabbit Air空気清浄機を使用しないでください。
- 水蒸気が発生する可能性のある部屋でRabbit Air空気清浄機を使用しないでください。
- Rabbit Air空気清浄機を横に倒したまま使用しないでください。
- 油気や水気の多い場所にRabbit Air空気清浄機を設置しないでください。
- 洗剤・せっけんでRabbit Air空気清浄機を拭かないでください。
- フィルターを装着しないままRabbit Air空気清浄機を作動させないでください。
- プレフィルター以外のフィルターは洗わないでください。
- Rabbit Air空気清浄機を移動する際、必ず取っ手と本体の裏をしっかりつかむようにしてください。

リモコンに関する注意点

- インバーター照明器具や電子光装置がリモコンを誤作動させる恐れがあります。
- 直射日光の当たる場所にリモコンを収納しないでください。熱がリモコンを誤作動させる可能性があります。

エネルギースター・ラベルおよび免責条項:




当製品は米国EPAが定めた厳しい省エネ基準に達したことで「エネルギースター」のラベルを獲得しましたが、それによって米国EPAが「該当製品の使用により室内空気がより健康的になる」という製造者側の主張を是認しているわけではありません。


「エネルギースター」基準に達した製品の省エネの度合いはその製品のクリーンエア供給率 (CADR) と消耗する電力の比率で計算されます。

BioGS 2.0のご紹介


上面図

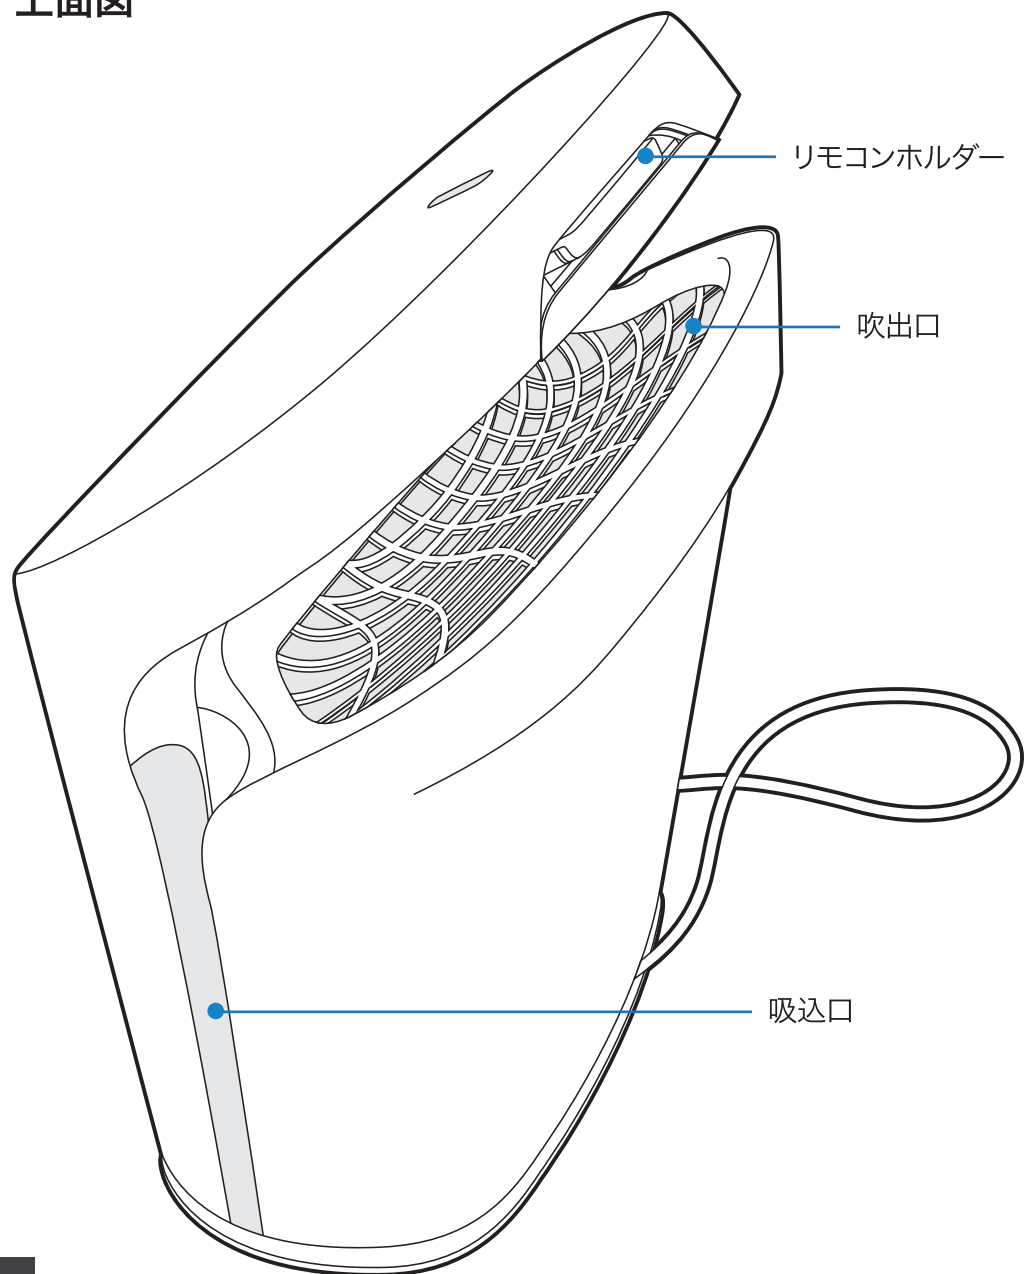

正面図

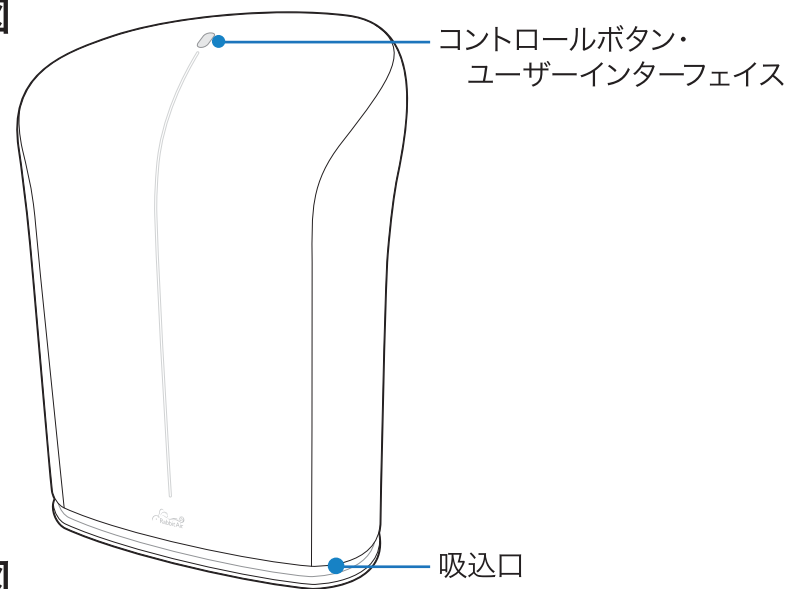

背面図

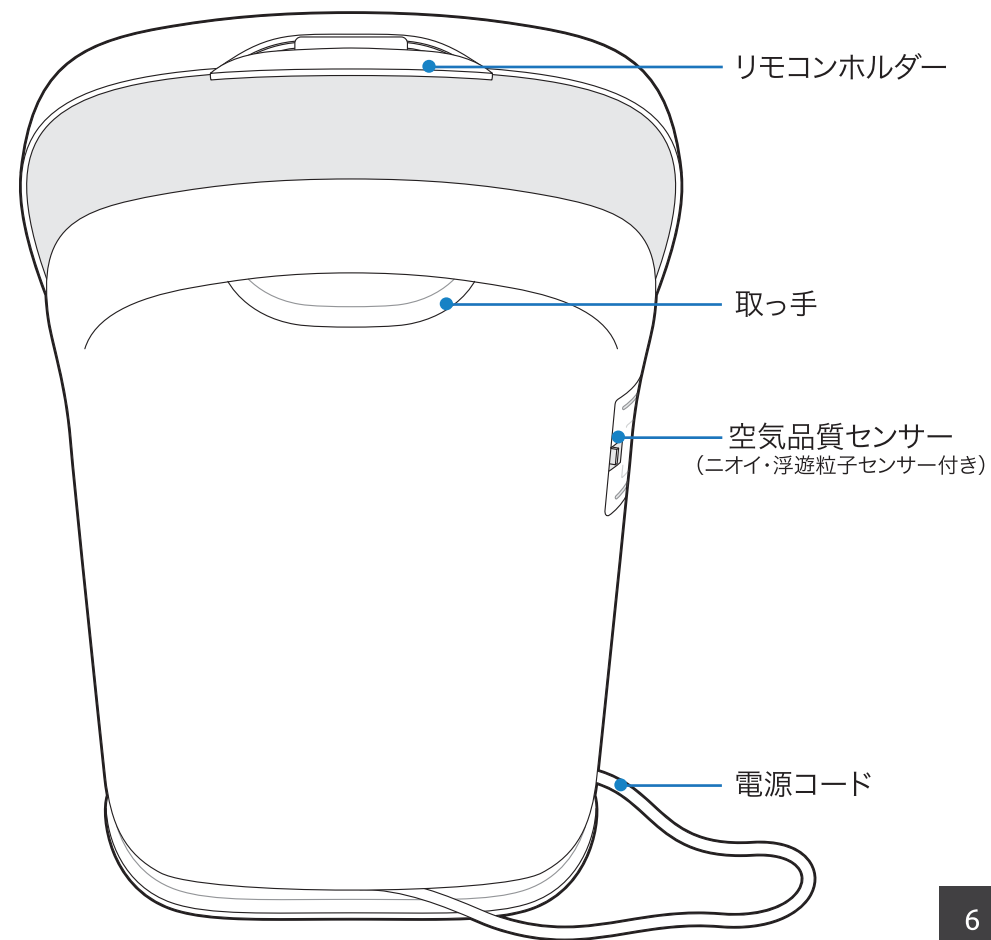

操作パネル (第1部)



デバイス設定 (第3部)



• • • • •

• • • • •

• • •

• • •

•

メインコントロールボタン



BioGSが動作しているときに、コントロールボタンのライトが点灯します。

本体の電源を入れるには、このボタンを押します。

ファンのスピードを変更したり自動モードに切り替える時は、ボタンをもう一度押します。

長押しすると電源が切れます。

リモコン

電源



運転モード




自動モード

切タイマー



マイナスイオン
電源スイッチ

コイン型リチウム電池(3V)



CR 2025



デバイス設定 - 第2部



待機状態が5分間続くと、ユーザーインターフェイスが消灯します。本体またはリモコンのコントロールボタンを押すと点灯します。



検出された空気の汚れ度合いは下記の通り表示されます。



運転モードは下記の通り表示されます。



空気品質センサーの感度は下記の通り表示されます。



セットされたタイマーの時間は下記の通り表示されます。



マイナスイオン発生装置がオンになると、このライトが点灯します。




• 空気品質インジケータ

空気清浄機が自動モードになると、空気品質インジケータは空気のニオイ・浮遊粒子の度合いを測定しはじめます。汚れ度合いが変わる度にユーザーインターフェイスが一瞬点灯します。空気清浄機がマニュアルスピード設定になっている場合は、インターフェイスは点灯しません。



• 運転モード

現在のファンのマニュアルスピード設定を表示します。ライト1つはファン低速を示します。ライト5つはファン高速を示します。自動モードになっている場合、ファンスピードは空気品質に合わせて自動的に調整されます。



• 自動モード

本体が自動モードになっている場合の空気品質センサーの感度を表示します。ファンは空気品質に合わせてスピードを調整します。



• 切タイマー

一定の時間が経つと空気清浄機の電源が切れるように設定します。ライトはそれぞれ4時間、8時間、12時間のタイマー設定を示します。



• マイナスイオン

このライトが点灯した場合、清浄機がマイナスイオンを発生させていることを示します。




メインコントロールボタンで操作することができます。



リモコンで操作することができます。

フィルターステータス - 第3部

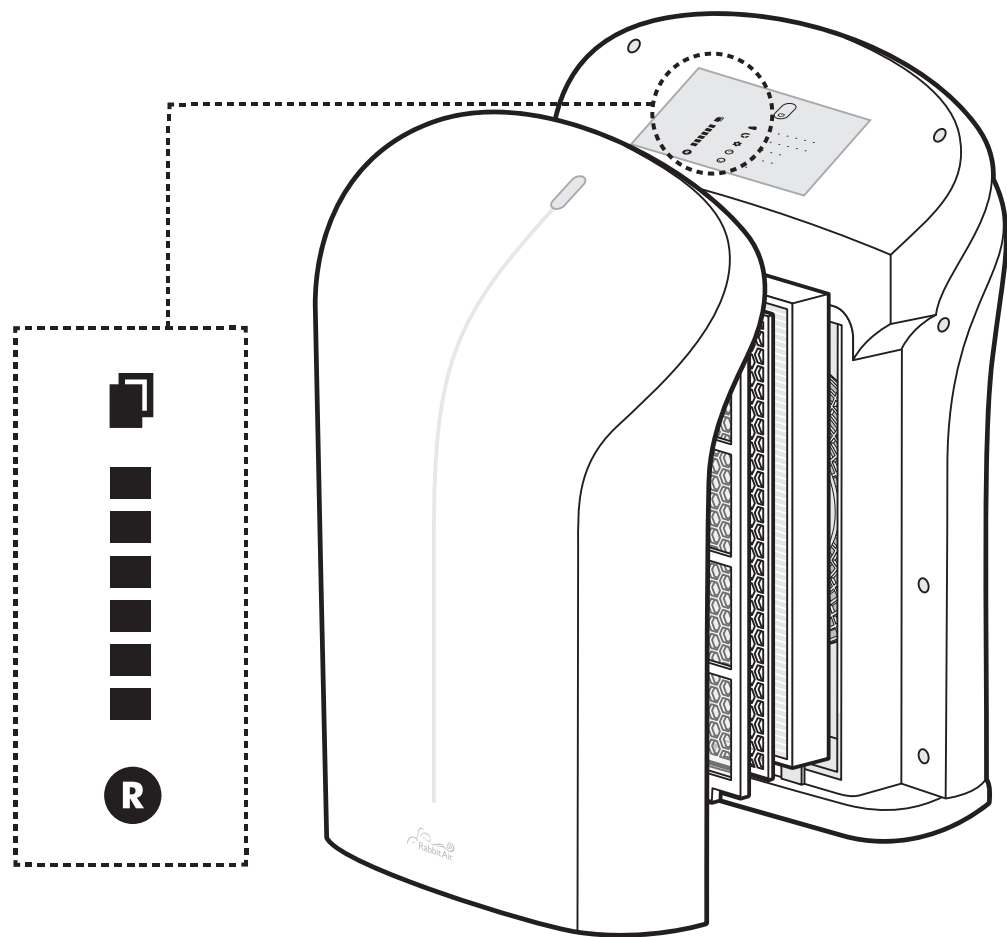

• フィルターメンテナンス・交換ライト

空気清浄機のお手入れが必要な時は、フィルターメンテナンス・交換ライトが点灯します。

点灯＝フィルターを掃除してください。

点滅＝フィルターを交換してください。



• フィルター寿命インジケータ

フロントパネルを外すと、フィルター寿命インジケータが見えます。前回フィルター交換時期から経過した時間を示しています。フィルターは3ヶ月ごとに掃除することが推奨されており、点灯ライト1つ分はフィルター寿命3ヶ月分を意味します。ライトが1つ消えると、フィルターメンテナンス・交換ライトが点灯し、フィルターを掃除する必要があることを知らせます。

LEDライトが6つ点灯＝フィルターが新品です。


LEDライトが1つ点灯＝フィルターを交換する時期が近づいてきています。



• フィルターリセットボタン

フィルターの掃除が終了したら、リセットボタンを押してフィルターメンテナンス・交換ライトを消します。フィルター寿命ライトは時間経過につれ継続して1つずつ消えていきます。フィルターは、18ヶ月ごとに交換することを推奨します。フィルターを交換したら、リセットボタンを5秒間長押ししてフィルター寿命ライトをリセットします。

フィルターのご紹介

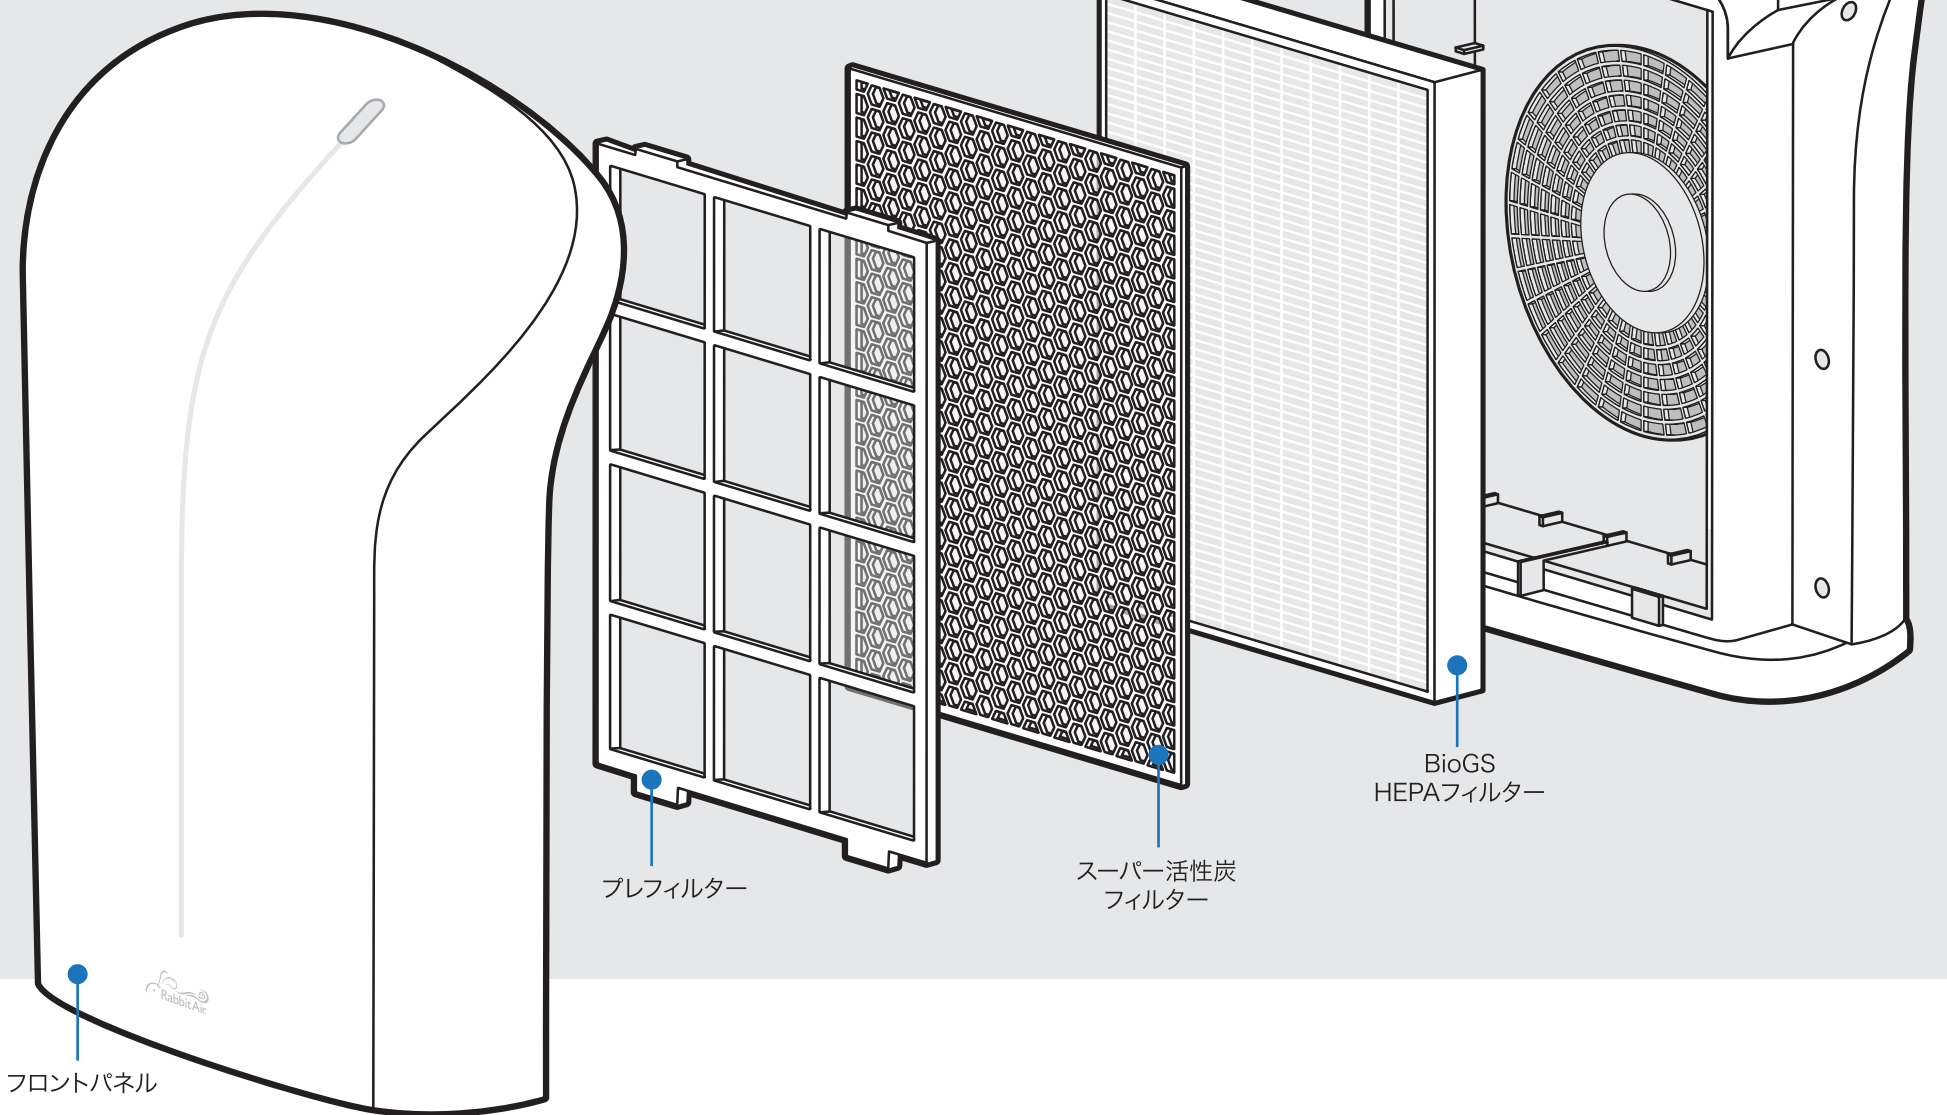


はじめに: 初期設定


BioGS空気清浄機は一般家庭用にデザインされています。
また、品質を保つためにフィルター類はビニール袋に包装されています。
本機を使用する前に、必ずフィルター類のビニール袋を取ってください。

1. 底部からフロントパネルを持ち上げて外します。


2. プレフィルター上部の2つのつまみを押して取り外します。

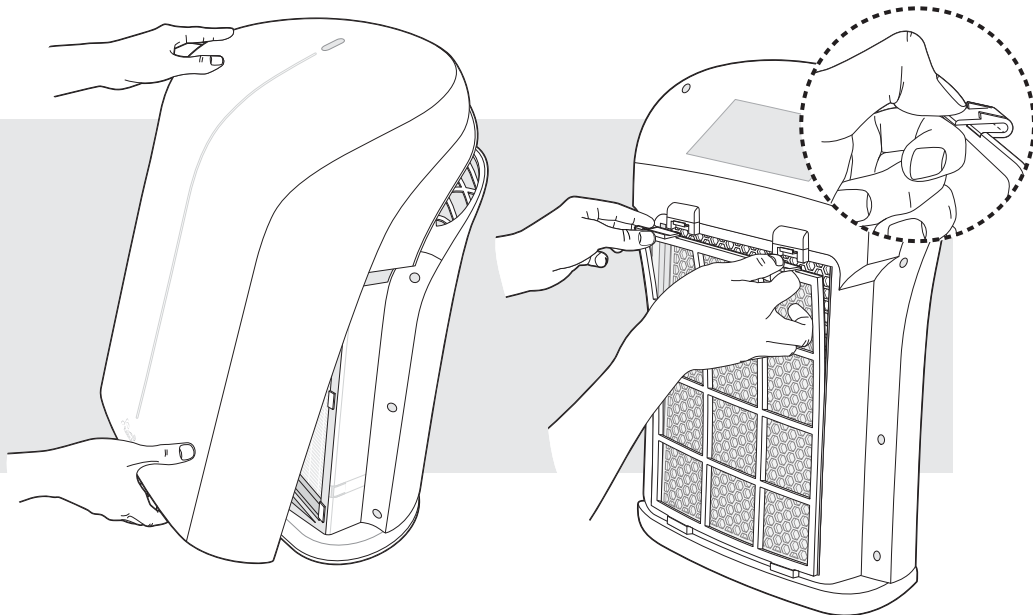


3. スーパー活性炭フィルターを引き出し、包装袋を捨てます。

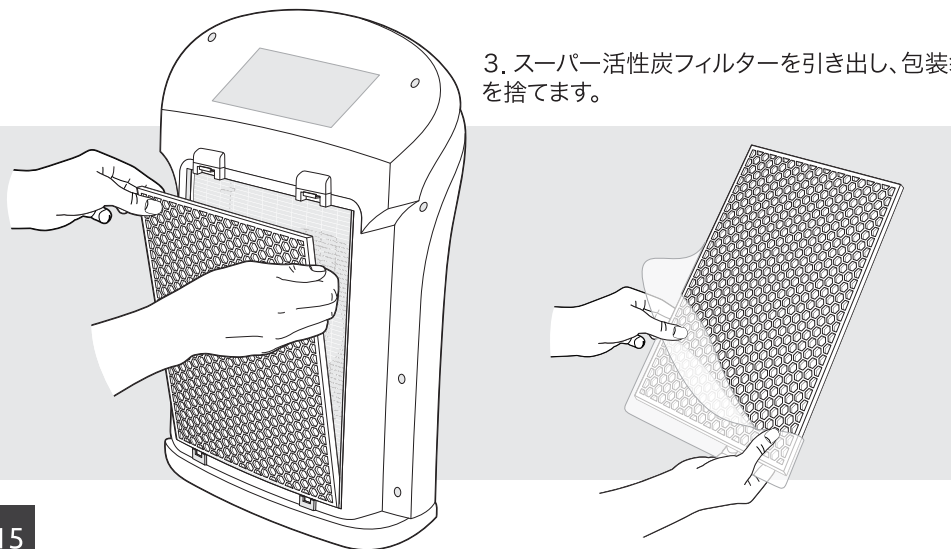


4. HEPAフィルターを外し、包装袋を捨てます。

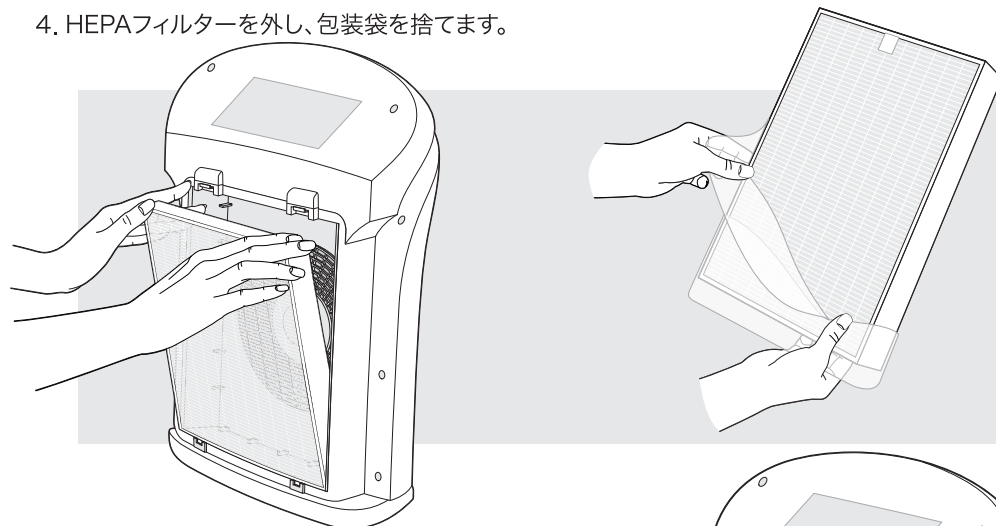

5. BioGS HEPAフィルター → スーパー活性炭フィルター → プレフィルターの順番でフィルターをフィルターケースに戻します。

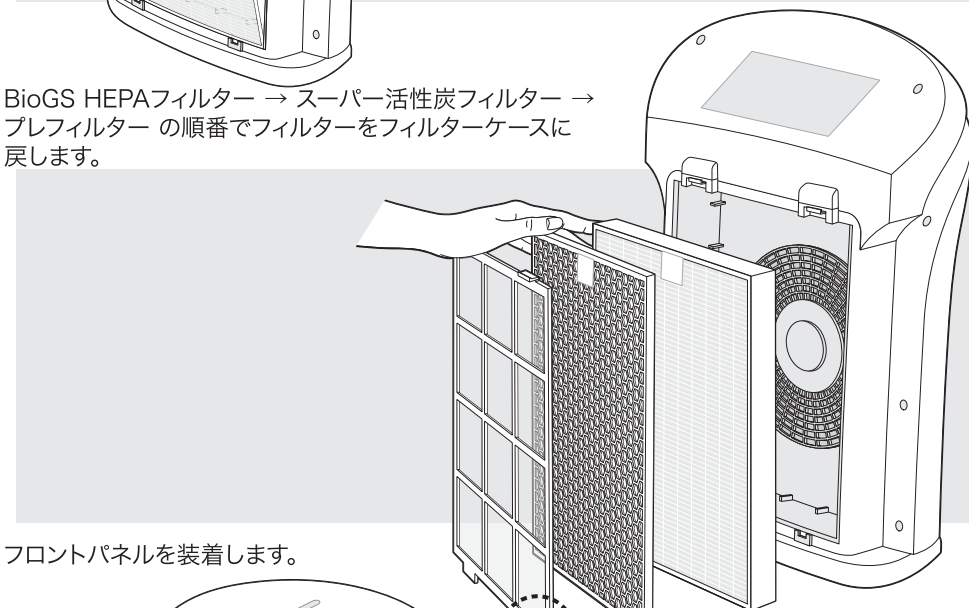

6. フロントパネルを装着します。

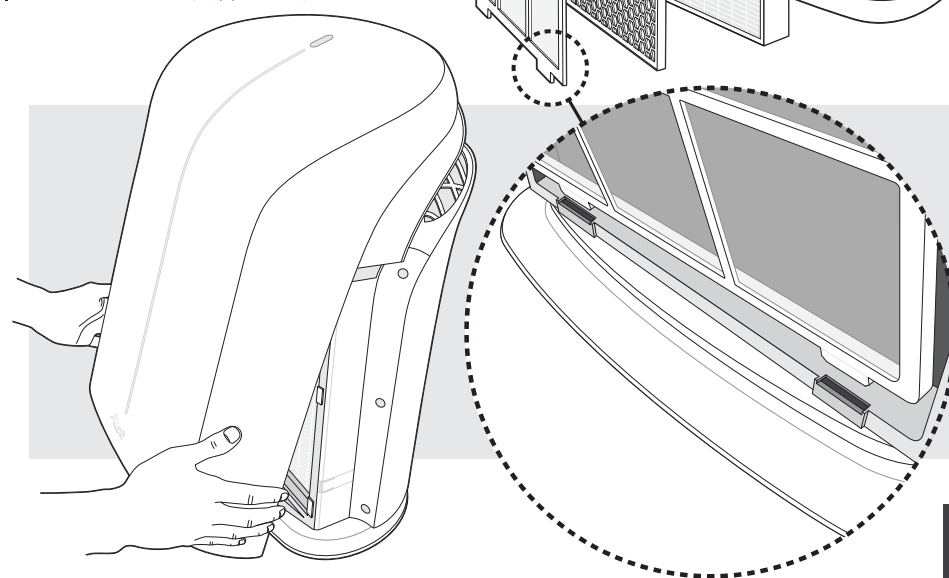


掃除・メンテナンス

空気品質センサーの掃除

(ニオイ・浮遊粒子センサーつき)

6ヶ月毎または必要に応じて空気品質センサーを掃除します。

1. 空気品質センサーのカバーを開けます(本体右側にあります)。
2. 濡れた綿棒でレンズ、ダスト吸入口、ダスト排出口を掃除し、よく乾かします。

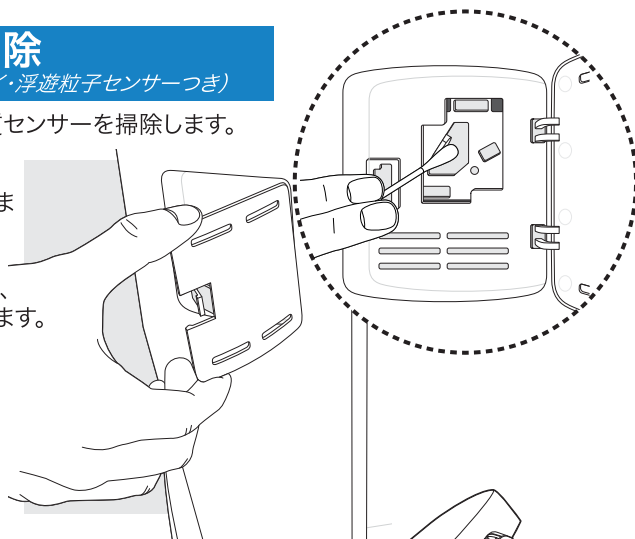

吸込口と吹出口の掃除


吸込口と吹出口を乾いた布または柔らかいブラシで掃除してください。必要があれば、濡れた布をご使用ください。市販の洗剤は使わないでください。

ご注意: 本体内に異物を落とさないように気をつけてください。




フロントパネルと本体表面の掃除

1. フロントパネルを外し、パネルの表面と裏に溜まったほこりを乾いた布または柔らかいブラシで落とします。必要があれば、頑固な汚れを濡れた布で落としてください。市販の洗剤は使わないでください。
2. 清潔で乾いた布で空気清浄機本体の表面を拭きます。

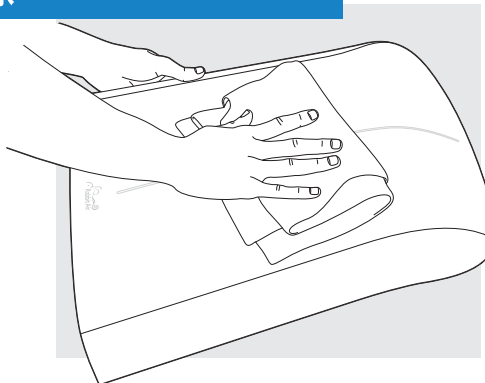

プレフィルターの掃除

室内の空気の汚れ具合に合わせてプレフィルターを掃除してください。

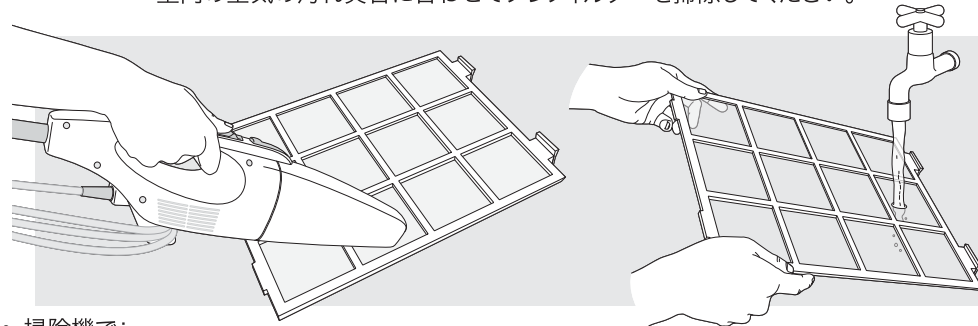

- 掃除機で:
 1. フロントパネルを空気清浄機から外します。
 2. ノズルまたはブラシを取り付けたハンディー掃除機を低速に設定し、プレフィルターにこびりついた埃を吸い取ります。

掃除機ではプレフィルターを十分に綺麗にすることができないようであれば、次の手順で洗ってください。


- 水洗いで:
 1. プレフィルターを本体から外します。
 2. めるま湯を張った洗面器にプレフィルターを入れて2～3分間優しく綺麗になるまで洗ってください。
 3. プレフィルターを水ですすぎます。
 4. プレフィルターの余分な水分をタオルでふき取ります。
 5. プレフィルターを12～24時間放置して乾かします。
 6. 完全に乾いたら、プレフィルターを空気清浄機本体に戻します。

HEPAフィルターの掃除

- 掃除機で:

ノズルまたはブラシを取り付けたハンディー掃除機を低速に設定し、HEPAフィルターにこびりついた埃を吸い取ります。

※水洗い不可※

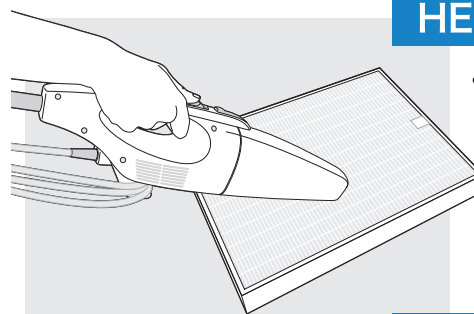


スーパー活性炭フィルターの掃除

- 掃除機で:


ノズルまたはブラシを取り付けたハンディー掃除機を低速に設定し、スーパー活性炭フィルターにこびりついた埃を吸い取ります。

※水洗い不可※

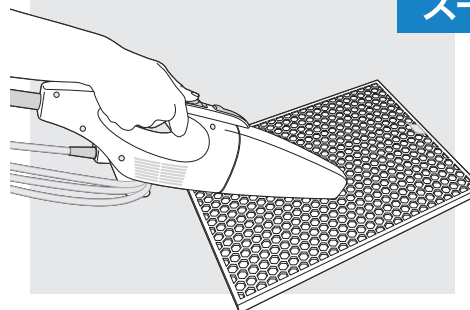

フィルターのお手入れ*

交換の目安は一般家庭で使用する場合の概算です。

フィルター類	交換の目安	掃除の目安
 プレフィルター	交換不要・水洗い可	約1ヶ月
 BioGS HEPAフィルター	約18ヶ月	約3ヶ月
 スーパー活性炭フィルター	約18ヶ月	約3ヶ月

*24時間毎日稼動する場合

フィルター類の交換


フィルターを掃除・交換する際は、本体の電源プラグを抜いてください。
また、使用状況によってフィルターの交換時期が早まる場合があります。

プレフィルターは交換不要

プレフィルターは交換する必要がありません。
定期的にお掃除が必要です。

プレフィルターは再利用できます、
交換する必要がありません。

1. プレフィルター上部の2つのつまみを押して取り外します。
2. プレフィルターは再利用し、その他のフィルター類を交換します。


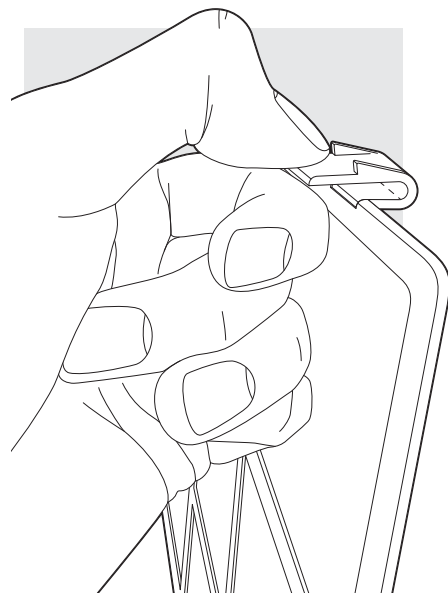


スーパー活性炭フィルターの交換

約18ヶ月

スーパー活性炭フィルターは再利用できないので、使用後捨ててください。

1. 使用済のスーパー活性炭フィルターを引き出して処分します。
2. 新しいスーパー活性炭フィルターをビニール袋から出して、BioGS本体に装着します。

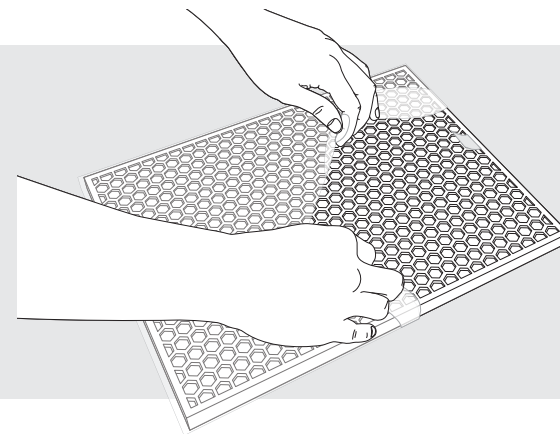
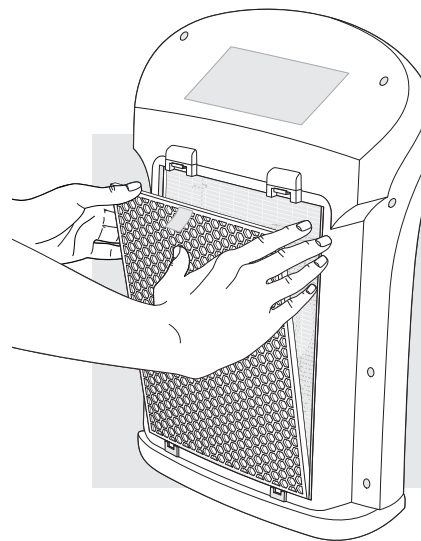


BioGS HEPAフィルターの交換

約18ヶ月

HEPAフィルターは再利用できないので、使用後捨ててください。

1. 使用済のHEPAフィルターを引き出して処分します。
2. 新しいHEPAフィルターをビニール袋から出して、BioGS本体に装着します。

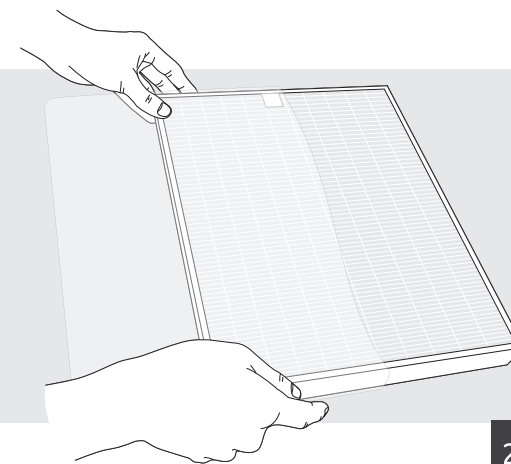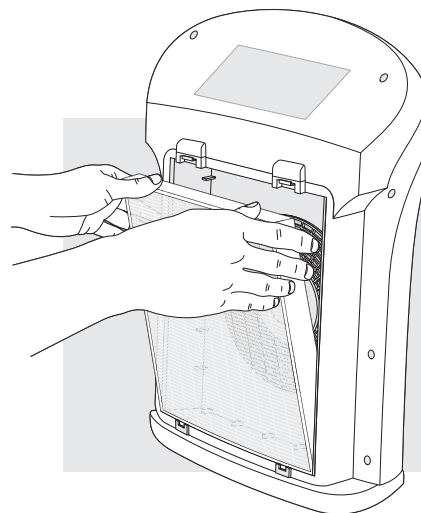

限定保証

Rabbit Airはご購入の空気清浄機(以下「製品」)に材質または製作上の欠陥がないことをご購入の日からの5年間保証します。本保証を有効にするために、ご購入から90日間以内にwww.rabbitair.co.jp/warrantyにてオンラインで製品保証登録を行ってください。製品が正常に機能するために、本マニュアル推奨の純正のRabbit Air交換用フィルター類をご使用ください(以下「限定保証」)。限定保証期間中は、商品の修理または交換のみとなります。

フィルター類の交換については、本限定保証が適用されません。製品が誤動作または故障した場合、問い合わせセンターにご相談ください。返品が必要な場合、承諾番号をご明記のうえ、該当するサービスセンターまでご郵送いただけます。

本限定保証は、Rabbit Airやその子会社、または当社認定の再販業者から新品の製品を購入した方本人のみ適用します。

下記については、保証が適用されません。(「保証に該当しない製品」):

- (i) 材質や製作上の欠陥がない製品;
- (ii) 指摘された欠陥現象がRabbit Airにて再現できない製品;
- (iii) 「サンプル」または「現品限り」の品として販売された製品;
- (iv) 下記のいずれかに該当する場合:
 - (a) Rabbit AirまたはRabbit Air認定の代表者以外の者による改造・改変・修理・メンテナンスを受けた製品;
 - (b) 該当説明書類に沿わない取り扱い・保存・取り付け・検査・使用をされた製品;
 - (c) 乱用・不注意による過失・事故・誤用された製品;
 - (d) 電源の故障・変動・中断を経たり不安定な電源に接続された製品;
 - (e) 火災・浸水・竜巻・地震・暴風・豪雪・雷・暴動・反乱・戦争行為・その他の災害を含む不可抗力を経た製品。

制限および除外条項

上記で言及された以外の明示的保証はありません。保証者は、本製品の使用によって発生した、または本保証に対する如何なる違反によって起きた付随的または結果的な損失への責任を負いません。商品性および特定目的の適合性の保証を含むすべての明示的および黙示的保証は、上記に示された該当保証期間内に限ります。地域によっては、付随的または結果的な損失の責任の除外や制限、または黙示的保証の保証期間の制限を認めていないため、上記の制限および除外条項が必ずしも適用されるとは限りません。本保証はお客様に特定の法的権利を与えており、また地域によってはその他の権利が付与する場合があります。保証期間内に製品に不都合が発生した場合、当社は無料修理または交換いたします。ただし、送料がかかる場合がありますのでご了承ください。保証に関するサービスについては、Rabbit Airまでお問い合わせください(フリーダイヤル0120-152-952またはCS@rabbitair.co.jpまで)。

“

Rabbit Airの5年保証は、製品の品質に対する自信の表明と、その品質を100%サポートする証です。
保証は工費をカバーしており、保証にかかる工費はすべてRabbit Airが負担いたします。

”



Bio[®]
GS 保証

www.rabbitair.co.jp/warrantyにてご登録ください。

今すぐご購入いただいた空気清浄機のオンライン登録を行い、下記のサービスを受けましょう。

• 製品の保証

ご購入いただいた製品および購入情報をご登録いただくと、ご購入の日付と保証内容を弊社で確認することができるようになります。ご登録いただくと、購入証明の原本を紛失した場合や、お持ちの製品の修理や整備が必要となった場合に役に立ちます。

• 所有者の証明

お持ちの製品の型番、シリアルナンバー、その他の情報は弊社にて保管いたします。弊社の5年保証を受けるために、ご購入から90日以内に登録ください。

Limited Warranty

Rabbit Air warrants that your air purifier ("Product") will be free from defects in material or workmanship for a period of five (5) years from the date of purchase. To activate the warranty, please complete the warranty registration form online at www.rabbitair.co.jp/warranty within 90 days of your air purifier purchase. To ensure product performance, the filters should be replaced with authentic Rabbit Air replacement filters as recommended in this manual ("Limited Warranty"). Rabbit Air's obligation and liability under this limited warranty is limited to repairing or replacing (at our sole discretion) the defective product. The limited warranty does not cover replacement filters. In the event of product malfunction or failure, please contact Rabbit Air to obtain a return authorization number and the address of the service center. The return authorization number must be clearly written on the outside of the shipping box or the shipment may be refused. This warranty extends only to the original purchasers who acquire new product from Rabbit Air, its subsidiaries, or its authorized resellers.

Rabbit Air will have no warranty obligation with respect to the following products ("Ineligible Products"): (i) Products that have no defects in materials or workmanship; (ii) Products with defects that are not reproducible by Rabbit Air; (iii) Products marked as "sample" or sold "AS IS; or (iv) Products that have been subject to: (a) any modifications, alterations, repair, or servicing by any party other than Rabbit Air or Rabbit Air's authorized representatives; (b) handling, storage, installation, testing, or use not in accordance with the applicable Documentation; (c) abuse, negligence, neglect, accidents, abuse or misuse; (d) any breakdowns, fluctuations, or interruptions in electric power or connected to improper power supply; or (e) any Acts of God, including fire, flood, tornado, earthquake, hurricane, excessive snow, lightning, riot, insurrection, act of war, or other disaster.

Limits and Exclusions

There are no express warranties except as listed above.
THE WARRANTY SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with the product develops during the warranty period, we will repair or replace it without charge to you. A shipping fee may apply. To obtain service under warranty, please contact Rabbit Air at 0120-152-952 or by e-mail at CS@rabbitair.co.jp

Register your air purifier online now for:

- Product Protection
By registering your product and purchase information, we can confirm the date of purchase to secure your warranty. This confirmation serves as security in the event that your original proof of purchase is lost, or in case your unit needs any servicing in the future.
- Proof of Ownership
Your model number, serial number, and other information will be kept in our files. Please complete and return this registration within 90 days from purchase in order to receive our 5-year limited warranty.

For Questions: Call 0120-152-952
Visit us at www.rabbitair.co.jp



Bio ^{GS} **Warranty**
Register online at www.rabbitair.co.jp/warranty

The Rabbit Air five-year warranty is a statement of our confidence in the quality of our products and an assurance that we stand behind that quality 100 percent of the time. Labor is included in our warranty; when warranty work is performed, Rabbit Air pays the bill.

”

”

Filter Cleaning and Replacement Schedule*

The lifespan of the filters is estimated based on normal residential use.

Filters	Filter life	Cleaning
Pre-Filter	Permanent/Washable	Every month
BiOGS HEPA	18 Months	Every three months
Charcoal-Based Activated Carbon	18 Months	Every three months

**Based on 24/7 operation*


Replacing the Filters

Always unplug the unit before cleaning/replacing the filters.
The lifespan of the air purifier's filters will vary, based on the amount of pollutants in your home.

Replacing the Pre-Filter permanent filter



Do NOT discard the Pre-Filter. It is designed to be cleaned and reused.

- The Pre-Filter is a permanent filter and does not need to be replaced.
1. Pinch the two tabs on top of the Pre-Filter to remove it.
 2. Put the Pre-Filter aside while replacing the other filters.

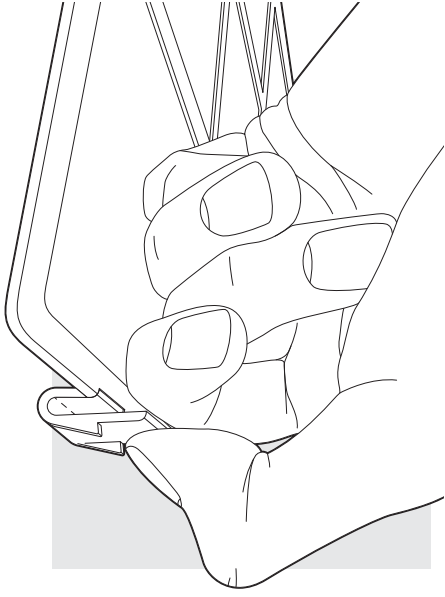



Replacing the Activated Carbon Filter Every 18 Months

- Discard the old Activated Carbon Filter. This filter cannot be reused.
1. Pull out the old Activated Carbon Filter and discard.
 2. Remove the new Activated Carbon Filter from its plastic wrapping and place in the BiOGS unit.

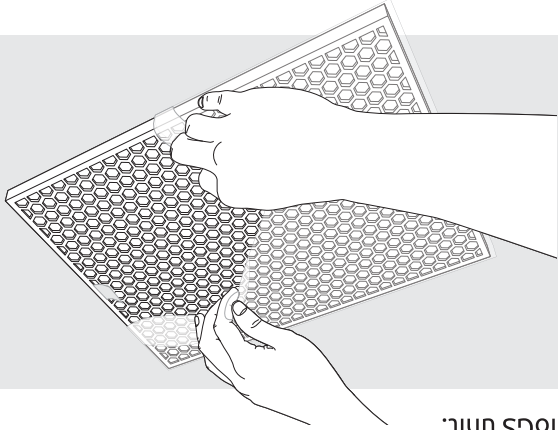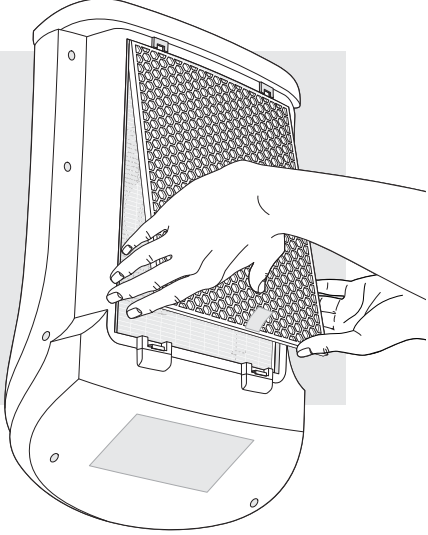

Replacing the BiOGS HEPA Filter Every 18 Months

- Discard the old HEPA Filter. This filter cannot be reused.
1. Remove and discard the old HEPA Filter.
 2. Remove the new filter from its plastic wrapping.
 3. Place the new HEPA Filter in the BiOGS unit.

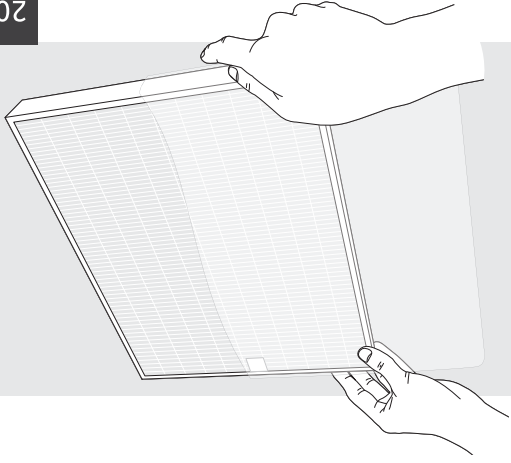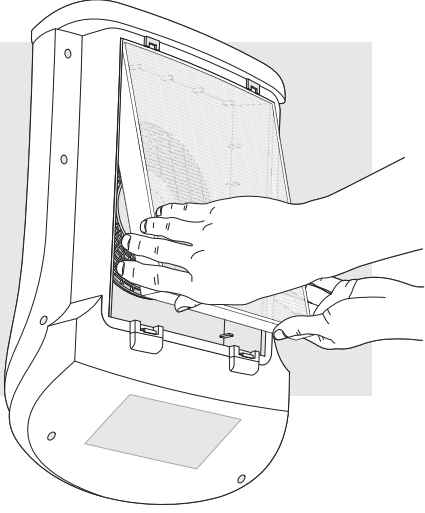


Cleaning and Maintenance

Cleaning the Air Quality Sensor

(Includes particle and odor sensors)

Clean the air quality sensor every six months or as needed.

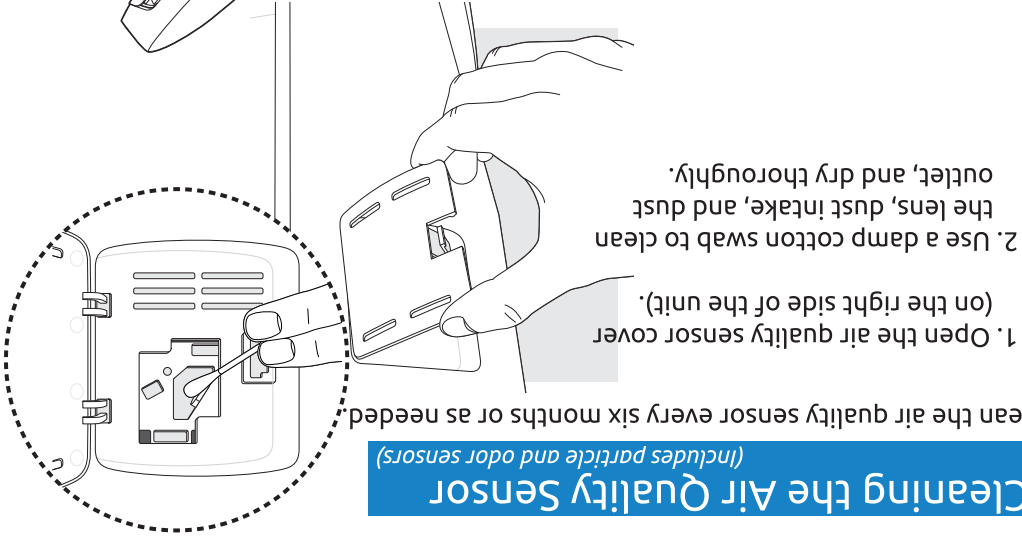

1. Open the air quality sensor cover (on the right side of the unit).
2. Use a damp cotton swab to clean the lens, dust intake, and dust outlet, and dry thoroughly.

Cleaning the Air Intake and Outlet


1. Clean the air intake and outlet with a dry cloth or a soft brush. If necessary, use a damp cloth. Avoid commercial cleaning products.



Caution: Be careful not to drop anything into the unit.


Cleaning the Front Panel and Unit Surface

1. Remove the front panel from the unit and use a dry cloth or soft brush to dust off the front and the back of the panel. If necessary, use a damp cloth to remove stubborn stains and dirty buildup. Avoid commercial cleaning products.
2. Use a clean, dry cloth to wipe the external surfaces of the air purifier.

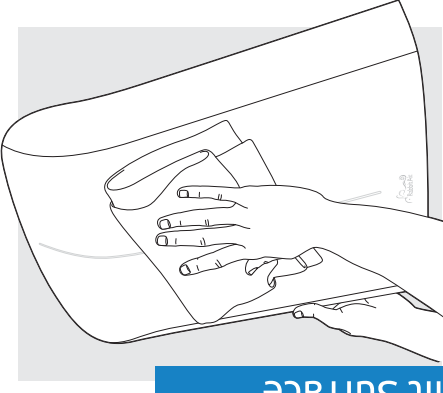

Cleaning the Pre-Filter

The Pre-Filter should be cleaned according to the level of pollution in the air of the room.

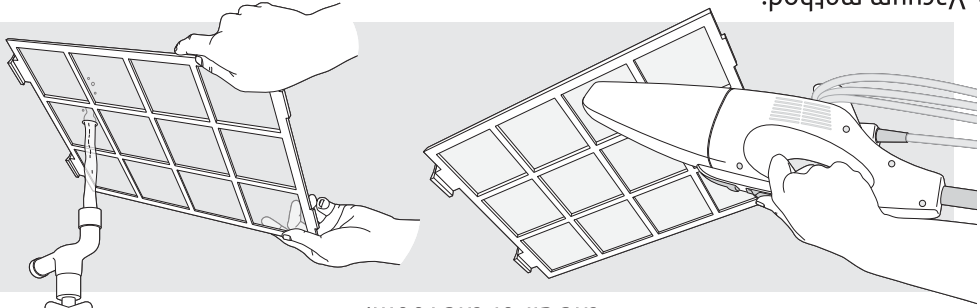

- Vacuum method:
 1. Remove the front panel from the air purifier.
 2. Run a handheld vacuum cleaner with a nozzle or brush attachment on a low power setting along the Pre-Filter to remove visible particles.

If vacuuming does not seem to sufficiently clean your Pre-Filter, please follow the steps below to wash it.

- Washing method:
 1. Remove the Pre-Filter from the unit.
 2. Fill the sink with lukewarm water and gently wash the Pre-Filter under the water for two to three minutes or until it is completely clean.
 3. Rinse the Pre-Filter with clean tap water.
 4. Use a towel to remove any excess water from the Pre-Filter.
 5. Allow the Pre-Filter to dry for 12 to 24 hours.
 6. When the Pre-Filter is completely dry, place it back into the air purifier.


Cleaning the HEPA Filter

- Vacuum method:
 1. Run a handheld vacuum cleaner on low power setting, or a soft brush, along the HEPA Filter to remove visible particles.



Cleaning the Activated Carbon Filter


- Vacuum method:
 1. Run a handheld vacuum cleaner with a nozzle or brush attachment on low power setting along the Activated Carbon Filter to remove visible particles.

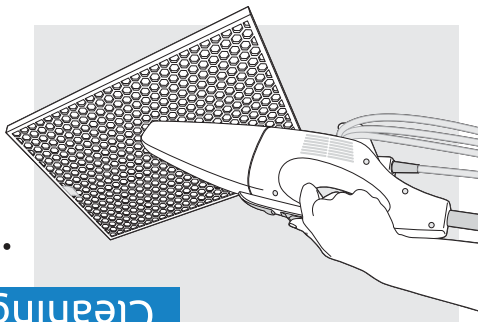


Let's begin - Initial setup

The BioCS Air Purifier is designed for residential use only. To maintain the quality of the filters, they are packaged in plastic. Please remove the filters from the plastic bags before using the unit.


1. Remove the front panel by lifting from the bottom and pulling up.
2. Pinch the two tabs on top of the Pre-Filter to remove it.

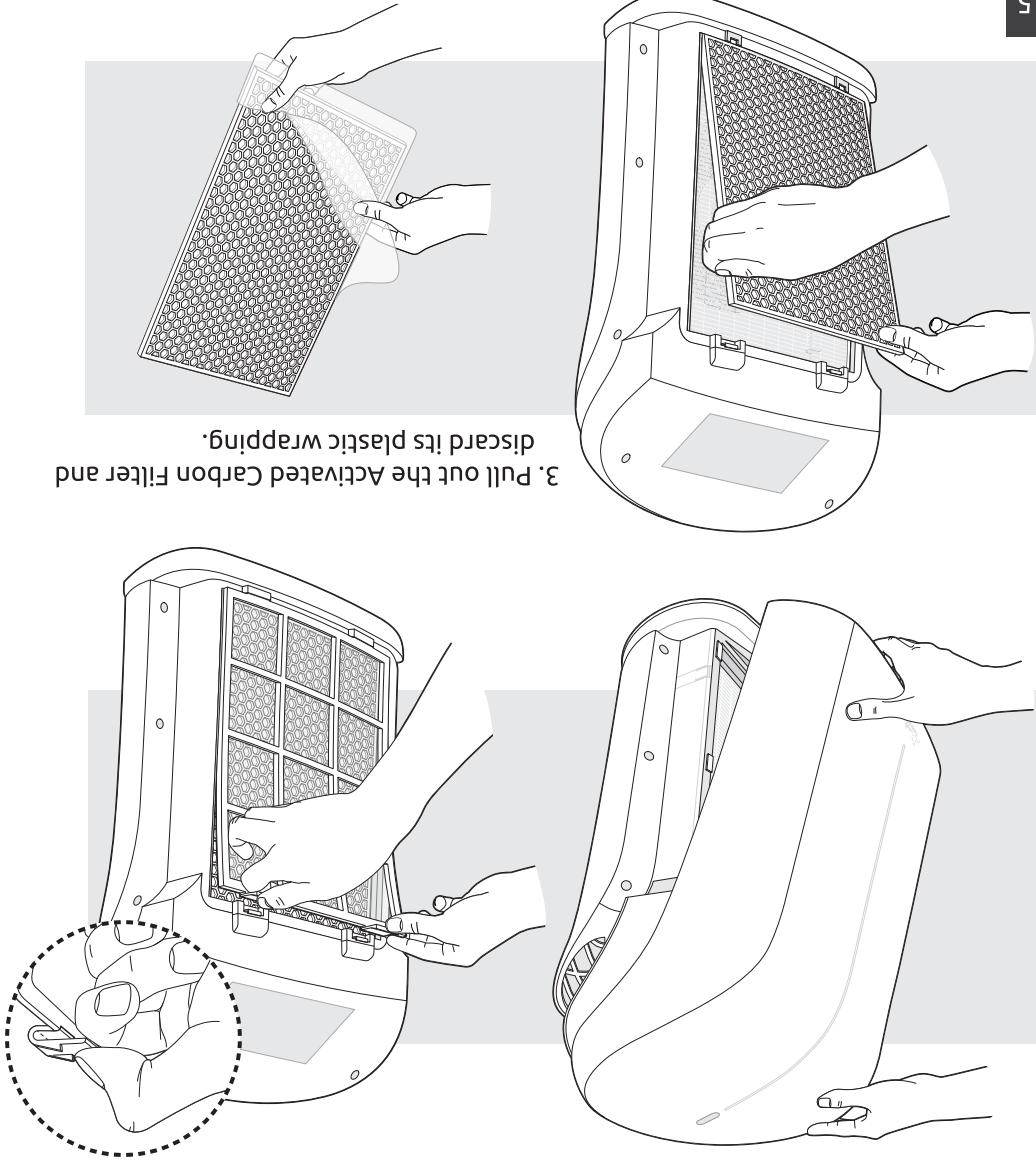

3. Pull out the Activated Carbon Filter and discard its plastic wrapping.

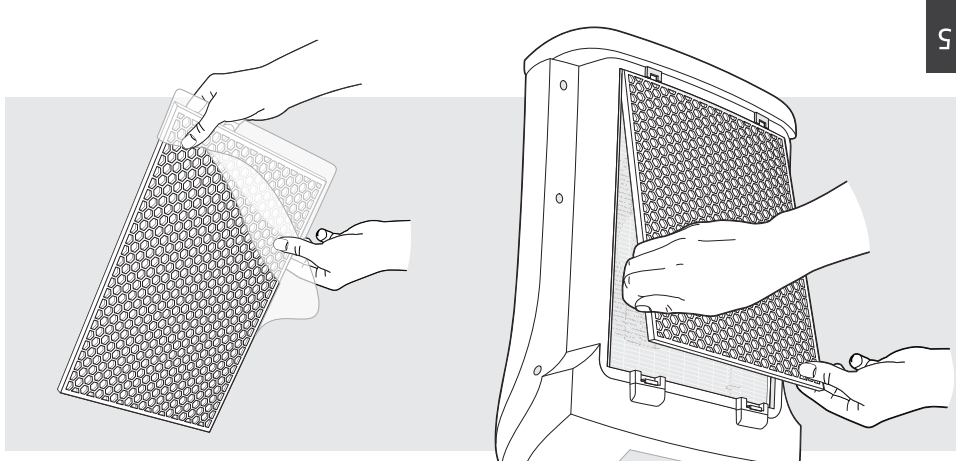


5. Return the filters to the filter case in the following order from back to front:
BioCS HEPA Filter
Activated Carbon Filter
Pre-Filter

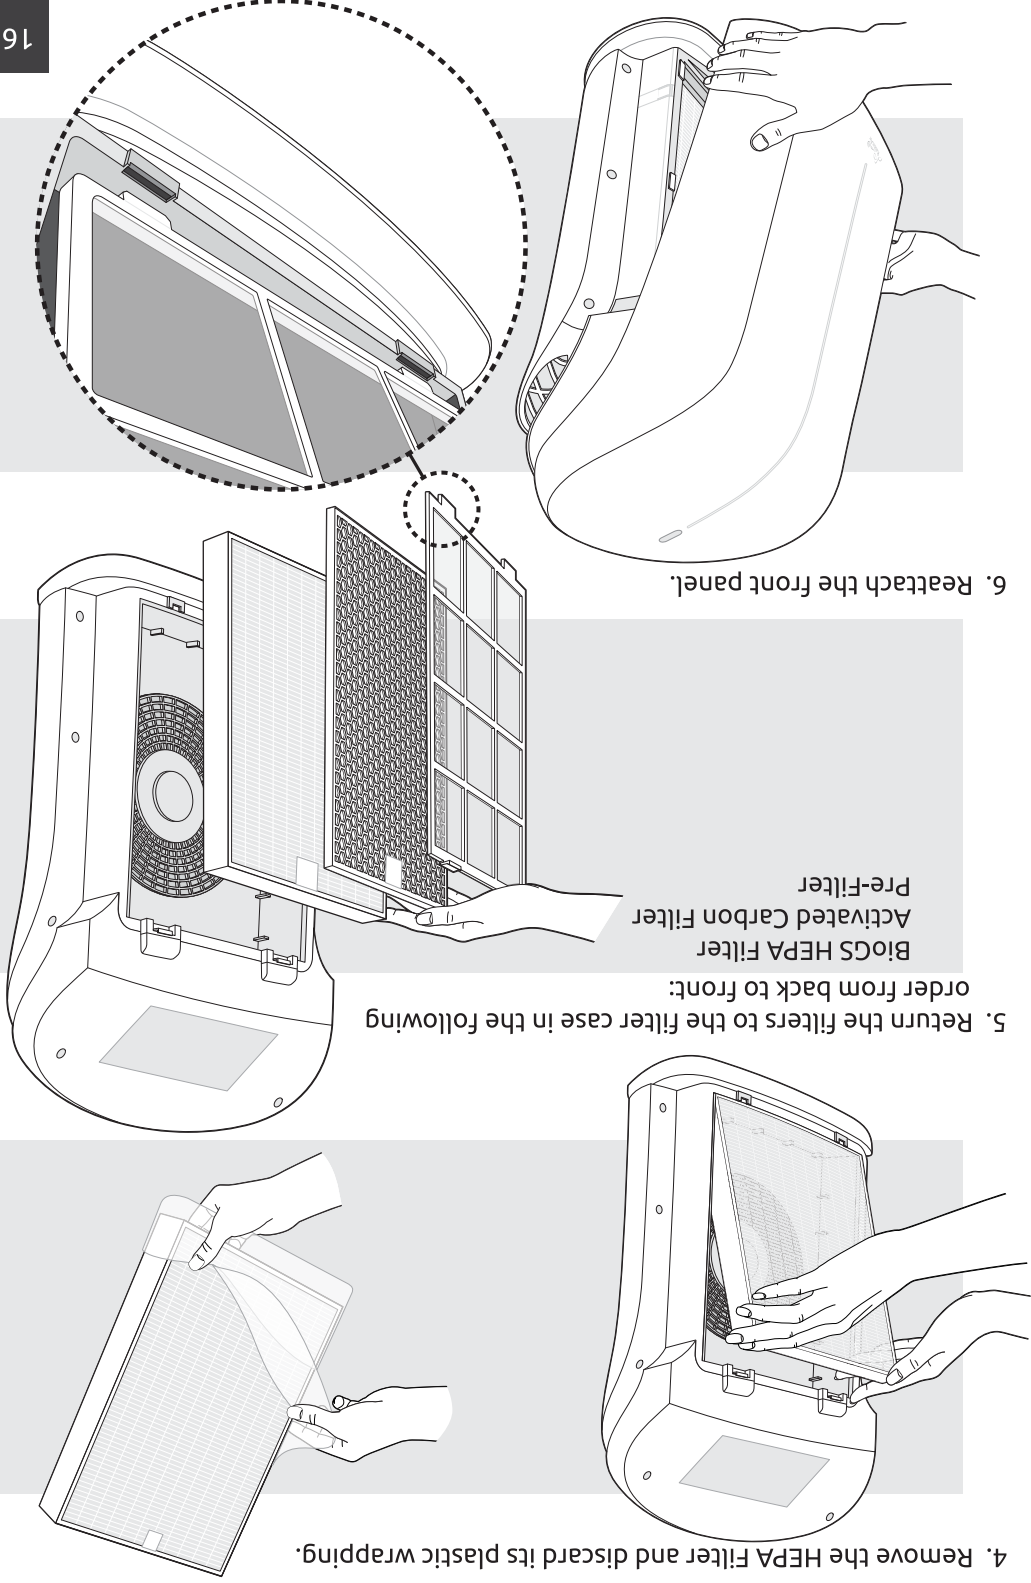



4. Remove the HEPA Filter and discard its plastic wrapping.

6. Reattach the front panel.

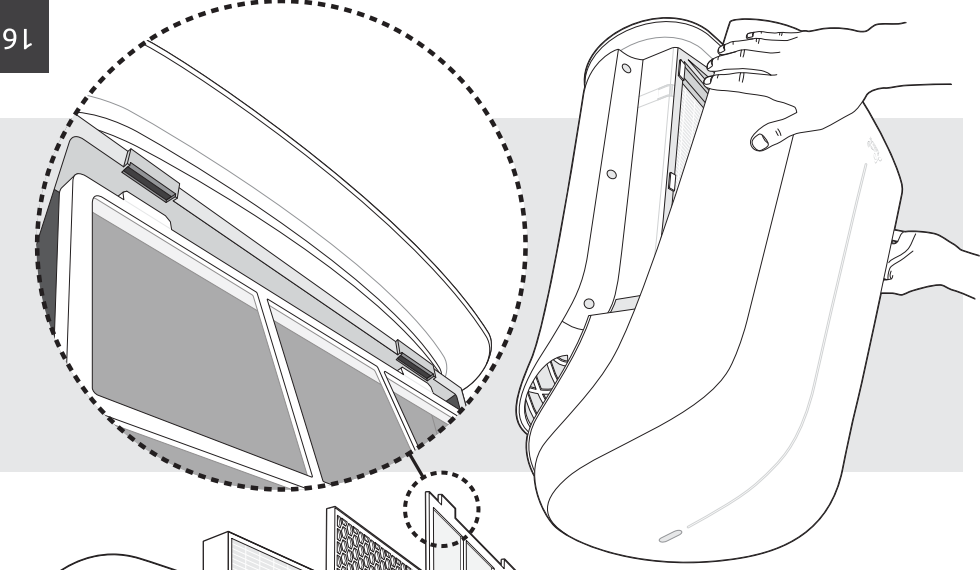

Meet the Filters

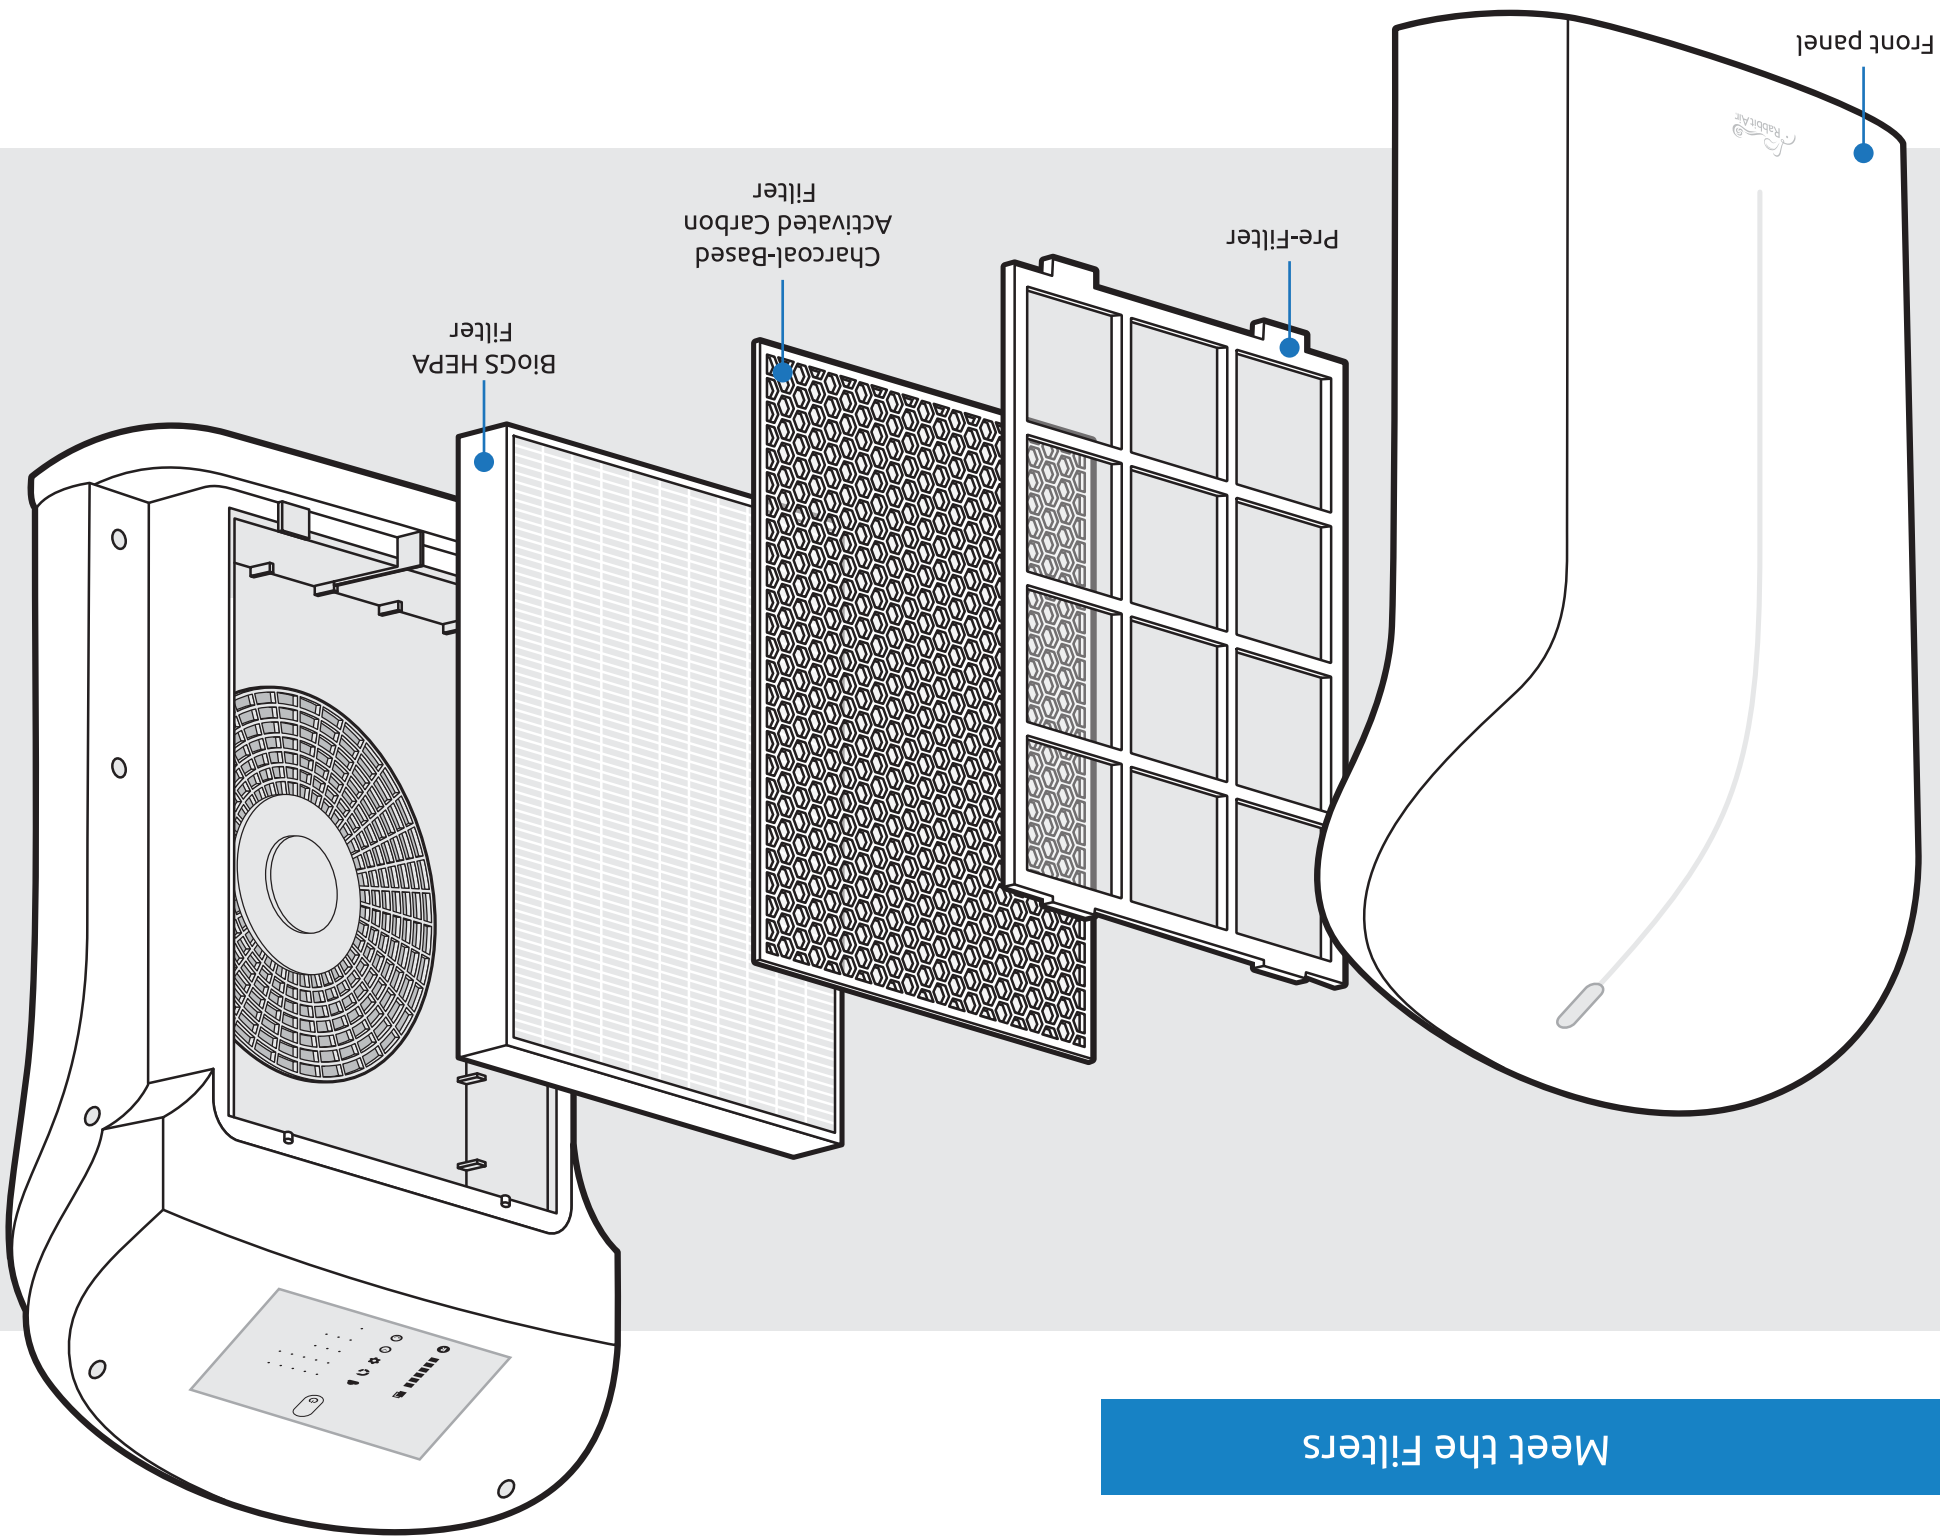

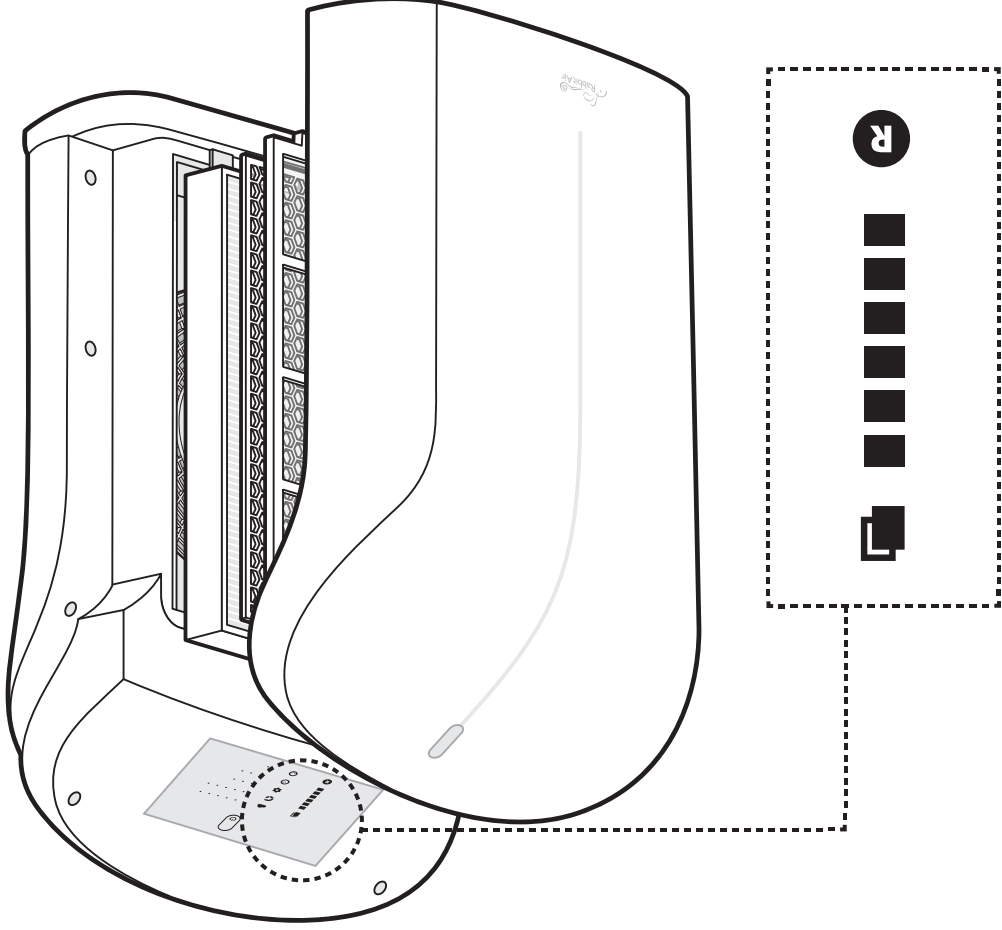

- Filter Maintenance & Replacement Light
The Filter Maintenance and Replacement Light will illuminate when your air purifier needs attention.
Solid light = It's time to clean the filters.
Flashing light = It's time to replace the filters.



- Filter Life Light
The Filter Life Light is visible only when the front panel has been removed. It indicates how much time has passed since the last time the filters were replaced.
Since the filters should be cleaned every three months, each light represents three months of the filters' life. Each time a light goes out, the Filter Maintenance and Replacement Light will illuminate to inform you that it's time to clean the filters.
6 LEDs = The filters are new.
1 LED = The filters should be replaced soon.

- Filter Reset Button
Press this button briefly to turn off the Filter Maintenance and Replacement Light after each cleaning, the Filter Life Light will continue to diminish as time passes.
We recommend replacing the filters every 18 months. After you have replaced them, press and hold for 5 seconds to reset the Filter Life Light.



When the unit has been idle for five minutes, the user interface lights will disappear. To view the display, tap the control button on the unit or remote.

These lights indicate the level of air pollution detected.

Low
Medium
High

These lights indicate the fan speed of the unit.

Low
Medium
High

These lights indicate the sensitivity of the air quality sensor.

Low
Medium
High

These lights indicate how long the timer has been set for.

4 hours
8 hours
12 hours

This light illuminates if the Negative Ion Generator is on.

on/off



• Air Quality Indicator
When the air purifier is in Auto Mode, the Air Quality Indicator will continually monitor the odor and particle levels in the air, the user interface will light up briefly each time the pollution level changes. When the purifier is in a manual speed setting, the interface will not light up.



• Fan Speed
These lights indicate the current manual speed setting. Low fan speed is indicated by a single light. High fan speed is indicated by five lights. When in Auto Mode, the fan speed will adjust according to the air quality.



• Auto Mode
These lights indicate the level of sensitivity of the air quality sensor when the unit is in Auto Mode. The fan adjusts its speed according to the air quality.



• Timer
Set the air purifier to turn off after a specific period of time. One light indicates a four-hour timer, two lights indicate an eight-hour timer, three lights indicate a 12-hour timer.






• Negative Ions
When this light is on, it means the unit is generating negative ions.



This feature can be accessed through the main control button.




This feature can be accessed through the remote.

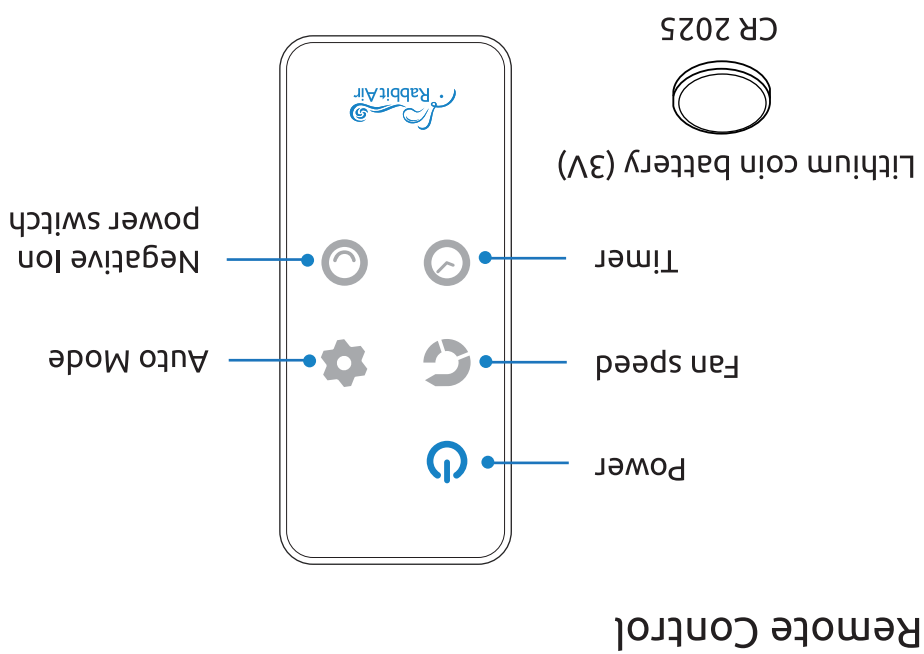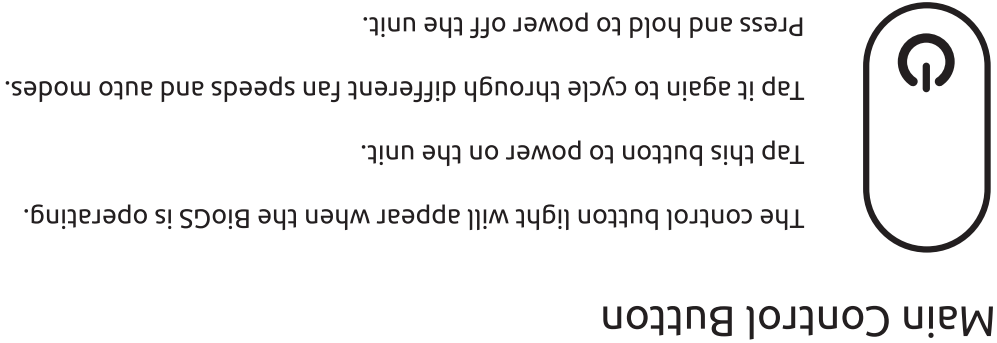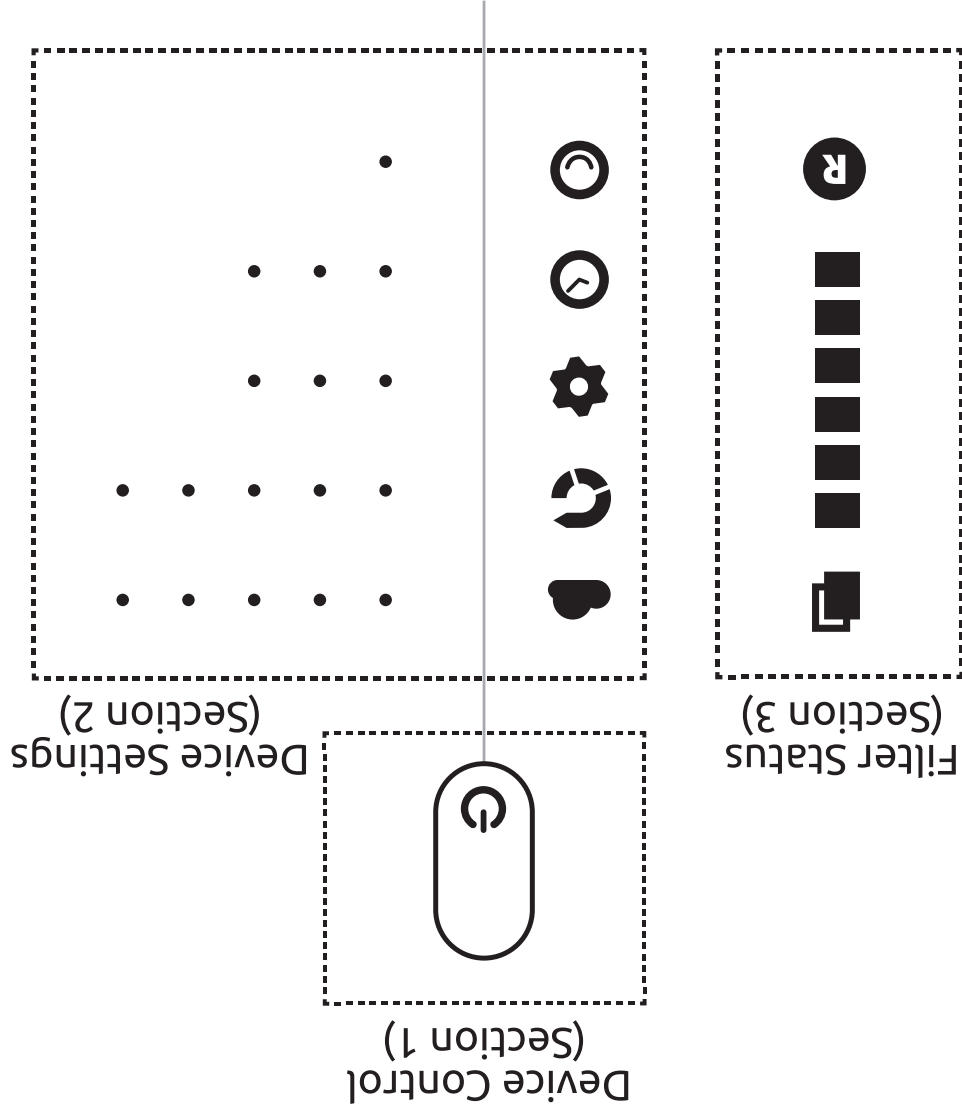


Meet your BIOGS 2.0


Top view

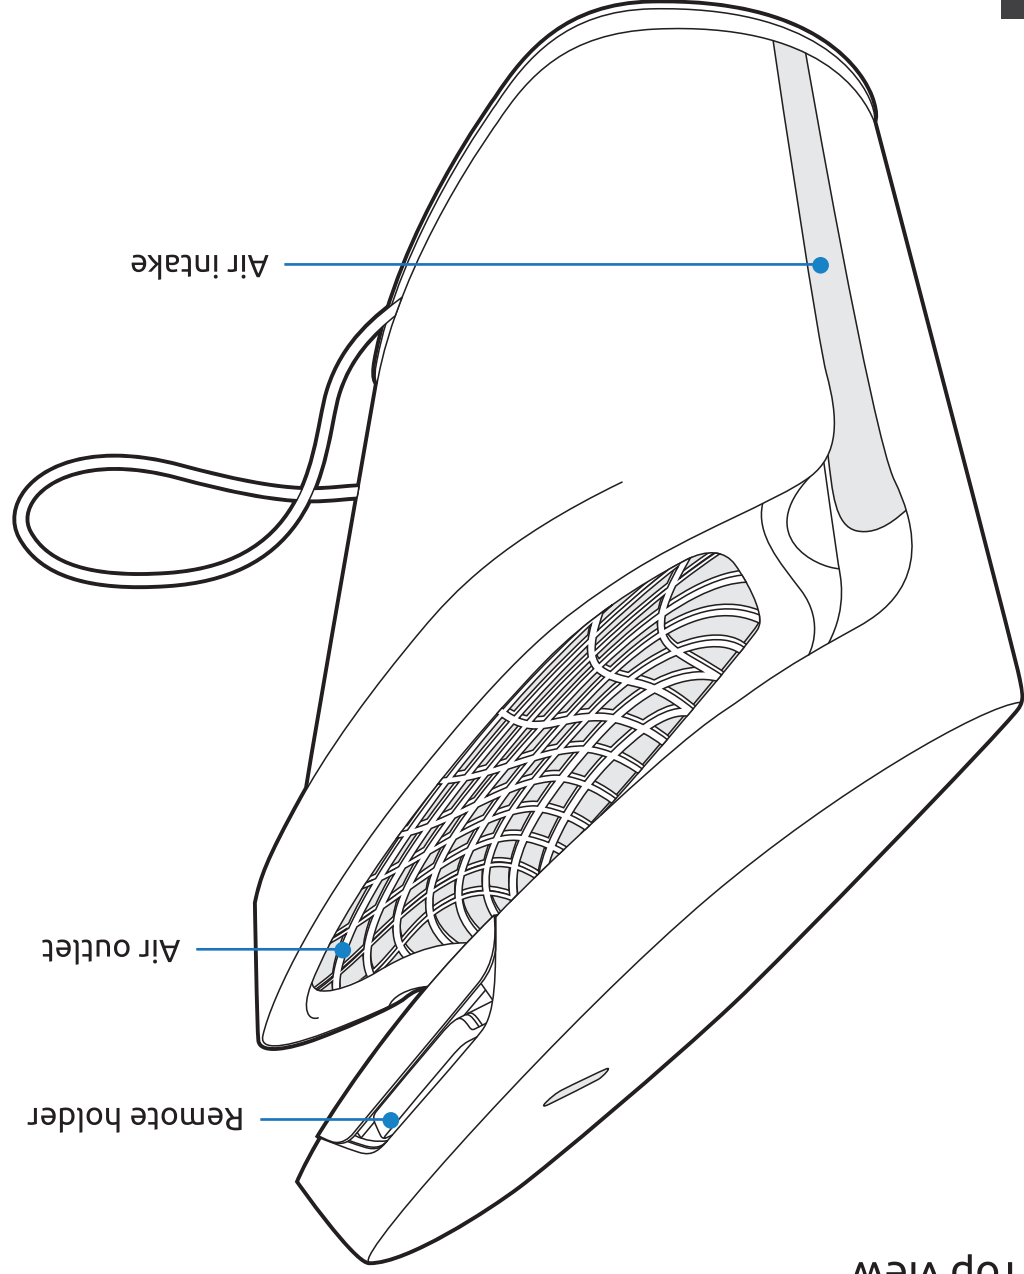

Front view

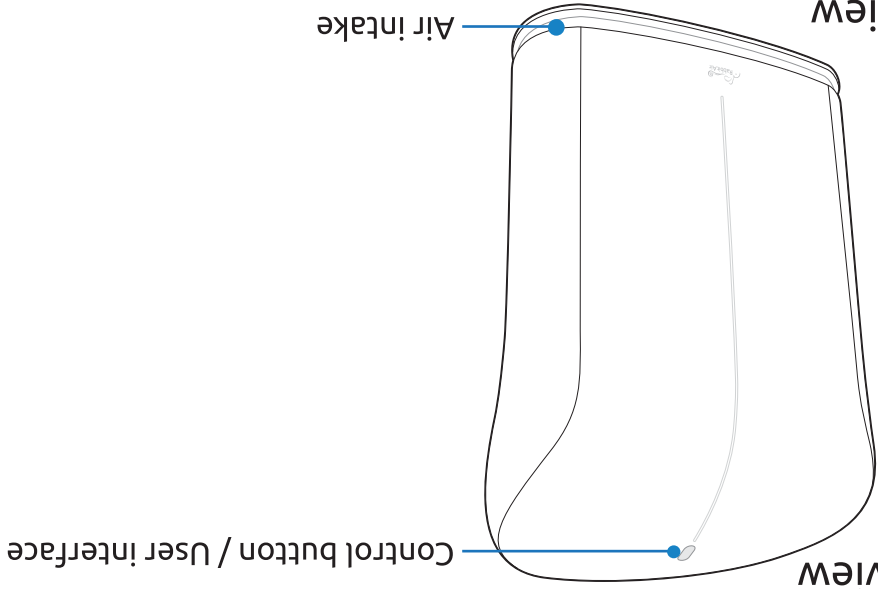

Back view

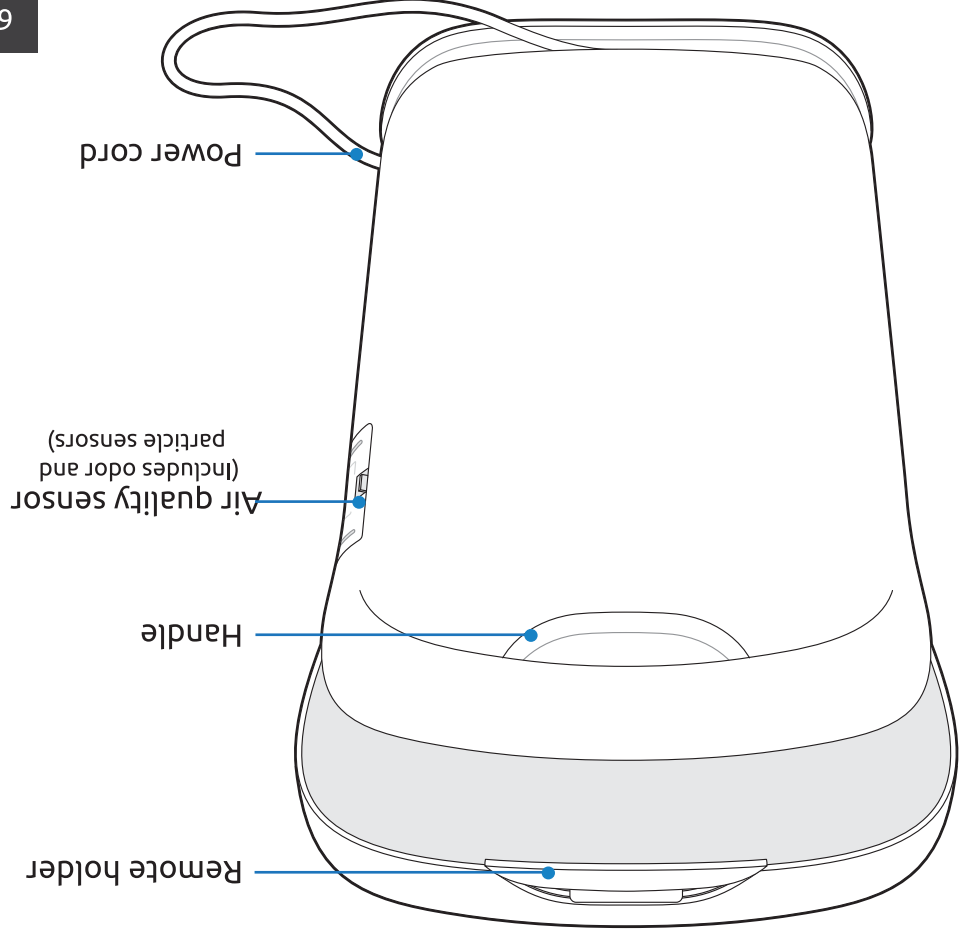

- The Rabbit Air purifier is designed for use in a 100V outlet only.

- Turn off your Rabbit Air purifier before unplugging it from the power outlet.

- Unplug the Rabbit Air purifier from the power outlet when not in use and before servicing or cleaning the unit.

- To reduce the risk of electric shock, the Rabbit Air purifier has a polarized plug, which means it will fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug. If it still does not fit, contact qualified personnel to install the proper outlet. Do not alter the plug in any way.

- To avoid electric shock, do not touch the air purifier or its power plug with wet hands.

- Keep the electrical cord away from heated surfaces at all times.

- If the cord or plug appears damaged, return the unit immediately to an authorized service facility for examination and repair.

- Any attempts to repair the Rabbit Air purifier without written permission from Rabbit Air will void the warranty and could cause serious personal injury to the user and/or result in severe damage to the unit.

- Do not pull, carry, lift, or drag the Rabbit Air purifier by pulling its power cord. Remove the power plug from its outlet by grasping the plug and pulling gently.

- When the Rabbit Air purifier is plugged into a power outlet, keep all fingers, body parts, hair, jewelry, and loose clothing away from the openings.

Installation Guidelines

- Avoid putting the Rabbit Air purifier in a place where the air intake or air outlet could become clogged with dirt.

- Leave at least two feet of space between the air purifier's intake, outlet, and the wall.

- Do not block the air intake or air outlet.

- Do not use the Rabbit Air purifier on or around hot surfaces.

- Do not use the Rabbit Air purifier in a room where it may come into contact with steam.

- Do not operate the Rabbit Air purifier on its side.

- Do not install the Rabbit Air purifier in greasy or damp environments.

- Do not use detergent or soap to clean the Rabbit Air purifier.

- Do not operate the Rabbit Air purifier without filters.

- Do not wash and reuse the filters except for the washable Pre-Filter.


- When transporting the Rabbit Air purifier, always hold the handle on the back of the unit.

Remote Control Tips

- Inverter lighting equipment or electronic light fixtures may interfere with remote control signals.

- Avoid storing the remote control in direct sunlight. Heat may interfere with remote control signals.

The Energy Star label and disclaimer:

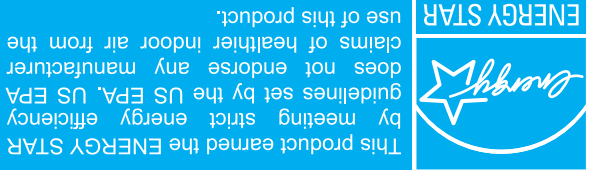

The energy efficiency of this ENERGY STAR qualified model is measured based on a ratio between the model's CADR for dust and the electrical energy it consumes, or CADR/Watt.

Caution: When using electrical appliances, observe the following basic precautions to reduce the risk of fire, electric shock, and injury:

- Please read all tips and warnings before using your Rabbit Air purifier.
- Use only as directed by the Owner's Manual.
- Please observe extreme caution when using the air purifier in close proximity to children.
- Rabbit Air purifiers are for indoor use only.
- The Rabbit Air purifier is not intended for use in bathrooms, laundry areas, or other damp indoor environments. Keep the Rabbit Air purifier away from water at all times.
- Do not use the Rabbit Air purifier near fireplaces or in areas where flammable or combustible products or vapors may be present.
- This appliance has a polarized plug (one blade is wider than the other) . To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Meet your brand new BioGS!
We hope that this stylish bundle of cleanliness is just what you've been looking for. Be sure to get familiar with this newest addition to your home, by exploring all of its features in the enclosed booklet and on our website.
If you have any questions just give us a call, anytime.
We love to hear from you!