


# CLEARANCES


## COMBUSTIBLE SIDE WALL INSTALLATION

HVF-36 & HVF-BM-36

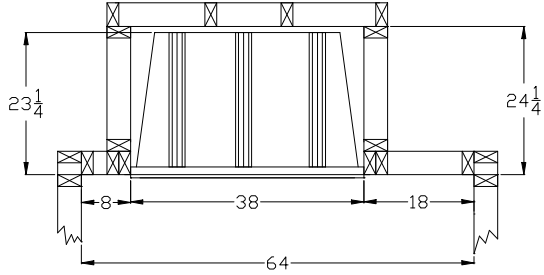


## COMBUSTIBLE SIDE WALL PLACEMENT

FOR HVF-36 & HVF-BM-36 & HVF-42 & HVF-BM-42

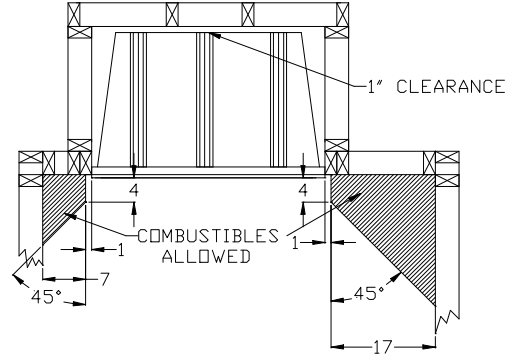


## COMBUSTIBLE SIDE WALL INSTALLATION

HVF-42 & HVF-BM-42

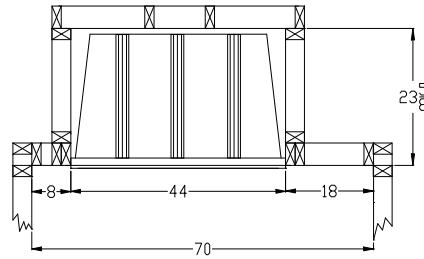


## GUIDELINE DIMENSIONS FOR CORNER APPLICATION

HVF-36 & HVF-BM-36

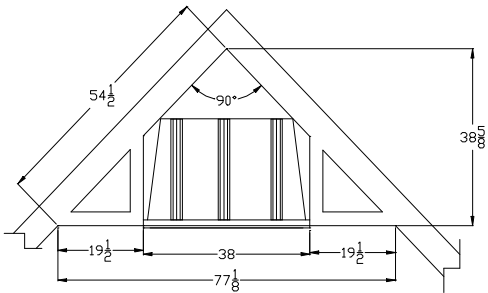


HVF-42 & HVF-BM-42

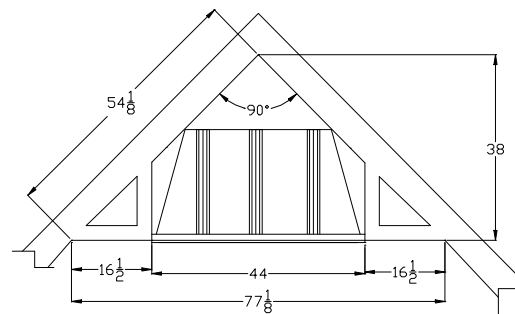


# FIREBOX & FRAMING DIMENSIONS


**HVF-36**

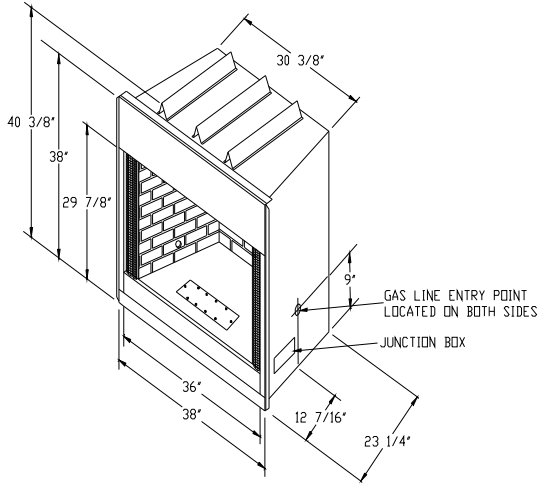


**HVF-42**

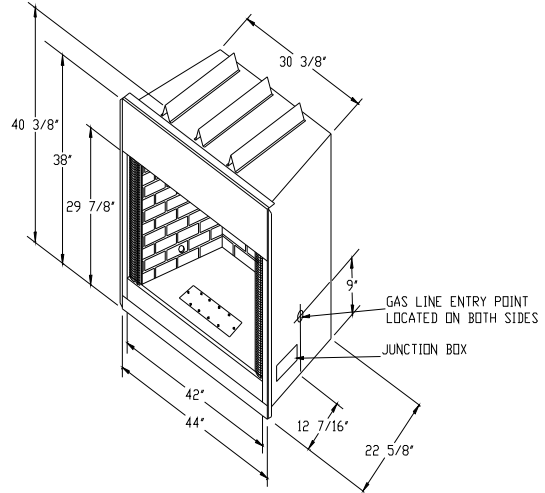

**HVF-BM-36**

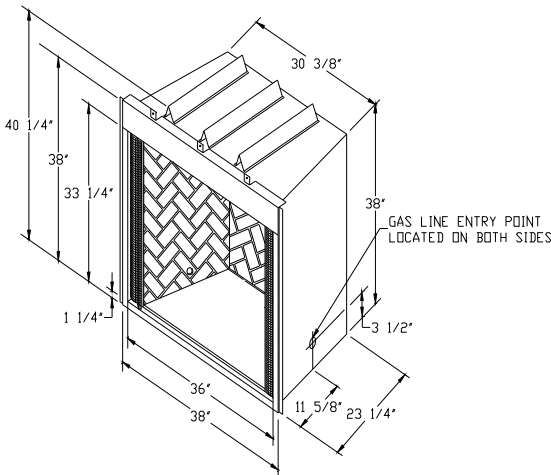

**HVF-BM-42**

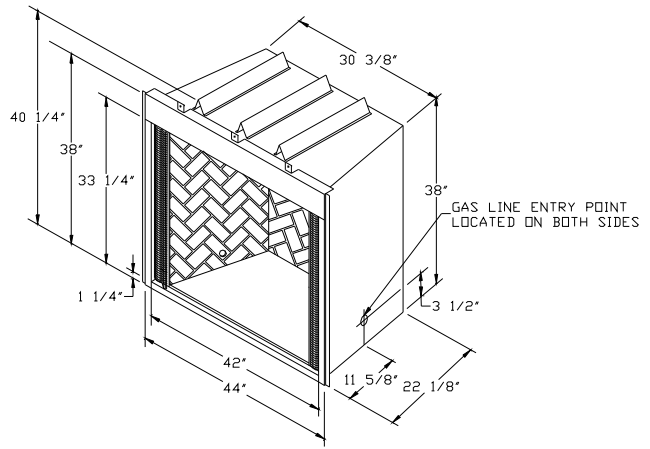

Fireplace Model #	HVF-36	HVF-42	HVF-BM-36	HVF-BM-42
<b>Inner Dimensions</b>				
Height of rear wall	22"	22 1/2"	26 1/2"	25 1/2"
Width of front opening	29 1/2"	35 1/2"	29 "	34 1/2"
Width of rear wall	25"	25"	25"	25"
Depth	18 1/2"	18 1/4"	18 1/2"	18 1/4"

Fireplace Model #	HVF-36	HVF-42	HVF-BM-36	HVF-BM-42
<b>Framing Dimensions</b>				
Framing dimension for Height	40 3/8"	40 3/8"	40 3/8"	40 3/8"
Framing dimension for width	38 1/4"	44 1/4"	38 1/4"	44 1/4"
Framing dimension for Depth	24 3/4"	24"	24 3/4"	24"