

Travelling Awning Support

Model MMXV

- Suitable for use on most brands of roll-out awnings with roller tube
- White or black powder-coat finish
- High pressure diecast components to maximise strength and eliminate sharp edges on the cradle
- Automatically pivots to receive and release the roller when awning is operated

INSTALLATION GUIDE

Note: Read these instructions in full before commencing installation

This product is to be installed by a qualified RV service / repair person. Aussie Traveller accepts no responsibility or liability for damage or injury resulting from the installation or operation of this product.

- It is recommended to fit the backing plate when there is insufficient support in the RV wall for mounting the bracket only.
- The backing plate has been made a little longer than the bracket to allow some horizontal adjustment to locate a reinforced section of the RV wall/frame if necessary.

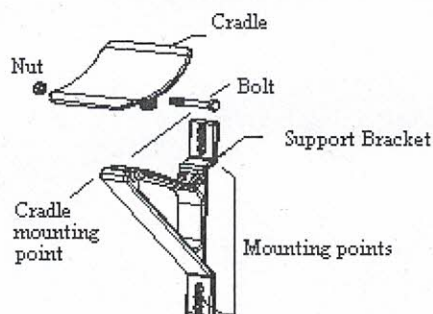


Figure 1

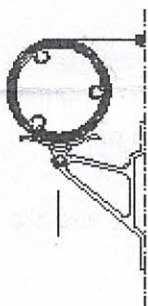


Figure 2

1. Ensure the awning is fully retracted and in travel mode
2. Loosely attach the cradle to the bracket using the supplied nut and bolt – see figure 1.

3. Position the cradle and bracket under the roller (as close as possible to the centre of the roller) and seat the cradle lightly against the fabric – see figure 2.

Note: The cradle is not meant to be positioned hard up against the roller/fabric. The job of the cradle is to prevent downward flexing of the roller when travelling but not to act as a constant support.

4. Mark the position of the bottom of the bracket, out to one side, on the RV wall.
5. Roll the awning out and raise the frameset to a point which gives maximum access and clearance under the fabric to allow the awning support to be fitted.

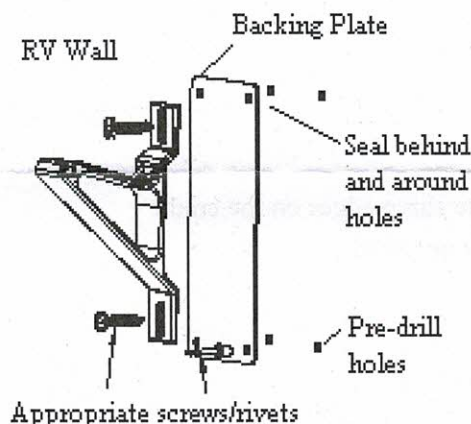


Figure 3

6. If the backing plate is to be utilised, position it within the confines of the bracket length and fix it to the RV wall using the pre-drilled holes and appropriate fasteners – see figure 3. The kit is supplied with screws and rivets, but the installer must check length and suitability of those fixings for compatibility with the RV wall being worked upon. If necessary, use extra screws/rivets to fix the plate to the frame/reinforced area of the RV wall. Use a sealant/adhesive behind the plate to assist fixing and to prevent water entry into the RV wall. (Check www.aussietraveller.com.au for information on sealants and tapes.)

Note: It is the fitter's responsibility to ensure the vinyl fabric does not contact the cradle mounting screws when the awning is rolled away during travel.

7. Using the pre-marked bracket position, fix the bracket to the mounting plate/RV wall. It will be necessary to remove the cradle from the bracket to allow ease of access to the top mounting point. Refit cradle after fitting bracket. Ensure the lock nut is fully tightened.

8. If not utilising the backing plate, fix the bracket as in step 7 above.

Contents:

- 1 x mounting plate – pre-drilled in 4 corners
- 1 x support bracket
- 1 x cradle
- 1 x bolt
- 1 x nut
- 2 x screws
- 4 x rivets

LIMITED WARRANTY

- Aussie Traveller warrants that the awning support is free of defects in materials and workmanship for 1 (one) year from the date of purchase.
- This warranty applies to the first retail purchaser only and is not transferrable.
- This warranty does not apply to damages that result from misuse, negligence or improper installation.
- This warranty does not cover deterioration from normal wear and tear or from the use of caustic cleaning products.
- All warranty claims must be accompanied by a copy of the original purchase receipt and the returned product.
- Returned product will be inspected and when approved, a replacement made available.
- Aussie Traveller does not cover any transport costs associated with the warranty process.