

ARMANOV

Quick-change Toolhead for Dillon Super 1050


Instructions for use




Armanov d.o.o.
Brezovce 9,
1236 Trzin, Slovenija
Tel: +386 30 467 000
www.armanov.com

Features


Quick Change Toolhead

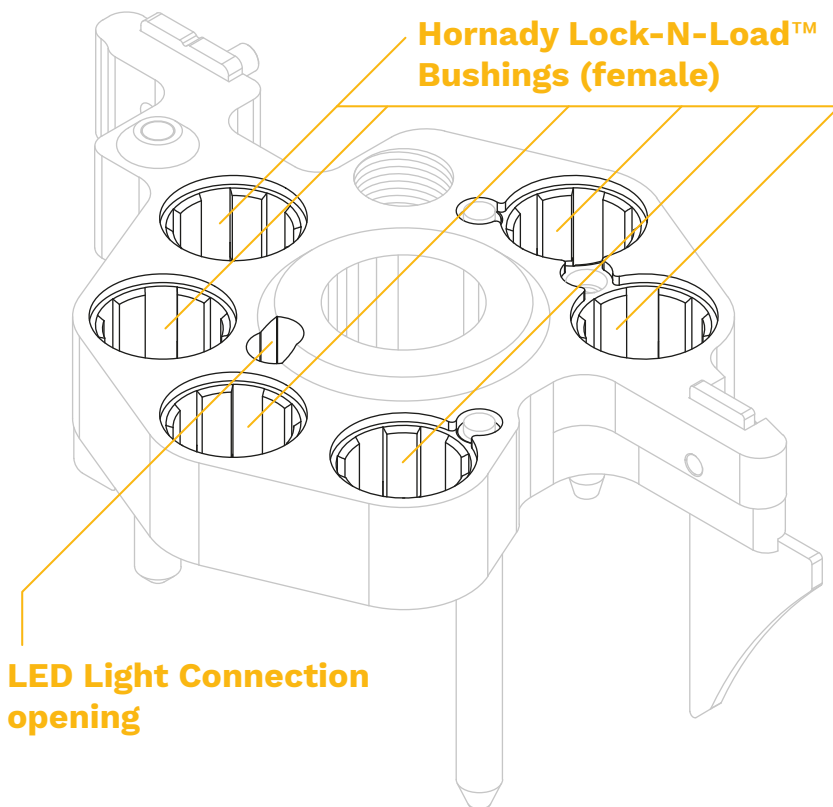

Easy Shellplate Lock-Ring

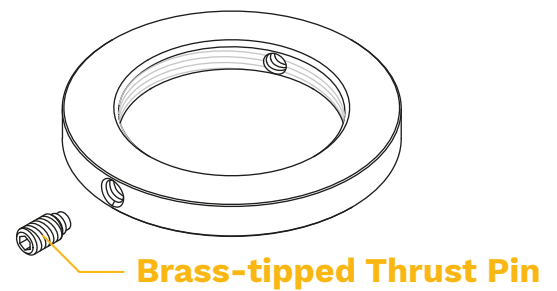


Bright LED Light

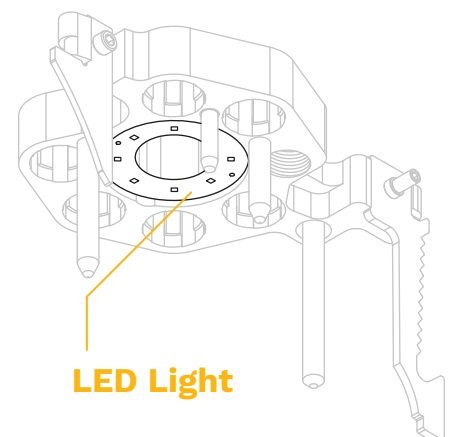

Installation instructions

Use the right ratchet

Two ratchets are supplied. Longer one fits Super 1050, shorter one fits RL 1100.

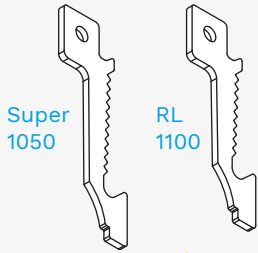


Super 1050

RL 1100

LNL bushings orientation

Set all bushings (sold separately) so that the threaded hole is oriented toward the toolhead center. Then rotate bushing on station #5 counter-clockwise for one lug. Use the supplied wrench.

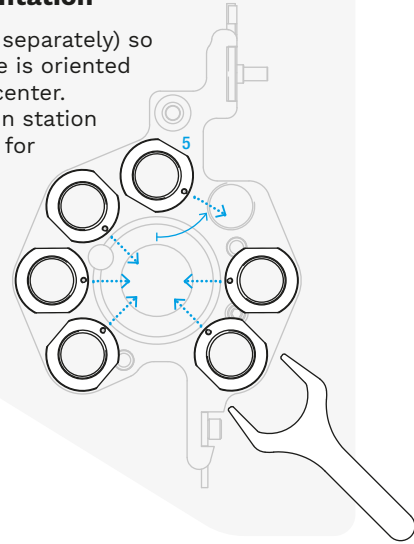

4. Set dies

Insert Hornady Lock-N-Load Bushings (sold separately) into the Toolhead.

Install and set all required dies according to their original manual and tighten with their nut against the bushings.

Dies are now quickly exchangeable without any tools.

5. Connect LED Light

While supporting the circuit board from the bottom side, carefully plug the 2-pin connector from the top (between stations 6 and 7).

Connect USB plug to a USB charger (not supplied).

1. Install Shellplate Lock Ring

Screw the lock ring clockwise according to original Dillon manual. Tighten the lock-ring using brass-tipped thrust pin in any of two threaded holes.

! Important !

DO NOT overtighten the thrust pin! Screw in thrust pin just enough that Lock Ring doesn't move by hand anymore, then tighten it by approximately 1/8 turn clockwise.

3. Adjust Primer Push Rod

Adjust primer push rod according to original Dillon manual.

2. Install Toolhead

Install Armanov Toolhead for Dillon Super 1050 / RL 1100 according to original Dillon manual.

