

Instructions for Classic,
Royal & Grand Adirondack
Chairs

Part A - Assembly

Part B – Folding Your Chair

Part C – Unfolding Your Chair

Part A – Assembly

Step 1 – Unpack Materials

Please check that you have everything listed below. If you are missing a part, please contact us.

Chair Parts:

- | | | |
|----------------------------|----------------------------|--------------|
| 1 pre-assembled chair back | 1 pre-assembled chair seat | |
| 2 chair legs | 2 chair arms | 1 front slat |



Hardware:

4 Bolts (5/16" x 2½")

4 Locking Nuts (5/16")

2 Small Washers

12 Medium Washers

2 Large Washers

2 Extra Large "sticky" washers

8 Short Screws (2")

2 Long Screws (6" X 1/4")

1 Hex Wrench (1 per order)

1 Robertson (square) Screwdriver (1 per order)



Additional Tools Required:

1/2" (or 11mm) Socket Wrench
7/16" (or 13mm) Socket Wrench
or Needle Nose Vice Grip Pliers

Step 2 - Attach Legs to Seat Assembly

Orient the chair leg marked with an “B” next to the side of the chair seat marked with “B”

- Ensure that the curve on the top edge of the leg faces up and toward the front of the seat



- Put a medium washer over a bolt. Screw the bolt through the leg hole from the outside using the Hex Wrench. Note – do not use a hammer to tap the bolt through the hole. This could damage the bolt
- Remove the backing from the extra large “sticky washer”. Place it over the bolt and stick it to the side of the leg as shown below



- Screw the bolt through the hole on the side of the seat

- Important - Wipe the bolt clean of any material that might have accumulated on the thread.
- Adding a drop of lubricant helps protect the bolt.
- Add a medium washer to the bolt. Then add a lock nut. Tighten the bolt using the hex wrench, holding the lock nut with the socket wrench or pliers.
- Repeat this process for the other side
- Open up legs, as in the picture below



Step 3 – Attach Front Slat


- Partially install 1 short screw on the front slat, so the screw just protrudes the back of the slat
- Position the protruding screw into the pre-drilled hole on the chair leg. Tighten the screw.



- Repeat this process with one screw on the other leg
- Install the remaining 6 screws

Step 4 – Attach Chair Arms to Legs

- Put a medium washer over a bolt
- Screw the bolt through the top of the leg, from the inside
- Add 1 large washer to the bolt

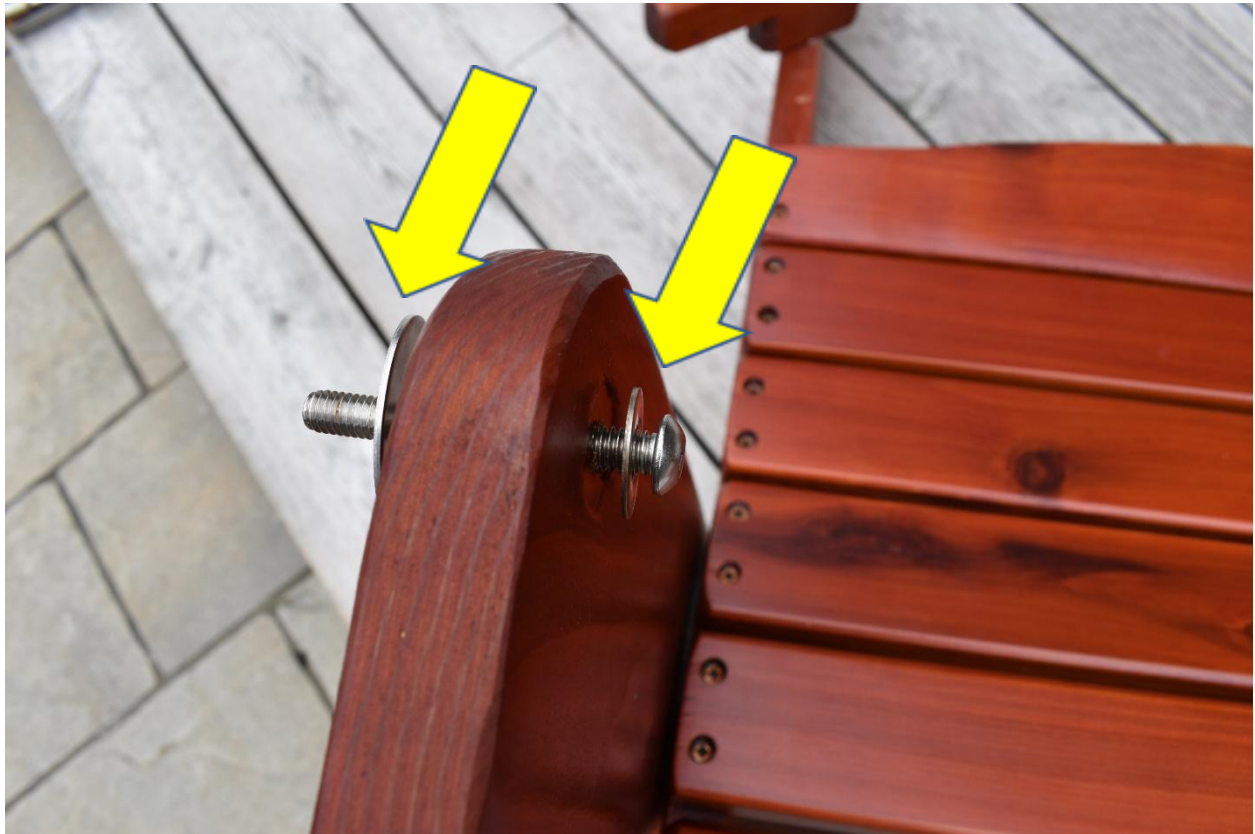

- Attach the chair arm, by screwing the bolt through the hole in the block under the arm
- Clean the threads on the bolt and add a drop of lubricant
- Add a small washer. Then add a lock nut to the bolt.
Tighten the nut with the hex wrench and socket wrench or pliers



- Repeat the process with the second arm



Step 5 – Attach Chair Back to Arms

- Open the swivel blocks outwards
- Position the chair back on top of the seat legs. Lock the bottom of the back into place using the swivel blocks



- Place 1 small washer over the long screw
- Install the long screw into the back of the arm. As the screw begins to protrude from the arm, add two medium washers

- Align the screw with the pre-drilled hole in the chair back. Continue to tighten the screw until snug



- Repeat the process with the other arm

Step 6 – Sit Back and Enjoy!

Note – the Swivel Blocks can be permanently attached by adding a 2 inch screw (not provided) to each swivel block. It is recommended that you pre-drill a hole through the swivel block before adding the screw to prevent the block from splitting.

Part B - Folding Your Chair

Notes:

1. You may have to loosen the hardware slightly to fold your chair.
2. We recommend folding your chair on a soft surface (such as grass or a blanket) to protect your furniture

Step 1 – Unlock Swivel Blocks

- Move the 2 swivel blocks so they face out



Step 2 – Release the Chair Back

- Stand behind the chair
- Lift up on the back of the arms
- As you lift the chair back and legs will fold forward



- Keep lifting until the chair folds flat on the ground



- Pivot the swivel blocks to align with the legs

Part C - Unfolding Your Chair

Notes:

1. The instructions are simply the reverse of the Folding Instructions described in Part B
2. You may have to tighten the hardware after unfolding your chair.
3. We recommend unfolding your chair on a soft surface (such as grass or a blanket) to protect your furniture


Step 1 – Open the Swivel Blocks

- Move the 2 swivel blocks so they face out



Step 2 – Unfold the Chair legs

- Stand in front of the chair
- Lift the front of the chair up using the chair arms
- Continue lifting until the chair legs are fully upright

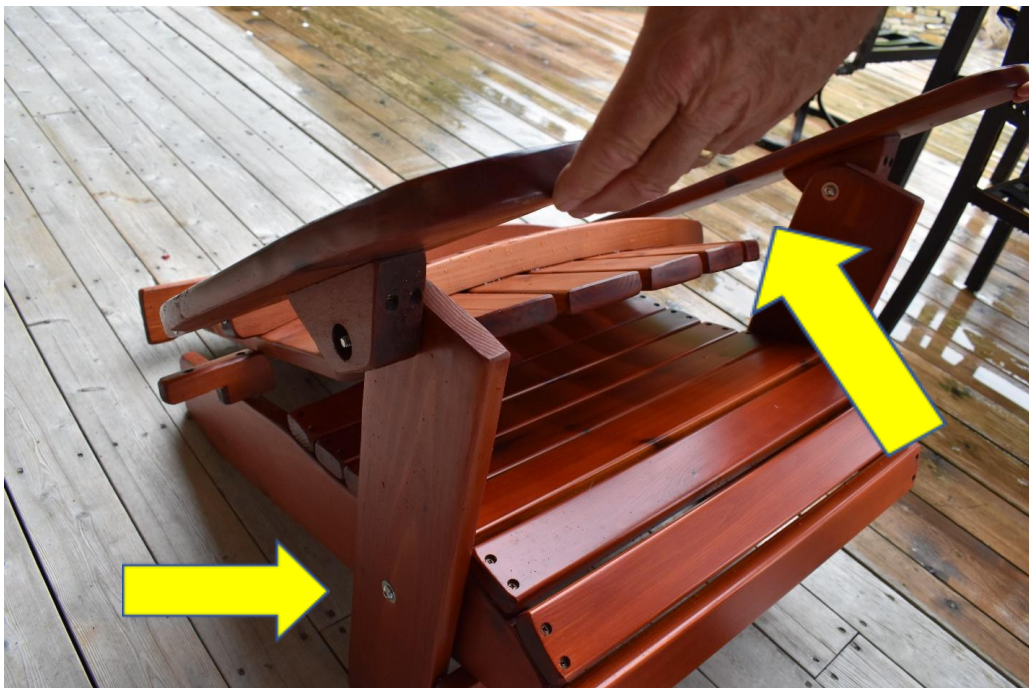

Step 3 –Unfold the Chair Back

- Stand behind the chair
- Lift the arms upwards until the chair back can be moved into position on top of the chair legs





- Pivot the swivel blocks to lock the seat back in place

