Table of Contents

afety Precautions1-2
arts List3
Queen Base Overview4
control Box Overview5
nstallation Guide6
/ireless Remote7
Vireless Remote Pairing8
osition Setting9
rouble Shooting10
Varranty Information11

Safety Precautions



Notice – Important Safety Disclaimers

For your safety, please read all the instructions carefully before using this adjustable base. Save these instructions for future reference.

Attention:

This bed is intended to be used only as described in this manual. Keep the base unplugged before assembly. After assembly, please ensure you connect the bed properly to the power supply to avoid an electric shock or fire. Before cleaning always ensure that the bed is in a flat position with all motors turned off and disconnected from the power source. Always keep the power cord away from heated surfaces.

If the power cord or plug becomes damaged, or if the bed is wet or not working properly, stop using the bed and contact your dealer. Do not use any accessories/attachments that are not recommended by the manufacturer.

Close supervision is required when the bed is used by or near children, convalescents or disabled persons.

Electrical Safety:

To protect electrical components, the bed should be plugged into a surge protected power supply cord or receptacle.

Warranty Warning:

The control box, motors, and remote (except battery compartments) should not be tampered with. Opening or tampering with these components will void the warranty.

In-Home Use Only:

This bed is designed exclusively for in-home use. It is not designed as a hospital bed, or to meet hospital standards. Do not use this bed with tent type oxygen therapy equipment or near explosive gases.

Safety Precautions

Medical Device Notice:

This bed contains Neodymium magnets, which may interfere with magnetic fields of devices such as pacemakers, ICD'S etc. Some pacemakers may falsely interpret massage vibrations as movement or exercise. The owner of such medical devices should consult with their physician before using this product.

Children and Pets:

This product is designed to be used by an adult. Do not allow children to operate the bed without adult supervision. Immediately dispose of all packing materials as they can pose a smothering risk to children and pets. Injury can occur if children or pets are permitted to play on or under the bed.

Weight Limits:

This product is not rated to support weight exceeding 320 kgs (700 lbs.). This includes bed partners, the mattress and bedding. The bed will structurally support this weight, provided it is evenly distributed. The bed is not designed to support or lift 320 kgs (700 lbs.) in the head or foot sections alone. Exceeding this weight restriction could damage the bed and/or cause injury and will void the warranty.

Motors:

All motors emit a noticeable tone during operation. The volume of this tone is often enhanced in home settings, depending on flooring and acoustics.

Lift motors are not designed to be operated for more than 2 minutes, if the lift motor run over 2 minutes then it needs rest for 18 minutes. Exceeding this will shorten the life of the motor and may void the warranty.

To protect overheating of massage motors, they automatically turn off after 30 minutes of use. Failure to give these motors a 30-minute rest after they turn off, may void the warranty.


FCC Compliance:

FCC Compliance: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. To comply with the FCC RF exposure requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirement and will void warranty.

Radio Frequency: 2.4 GHz

Parts List


Please ensure you have received all the parts listed below before discarding packing materials.

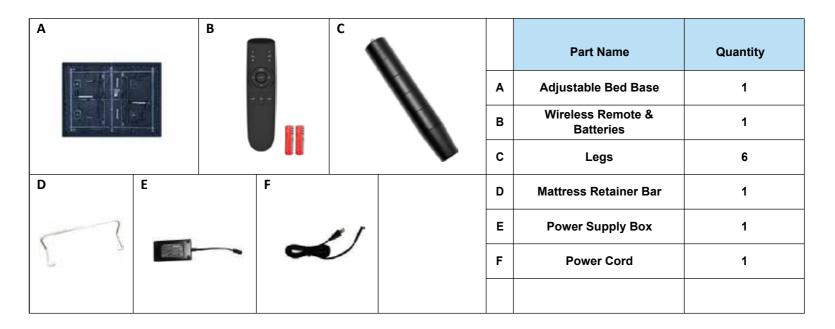

All images shown are for reference only and may not resemble parts for this adjustable bed.

Queen Base Overview

1	Head Lift Up/Down Motor	2	Leg Lift Up/Down Motor
3	USB ports	4	LED Underbed Light
5	Control Box	6	Massage motors

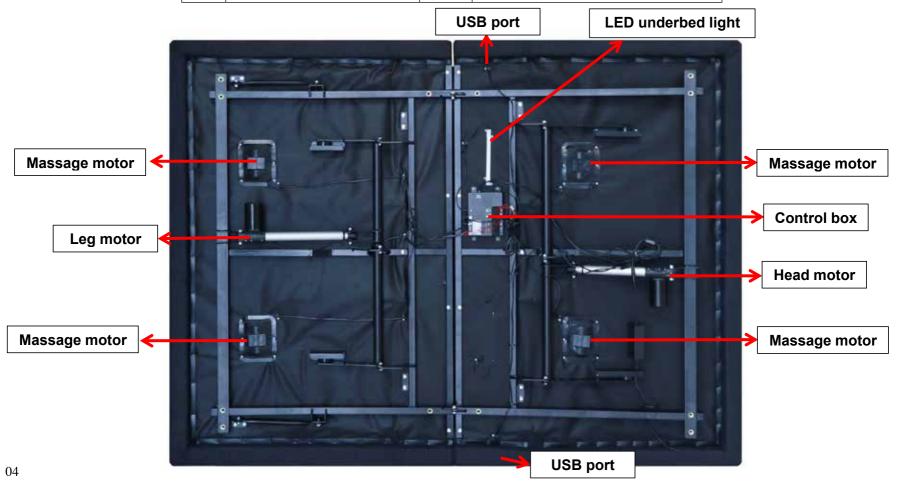


Control Box Overview



Installation Guide

Step 1: Remove packing materials

Put the bed in its desired location with the bottom of the cardboard box facing up. Remove the top of the box. Take out all the packing materials and put them aside. Make sure you keep sharp objects that might puncture the bed out of the way.



Step 2: Remove the base from the box

 Install the 6 legs. Each leg comes with 7 pieces (2-1", 4-2", and 1-3". You can adjust your base height anywhere from 5" to 13". Keeping the base facing upward, tighten the feet securely by hand.



Step 3: Turn the bed over carefully

 With the help of another person, carefully turn over the bed and remove the rest of the cardboard box. Do not lay the bed on its side to prevent damage to the USB ports, fabric, or legs.

Step 4: Connect the power supply box


 To prevent damage to the Power Supply Box (E) please ensure that it's not obstructed in any way by the adjustable base or headboard.



Plug the power cord into the Power Supply Box as shown.



Wireless Remote

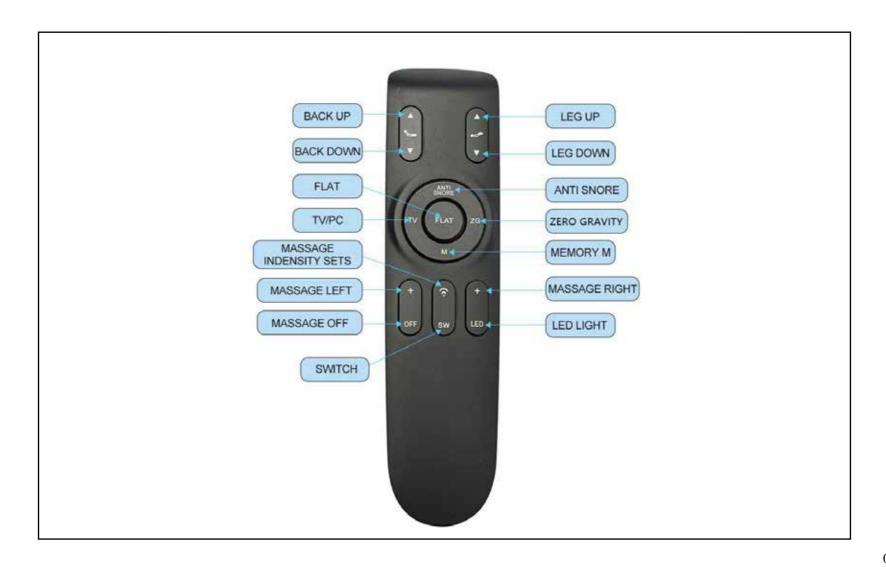

Wireless Remote Pairing

Step 1:

Push in on the bottom of the remote to release the battery cartridge and install three AAA batteries into the remote battery compartment. Push firmly to close.

Step 2:

Plug the base into a power source and press the Pairing Button on the control box until the Pairing Indicator Lamp is flashing (white third light).



Step 3:

Press "SWITCH" until the backlit LED light on the remote flashes. Then release "SWITCH" and press "HEAD UP". Don't release "HEAD UP" until the backlit LED light is lit, and the remote is paired.



When Pairing Program Button on the control box and the backlight LED on the remote stop flashing, and the buzzer on the control box has a "DI" sound, pairing is completed. If the pairing fails, repeat the process again.

Position Setting

The 'SW' button work with Anti Snore, ZG(Zero Gravity), TV position, and Memory buttons.

'SW' + TV position button:

Hold the 'SW' for 3 seconds until the backlight shining appears, then press the 'TV' button: This sets to your own TV position and in memory mode.

'SW' + ZG button:

Hold the 'SW' for 3 seconds until the backlight shining appears, then press the 'ZG' button: This sets to your own Zero gravity position and in memory mode.

'SW' + M button:

Hold the 'SW' for 3 seconds until the backlight shining appears, then press the 'M' button: This sets to your own Memory position and in memory mode.

'SW' + Anti Snore button:

Hold the 'SW' for 3 seconds until the backlight shining appears, then press the Anti Snore button: This sets to your own Anti Snore position and in memory mode.



Trouble Shooting

If you have an issue with your adjustable bed, please read the following for a possible solution.

If there appears to be no fix, please contact your dealer.

Symptom	Malfunction	Solution
	No power input	Check the connection of the power cord
	Power cord or control line is damaged	Replace the power cord or control line
Adjustable bed function does not work	Wireless remote battery is dead	Replace the wireless remote battery
	Wireless remote isn't working	Replace the wireless remote
	One of the motors is not working	Replace the motor
Excessive motor noise	Motor wear or damage	Replace the motor
The adjustable bed function runs slow	The adjustable bed is overloaded	Reduce the weight of the load on the bed
Unable to pair	Pairing error	Check to see if the pairing light on the control box is blinking. Follow the pairing instructions if it still cannot be paired, unplug, plugin and try it again.
The bed does not respond after sending it an action command	The control box most likely did not receive the command	After confirming that the wireless remote button is pressed, a green or yellow light should be flashing on the control box. If it's not, please un-plug the bed, plug it back in, and try it again.
The red work light flashes on the control box. After sending the action command, the corresponding part will stop Automatically after moving	The control box detected a fault	Set to "FLAT" and contact your dealer.
Nothing seems to be working	Electronic components may require resetting	Unplug the bed for an hour and then plug it back in. If this fails to solve the issue, please contact your dealer.