



## DISSENT CARBON 290/297 FLIP CHIP GUIDE

The Dissent Carbon can be changed between 29"/29" (290) to Mullet 29"/27.5" (297) wheel set-ups. Using the Mullet Flip Chips ensures the geometry is corrected between rear wheel sizes for no compromise performance. 290 is the ultimate in grip, stability, and tracking, suiting fast open tracks with large rough hits. Whereas a 297 set-up still gives you the benefit of front wheel 29" grip, control, and tracking but with the playfulness of a rear 27.5" wheel, allowing for quicker turning in tighter corners and increased playability. Rear wheel size choice will be down to riders preference, style and the riding terrain. The following details how to change between rear wheel size on the Dissent Carbon.

- To change the rear wheel size, the Mullet Flip Chip (7) needs flipped drive and non-drive side at the same time to the corresponding orientation to your wheel choice.

- Using a 5mm Allen Key fully remove the Outside Flip Chip Retaining Nut (11) from both sides of the bike. INSIDE turning anti-clockwise. - Using a 6mm Allen Key, loosen the Inside Horse Shoe Bolt (11) Clockwise until the Mullet Flip Chip (7) is free to remove. Repeat on both sides of bike. 11 - For 290 - ensure the Mullet Flip Chip (7) is orientated with 290 the correct way up and the rear triangle is lifted to replace the Flip Chip. - For 297 - ensure the Mullet Flip Chip (7) is orientated with 297 the 10 correct way up and the rear triangle dropped to replace the Flip Chip. 9 - Using a 6mm Torque Wrench tighten the Inside Horse Shoe Bolt (11) Anti-Clockwise to 21Nm both sides of the frame. 8 - Using a 5mm Allen Key Torque Wrench refit the Outside Flip Chip 7 Retaining Nut (11) to both sides of the frame, turning Clockwise to 8Nm. 11 OUTSIDE

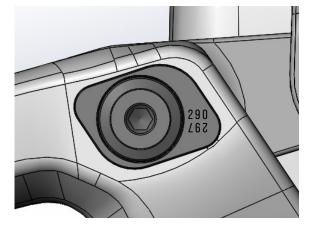

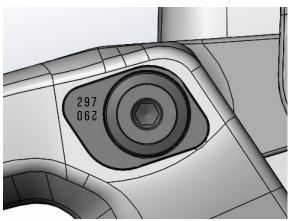

297

290