

CAFELLO


TUTTO

V2

QUICK START GUIDE

The Tutto is designed for ease of use making it ideal for busy locations where staff may not have the time to focus on preparing coffee. The Tutto grinds, tamps and brews!



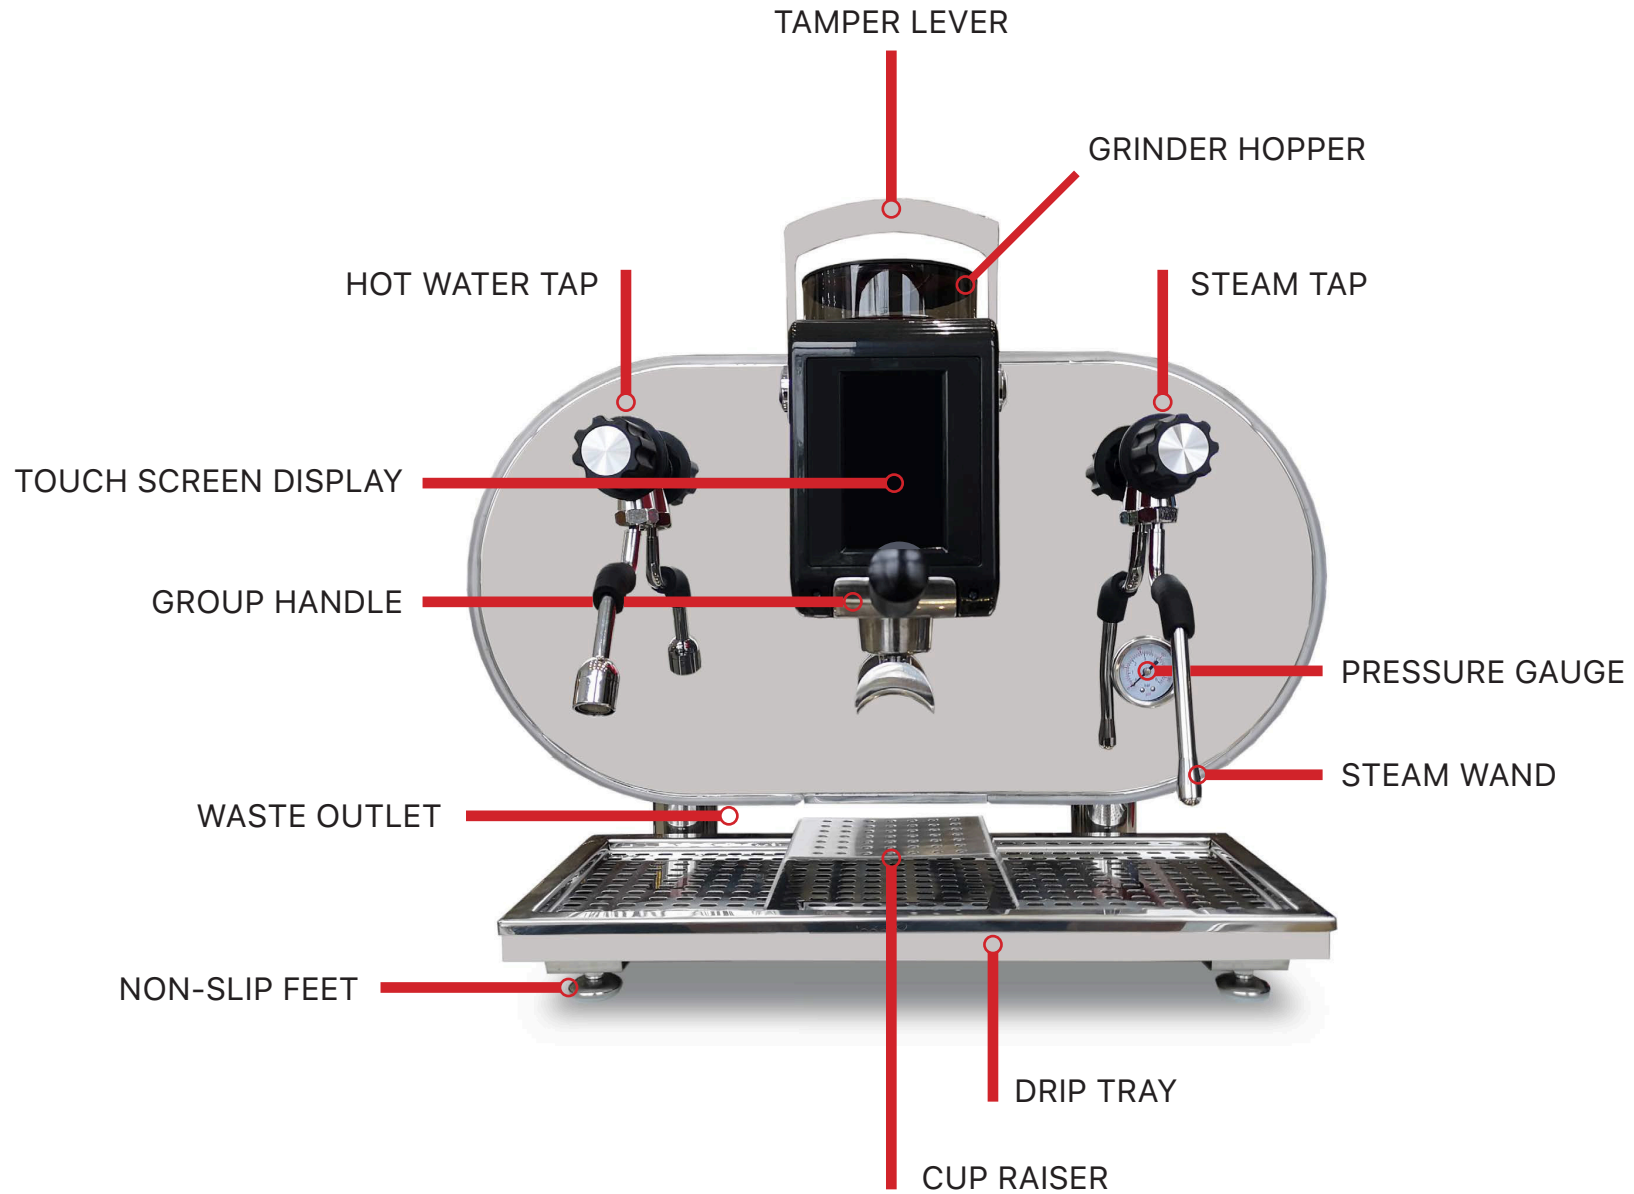

CAFELLO TUTTO^{V2}

TABLE OF CONTENTS

1-4	—	INSTALLATION
5-6	—	USING THE MACHINE
7-8	—	TOUCH SCREEN INTERFACE
9-10	—	CLEANING THE HANDLES
11-12	—	TROUBLESHOOTING

INSTALLATION

THINGS YOU WILL NEED...

- 10 amp power supply (Standard wall outlet) to power machine
- Connection to Mains Plumbing OR a container of water for water supply
- Somewhere for waste water to go (drainage system OR a container)
- 350kpa pressure limiting valve (Only if using Mains Plumbing for water supply)
- Water filter (Only if using Mains Plumbing for water supply) and a Filter head
- Two spanners for tightening connectors.

1. Start by carefully unpacking the box with your new Tutto inside. Place the Tutto on a bench or where you wish to install it.

INSTALLATION

- 2.** Next there is a CLEAR silicon hose with a threaded connector on it coming from under the machine. If you are choosing to run the machine from a container of water place this hose into that container.


If you are connecting it to mains plumbing you firstly need to detach this hose from the hose marked INLET PIPE (These two hoses should just pull apart). You can then put a connector onto this hose and then use a braided hose to connect this to your water filter head, then another hose to your PLV and another hose into your plumbing system.

Make sure you connect the machine to a valve or a tap so in the case of an Emergency you can switch the water off.

- 3.** There is another RED hose coming from under the machine and this is where the expansion water from the machine will come through. You can either place this hose into a drainage pipe or just use a container or bucket (Dont forget to empty it!)

INSTALLATION

- 4.** Make sure you have turned the water ON going into the Inlet Pipe. You can now plug your Tutto into the wall and switch it on. There is a main switch on the right hand underside of the machine. You can now turn this ON.
- 5.** Your Tutto should now be on and should automatically start filling with water.

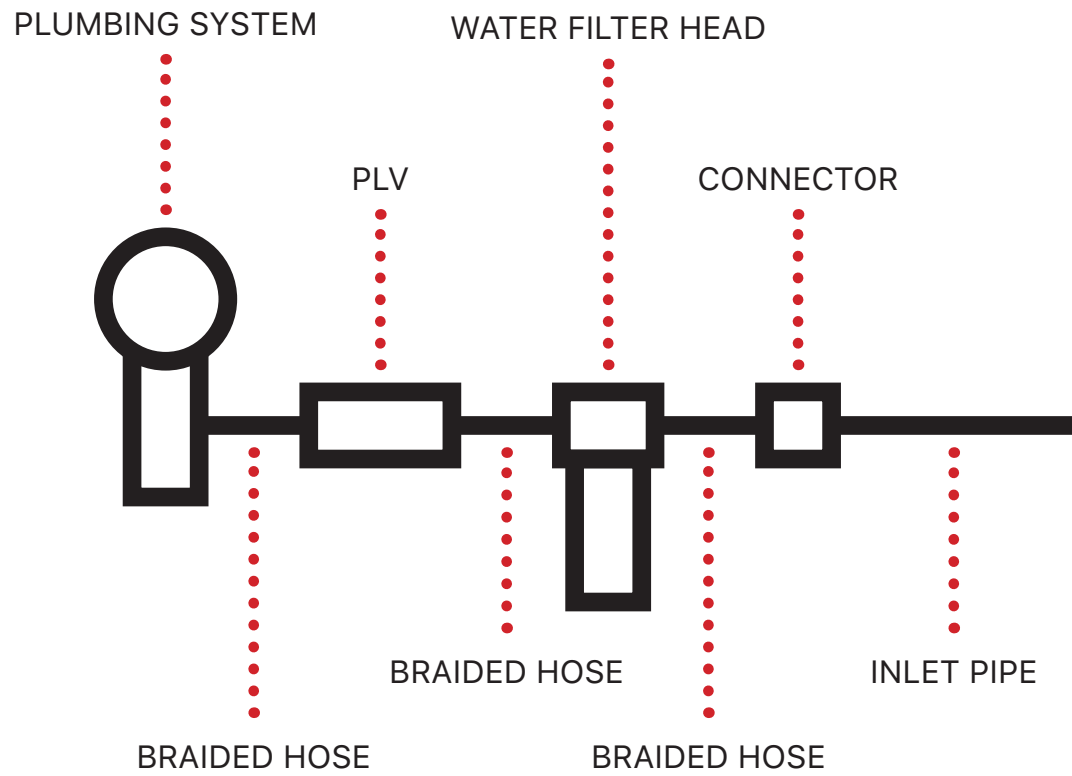

USING THE MACHINE

1. Open up the steam tap and leave it open until steam starts to come out from the steam wand. You can now close the steam tap and watch the pressure gauge which should rise to between 1.5 and 2 bar. The machine will now be hot and ready to use.
2. Find the grinder hopper* and place it into the grinder on the top part of the Tutto^{V2}. Line the arrow on the hopper up with the arrow on the Tutto^{V2}. You should now be able to turn the hopper clockwise and lock it into place.
3. Make sure the tamper lever* is in the UP position. You can now fill the hopper with coffee beans. You can adjust how coarse the grind is by rotating the hopper to the left or right. Only change the grind setting whilst the grinder is in operation to avoid any coffee getting jammed.

**Please refer to the images on the next page.*


4. Now slide the group handle* into the front of the machine. You can now press the Grind button to grind directly into the group handle. If you navigate to the DOSAGE menu, you can adjust how long the grinder will run for.
5. After you have ground the coffee you can now pull down on the Tamper lever, then pull up the Tamper Lever and tamp once more to remove excess coffee from the chute. Leave it in the DOWN position then select either Single or Double.
6. Place a cup under the spouts of the group handle. You can now press either the 'Single Shot' or 'Double Shot' buttons to start the coffee brewing. You can set either of these buttons to your desired cup volume by navigating to the DOSAGE MENU.

USING THE MACHINE

7. After brewing has finished you can now use the Steam Wand to texture the milk to your liking.



2.

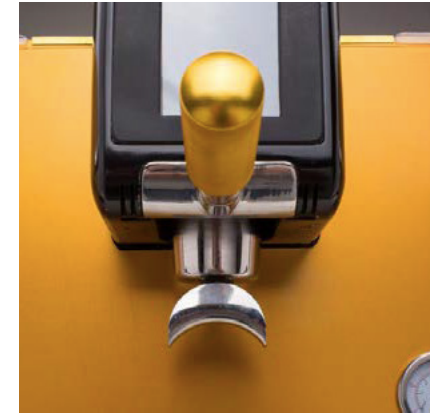

4.




3.




5.

TAMPER HANDLE UP (BEFORE GRIND)

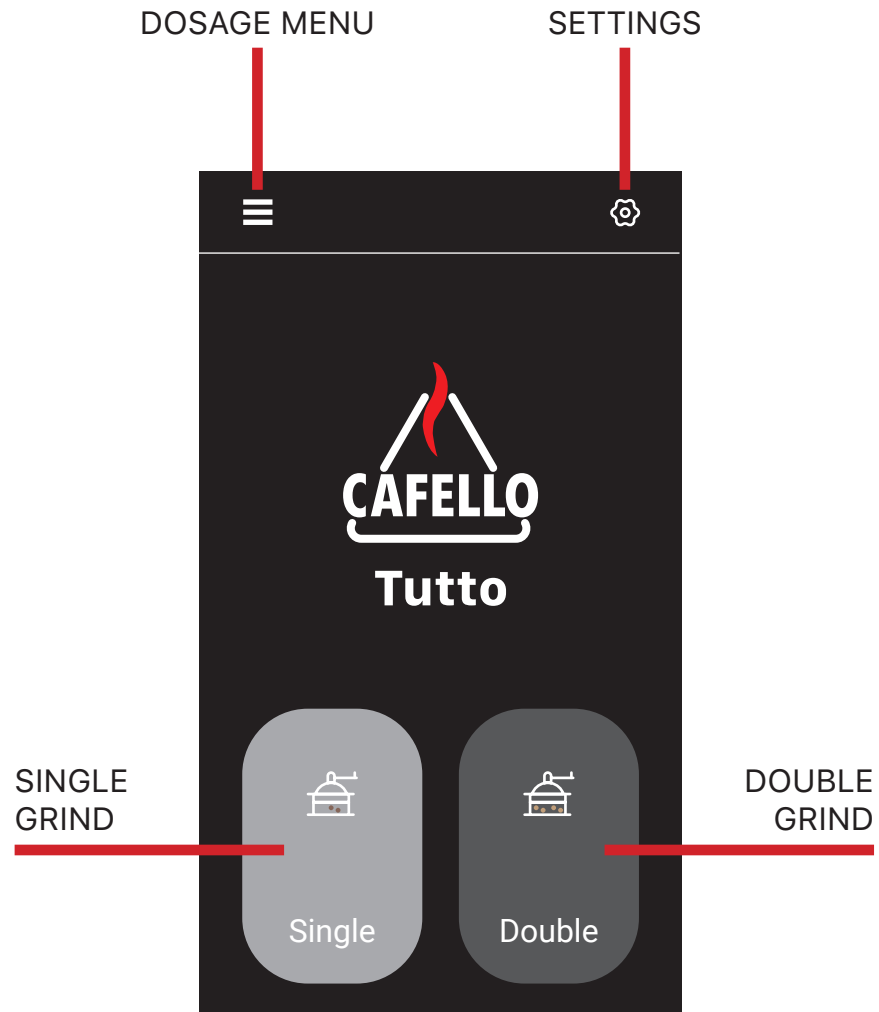


TAMPER HANDLE DOWN (AFTER GRIND)

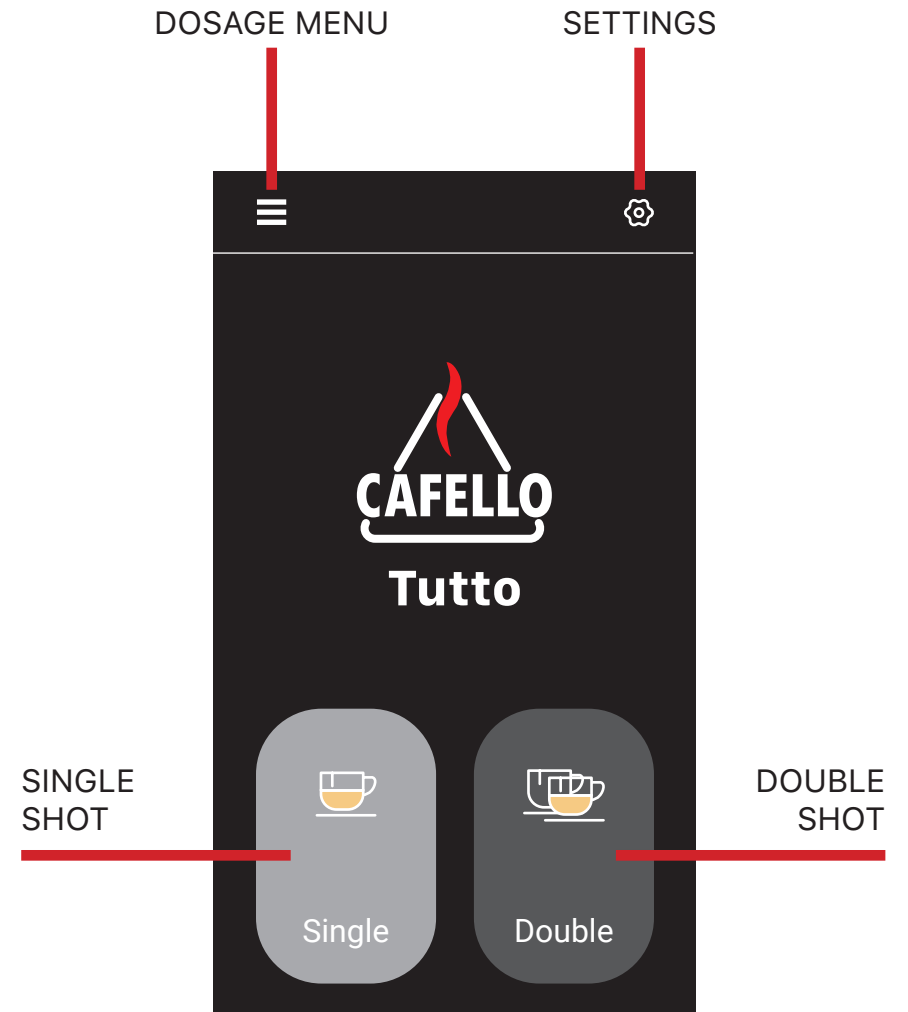

DOSAGE MENU

RESET TO DEFAULT

CHANGE LANGUAGE

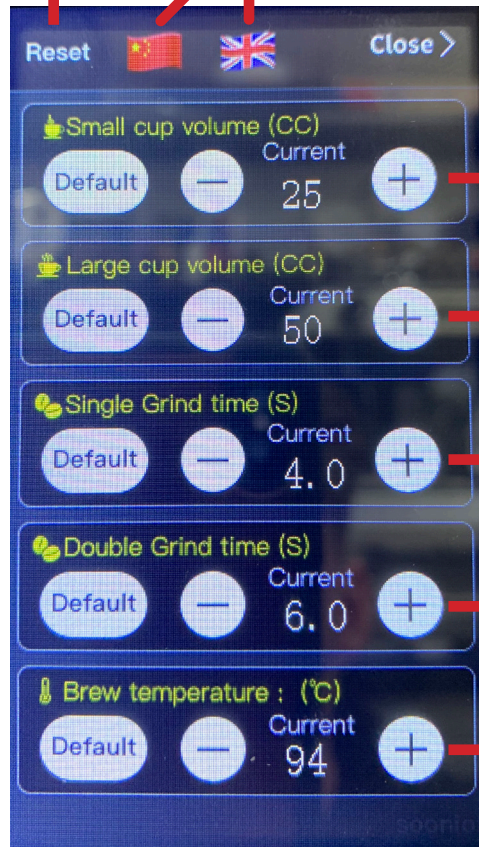

Volume in mls for Small Cup

Volume in mls for Large Cup


Grind time in secs Single Shot

Grind time in secs Double Shot

Boiler Temperature in degrees Celsius

SETTINGS

Machine Info

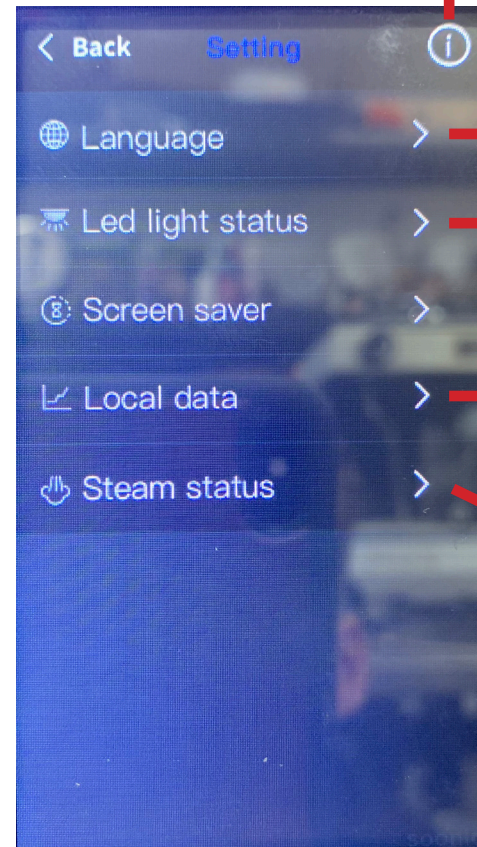

Change language



Turn LED lights ON/OFF

Keep track of stats using Local data

Turn Steam Boiler ON/OFF

CLEANING THE HANDLES

TUTTO HANDLE

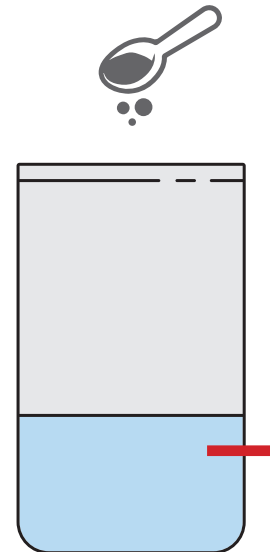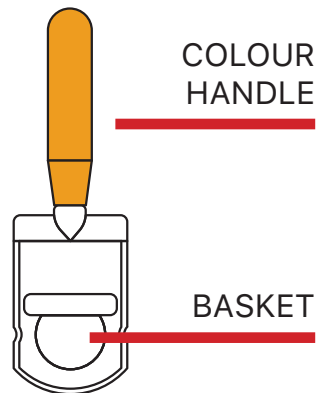

STEP 1


Put **1 teaspoon** of Espresso Machine Cleaner in container and add **hot water** and **mix**. Add enough hot water to **cover the basket**.

**Same steps apply to cleaning the Tutto Single Handle*

CLEANING THE HANDLES

STEP 2

Place Tutto Handle inside container of cleaner solution

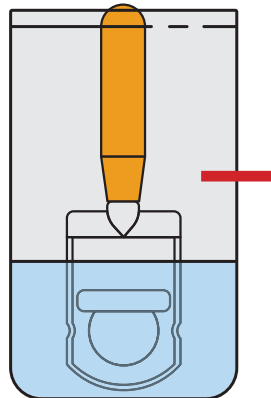

STEP 3

Make sure the solution is **not touching** the coloured part of the handle.
(Can cause colour to fade).

STEP 4

Leave handle in solution to **soak overnight**.

STEP 5

RINSE THOROUGHLY BEFORE USE

**Same steps apply to cleaning the Tutto Single Handle*

TROUBLESHOOTING

THE GRINDER

The grinder on your Tutto can sometimes build up with ground coffee which can stop it from working properly. If the grinder sounds like it is struggling to move, start by turning the grinder back to setting [1]. Press the grind button and let it run 3 times to allow any built up coffee grounds to be pushed out.

Now with the grinder running again, turn the grinder back to being finer one step at a time until you have reached your desired grind setting.

SETTING THE GRINDER

When setting the grind coarseness we find that setting [4] works the best. This can sometimes change depending on what type of beans you are using.

Set your grind time to be from 6 - 9 seconds.

If there is too much coffee in the basket the tamper may not be engaged properly. **Do not force the tamper down.** Set the Small Cup Volume to 30 and the Large Cup Volume to 80.

TROUBLESHOOTING

UNBLOCK STEAM WAND

If the steam wand is not working and appears to be blocked. Turn off the machine, wait until the steam wand and nozzle to cool down. Now you can unscrew the nozzle and soak in hot water for 20-30 minutes.

After 20-30 minutes take the nozzle out of the water, and use a pin or paper clip to unblock the nozzle holes. Now that the nozzle is unblocked, you can screw back onto the steam wand and hand tighten. You can now turn the machine on.

ADD WATER ERROR

When the 'add water message' appears on screen, it could be that the coffee grinds are too fine. The water cannot run through the coffee when coffee is too fine. Empty coffee grounds from handle basket. Adjust grind to a coarser setting and try again.

CAFELLO TUTTO^{V2}